



## OPERATOR'S MANUAL

# model 9600 backhoe

**THIS MANUAL INCLUDES:**

**SERIAL NO. 1001 and later**

### **W800 BASIC BACKHOE**

**W720 - HEAVY DUTY BUCKET, 14"**

**W721 - HEAVY DUTY BUCKET, 18"**

**W722 - HEAVY DUTY BUCKET, 24"**

**W723 - HEAVY DUTY BUCKET, 36"**

**W724 - HEAVY DUTY BUCKET, 40"**

**W604 STREET PAD KIT**

**W702 PTO PUMP KIT**

**W801 THREE POINT MOUNT KIT**



**THIS SAFETY ALERT SYMBOL IDENTIFIES  
IMPORTANT SAFETY MESSAGES IN THIS MANUAL**



**AMERQUIP CORPORATION**

1015 CALUMET AVENUE  
KIEL, WISCONSIN 53042  
920-894-7063



---

---

# MODEL 9600 BACKHOE Operator's Manual

---

---

## TABLE OF CONTENTS

SECTION	PAGE	SECTION	PAGE
Safety.....	4	Removal/Storage.....	16
Safety Decals.....	6	Hydraulic Trouble Shooting.....	17
Federal Laws and Regulations.....	7	Valve Repair.....	19
General Operation.....	8	Assembly.....	20
Controls.....	8	Attaching Kit Instructions.....	23
Operating the Backhoe.....	9	Hydraulic Hook-Up.....	24
Transporting the Backhoe.....	10	Torque Chart.....	27
Placing the Stabilizers.....	11	PTO Pump and Reservoir.....	28
Filling the Bucket.....	12	Parts Lists/Diagrams.....	29
Trenching.....	12	General Specifications.....	44
Backfilling.....	13	Control Valve Section.....	46
Service.....	14		
Beginning of Season.....	14		
Hydraulic System.....	14		
Lubrication.....	15		

---

---

## UNDERSTAND SIGNAL WORDS

**DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations.

**WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

---

---

# IMPORTANT SAFETY PRECAUTIONS

**This symbol is used to call attention to safety precautions that should be followed by the operator to avoid accidents. When you see this symbol, carefully read the message that follows and heed its advice. Failure to comply with safety precautions could result in serious bodily injury.**



In addition to the design and configuration of equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence and proper training of personnel in the operation, transport, maintenance and storage of equipment. Lack of attention to safety can result in accident, personal injury, reduction of efficiency and worst of all—loss of life. Watch for safety hazards and correct deficiencies promptly. Use the following safety precautions as a general guide to safe operations when using this machine. Additional safety precautions are used throughout this manual for specific operating and maintenance procedures. Read this manual and review the safety precautions often until you know the limitations.

## THE TRACTOR AND/OR LOADER (IF EQUIPPED)

1. Read the tractor and/or loader operator's manual to learn how to operate your tractor and/or loader safely. Failure to do so could result in serious injury or death and equipment damage.
2. It is recommended that tractor be equipped with Rollover Protective System (ROPS) and a seat belt be used for all loader operations.
3. Add wheel ballast or front weight for stability.
4. Move wheels to the tractor manufacturer's widest recommended settings to increase stability.
5. For better stability, use tractor with wide front axle rather than tricycle front wheels.
6. Move and turn the tractor at low speeds.
7. Stop tractor engine, place transmission in park (or neutral), engage parking brake, lower loader arms to ground, cycle all hydraulic controls to relieve pressure, allow machine moving parts to stop, remove ignition key to prevent unauthorized person from starting engine before dismounting tractor or servicing, repairing, or making adjustments to the equipment.
8. Wear personal protective equipment (PPE), such as, but not limited to, protection for eyes, ears, lungs, head, hands and feet when operating, servicing, or repairing equipment. Avoid wearing loose clothing or jewelry that may catch and entangle on equipment moving parts.

## THE BACKHOE

1. DO NOT operate the backhoe unless it is rigidly attached to the tractor.
2. KNOW your controls. Read this operator's manual and the manual provided with your tractor. Learn how to stop the tractor, the engine and the backhoe quickly in an emergency.
3. PROVIDE adequate front end weight to counter-balance the backhoe at all times. 20% of the total tractor, loader and backhoe weight must be on the tractor front axle. If unsure of weight distribution, determine at a weight scale. Total vehicle weight, including backhoe and counter weights, must not exceed the ROPS certificate for gross vehicle weight.
4. BE SURE the area is clear of overhead or underground utilities or other hazards.
5. POSITION a barricade around the work area.
6. KEEP all bystanders a safe distance away.
7. DO NOT attempt to enter operator's platform of backhoe by using the stabilizers as a step.
8. OPERATE from the backhoe operator's seat only.
9. ALLOW only one person to operate the backhoe at any time.
10. DISENGAGE safety locks as shown in Figures 1 & 3 before attempting to operate the backhoe.
11. NEVER dig with the backhoe unless the stabilizers are properly set.

---

## SAFETY PRECAUTIONS CONTINUED

12. **DO NOT** dig under stabilizers or tractor backhoe. Soft ground or sandy soil can cause cave-ins.
13. **KEEP BUCKET** away from the stabilizer area to avoid possible stabilizer damage.
14. **ALWAYS** swing bucket uphill to dump when on a hillside and keep loaded bucket low.
15. **SET BRAKES** and block wheels when operating on hills and banks to avoid dangerous runaway.
16. **WATCH** for overhead wires. **DO NOT** touch wires with any part of the backhoe.
17. **NEVER** allow a person to work under a raised bucket.
18. **NEVER** lift a person with the backhoe.
19. **DO NOT** use the backhoe as a battering ram. Use the backhoe only for digging.
20. **ALWAYS** lower the backhoe bucket and stabilizers to the ground, shut off engine, and apply the parking brake before getting off unit, or when not digging.
21. **NEVER** leave the tractor unattended with the engine running.
22. **DO NOT** attempt to raise the tractor off the ground or move the tractor forward or backward using the backhoe dipperstick or bucket.

### TRANSPORTATION

1. **ALWAYS** engage safety locks before transporting backhoe. See Figures 1 & 3.
2. **DO NOT** drive the tractor near the edge of a ditch or excavation.
3. **ALWAYS** use accessory lights and devices when transporting on a road or highway to warn operators of other vehicles. Check your local government regulations.
4. **BE SURE** the SMV emblem is visible to the rear.

### ADJUSTMENTS AND INSPECTION

1. **CHECK** pins that attach backhoe to tractor and all pivot pins for tightness several times daily. Replace any parts that are bent, broken or missing.
2. **ALWAYS** engage safety locks before servicing backhoe. See Figures 1 & 3.
3. **DO NOT** oil, grease, or adjust the backhoe while it is in motion. For greasing, see Service section for details.
4. **DO NOT** change any backhoe relief valve settings. They are factory set for best backhoe performance and safety.
5. **PROTECT YOUR EYES - WEAR SAFETY GLASSES.**
6. **GUARD AGAINST INJURY** when driving connecting pins or performing any repair in which particles can chip from work piece or striking tool.
7. **DO NOT** remove any guards on backhoe or tractor.

### AVOID HIGH-PRESSURE FLUIDS




ESCAPING fluid under pressure can have sufficient force to penetrate the skin and cause serious injury. Be sure to stop engine and relieve all pressure before disconnecting lines. Be sure all connections are tight and that lines, pipes, and hoses are not damaged before applying pressure to the system. Fluid escaping from a very small hole can be almost invisible. Use a piece of cardboard or wood - not your hands - to search for suspected leaks.


SEE A DOCTOR at once if injured by escaping fluid. Serious infection or gangrene can develop if proper medical treatment is not administered immediately.

# SAFETY DECALS


The safety of the operator was a prime consideration in the design of the backhoe. Proper shielding, convenient controls, simple adjustments and other safety features have been built into this implement. The following decals are located on the backhoe. Keep decals clean and replace them immediately if they are missing. Contact your dealer or Amerequip for replacements.

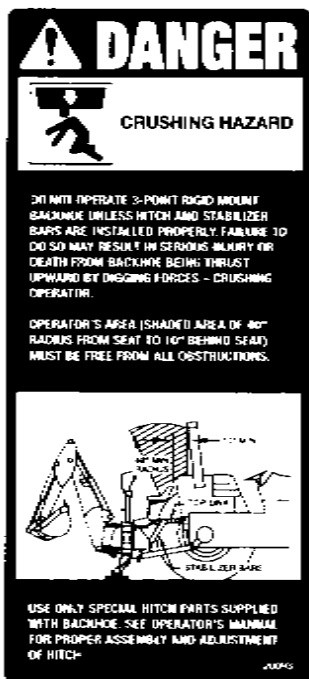

Location: Left Side of Control Tower

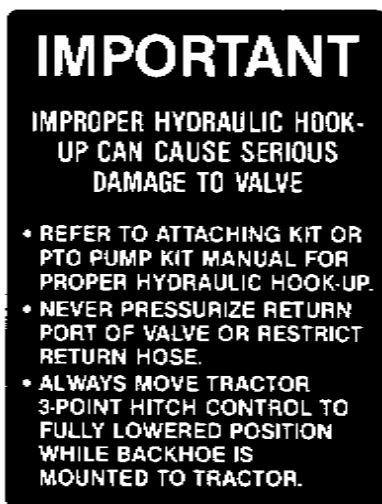


Location: Left Side Toe Shield Area

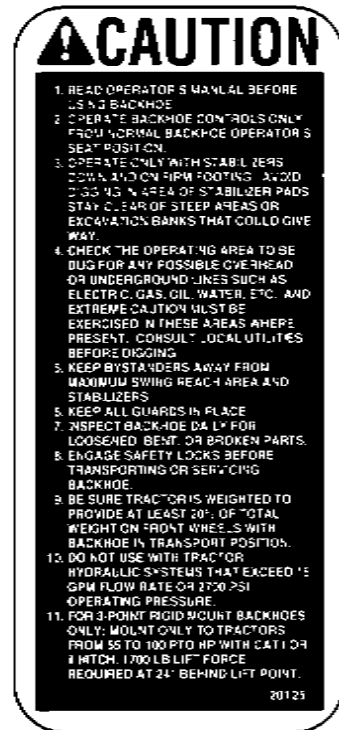

Location: Right Side of Control Tower



Location: Right Side of Control Tower

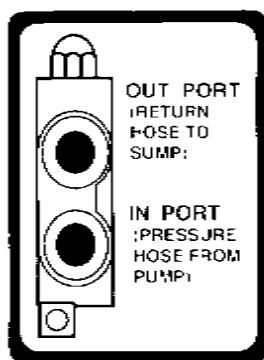

Location: Toe Shield Area

---

# IMPORTANT FEDERAL LAWS AND REGULATIONS\* CONCERNING EMPLOYERS, EMPLOYEES AND OPERATIONS.

\*(This section is intended to explain in broad terms the concept and effect of the following federal laws and regulations. It is not intended as a legal interpretation of the laws and should not be considered as such).

U.S. Public Law 91-596 (The Williams-Steiger Occupational and Health Act of 1970) OSHA

## **This Act Seeks:**

"...to assure so far as possible every working man and woman in the nation safe and healthful working conditions and to preserve our human resources..."

## DUTIES

Sec. 5 (a) Each employer—

- (1) shall furnish to each of his employees employment and a place of employment which are free from recognized hazards that are causing or are likely to cause death or serious physical harm to his employees;
- (2) shall comply with occupational safety and health standards promulgated under this Act.
  - (b) Each employee shall comply with occupational safety and health standards and all rules, regulations and orders issued pursuant to this Act which are applicable to his own actions and conduct.

## **OSHA Regulations**

Current OSHA regulations state in part: "At the time of initial assignment and at least annually thereafter, the employer shall instruct every employee in the safe operation and servicing of all equipment with which the employee is, or will be involved." These will include (but are not limited to) instructions to:

Keep all guards in place when the machine is in operation;

Permit no riders on equipment;

Stop engine, disconnect the power source, and wait for all machine movement to stop before servicing, adjusting, cleaning or unclogging the equipment, except where the machine must be running to be properly serviced or maintained, in which case the employer shall instruct employees as to all steps and procedures which are necessary to safely service or maintain the equipment.

Make sure everyone is clear of machinery before starting the engine, engaging power, or operating the machine.

## **EMPLOYEE TRACTOR OPERATING INSTRUCTIONS:**

1. Securely fasten your seat belt if the tractor has a ROPS.
2. Where possible, avoid operating the tractor near ditches, embankments, and holes.
3. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.
4. Stay off slopes too steep for safe operation.
5. Watch where you are going, especially at row ends, on roads, and around trees.
6. Do not permit others to ride.
7. Operate the tractor smoothly - no jerky turns, starts, or stops.
8. Hitch only to the drawbar and hitch points recommended by tractor manufacturers.
9. When tractor is stopped, set brakes securely and use park lock if available.

## **Child Labor Under 16 Years Old**

Some regulations specify that no one under the age of 16 may operate power machinery. It is your responsibility to know what these regulations are in your own area or situation. (Refer to U.S. Dept. of Labor, Employment Standard Administration, Wage & Home Division, Child Labor Bulletin #102.)

# GENERAL OPERATION

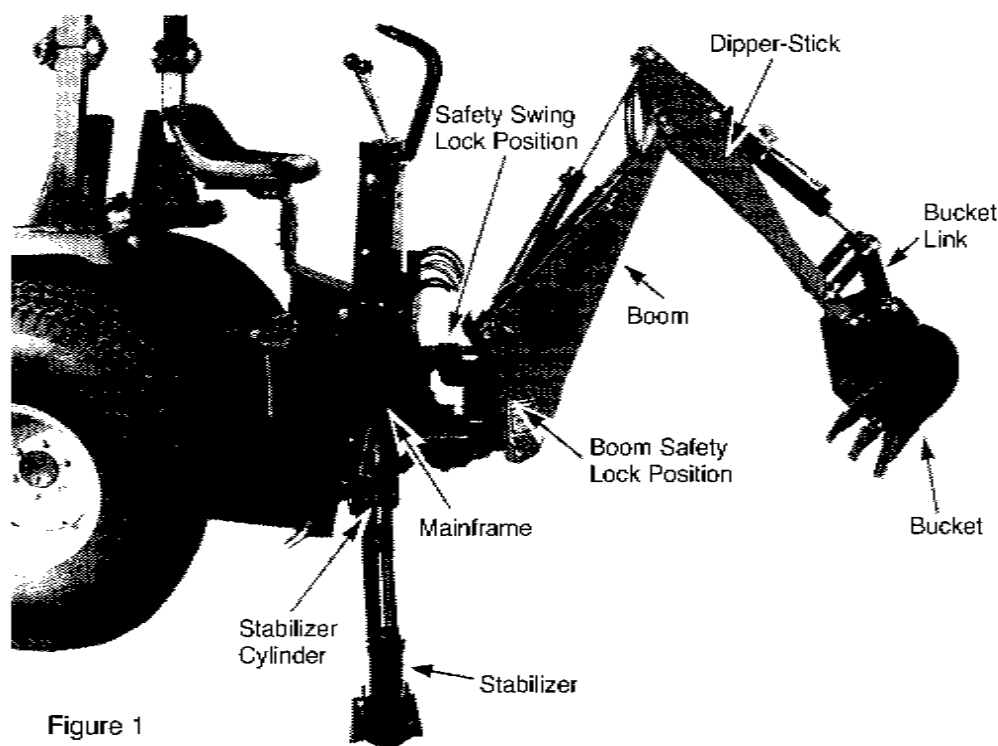


Figure 1

## CAUTION

To avoid the possible injury, observe the following safety rules **BEFORE OPERATING** the backhoe:


1. **BE SURE** area is clear of underground utilities or other hazards.
2. **POSITION** barricade around work area.
3. **PROVIDE** adequate front end weight to counter-balance tractor at all times. 20% of the total tractor, loader and backhoe weight must be on the tractor front axle.
4. **Keep bystanders** a safe distance away.

**DIRECTIONS:** The terms right, left, front and back shall be determined from the position of the operator when seated in the operating position on the backhoe.

## ENGINE SPEED

The speed at which the backhoe operates is partially dependent on engine RPM. Use a moderate engine speed to start and increase it as your experience permits. Refer to "DIMENSIONS AND SPECIFICATIONS" on Page 44 for hydraulic flow volume requirements. When powering from tractor systems with higher output, reduce engine RPM to obtain acceptable backhoe operating speed.

Figure 2 Control Handles

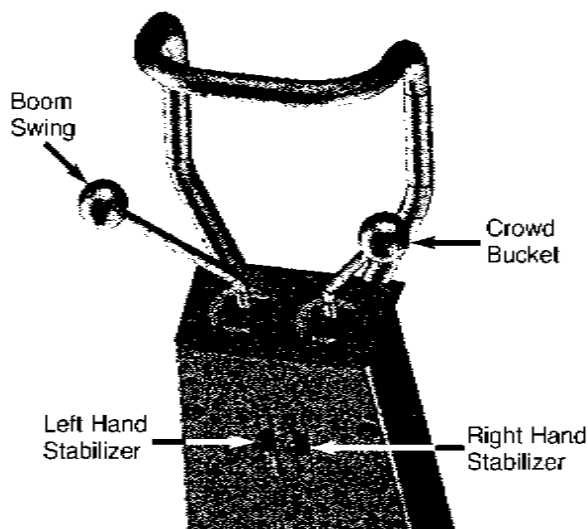

## CONTROLS

The backhoe has two major control levers plus the stabilizer control levers. These controls are located on the control panel directly ahead of the operator. See Figure 2. The following is a list of the controls, with the function of each, reading from left to right.

**1. Boom/Swing:** Push lever forward, the boom moves down, away from the operator. Pull lever back, the boom moves up, toward the operator.

The Boom/Swing Control Lever has an added "float" function. A detent or stop should be felt when the lever is pushed forward to move the boom down. Pushing the lever forward more will overcome the detent and cause the boom to float, or move down or up freely, depending on the forces acting on it. When the lever is released it should return to the center, neutral position.

Move lever to the left, the backhoe swings to the left. Move lever to the right, the backhoe swings to the right.


By moving the lever to one of the intermediate positions, the boom can be swung left or right at the same it is being raised or lowered, performing the two operations simultaneously.

**SWING LEFT AND LOWER** the boom by moving the control lever forward and to the left.

**SWING LEFT AND RAISE** the boom by moving the control lever back and to the left.



Figure 3  
Safety Locks

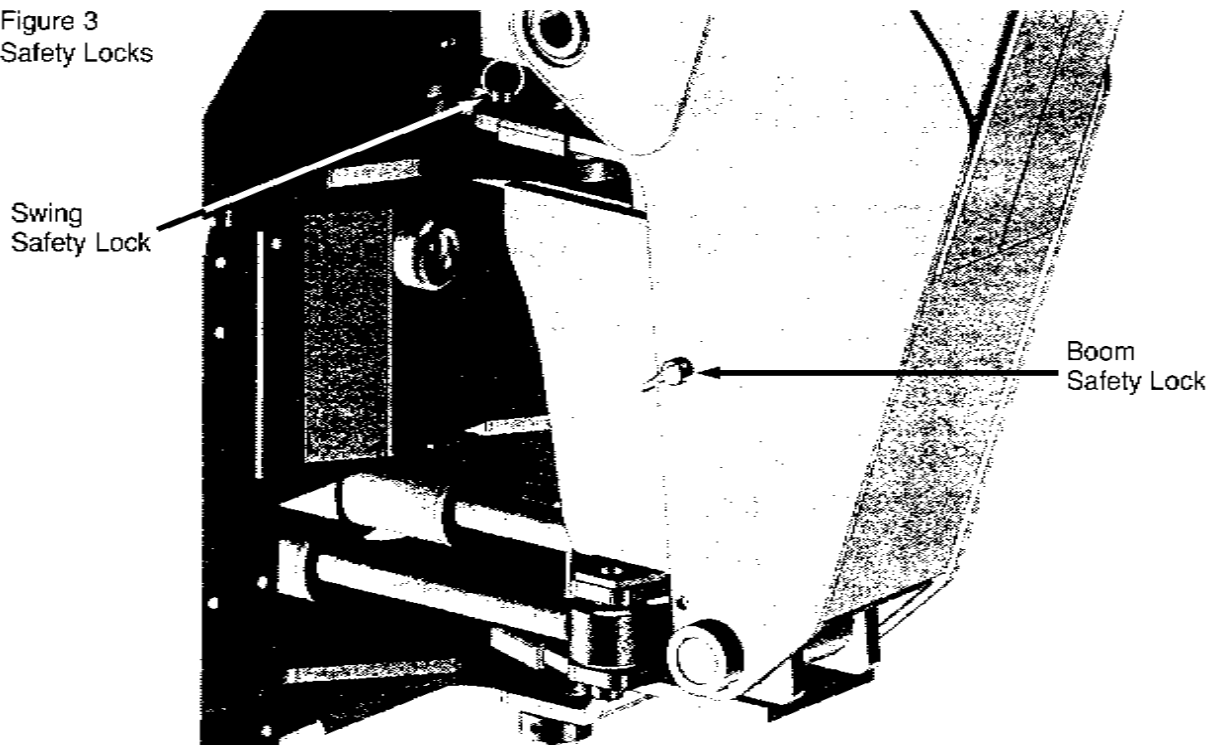

SWING RIGHT AND LOWER the boom by moving the lever forward and to the right.

SWING RIGHT AND RAISE the boom by moving the lever back and to the right.

**2. Left Hand Stabilizer:** Push lever downward, the LH stabilizer lowers. Pull lever upward, the LH stabilizer raises.

**3. Right Hand Stabilizer:** Push lever downward, the RH stabilizer lowers. Pull lever upward, the RH stabilizer raises.

**4. Crowd/Bucket:** Push lever forward, the dipperstick moves out, away from the operator. Pull lever back, the dipperstick moves in, toward the operator.

Move lever to left, the bucket curls in. Move lever to right, the bucket extends out.

By moving the lever to one of the intermediate positions, the dipperstick can be extended or retracted at the same time the bucket is being loaded or dumped.

EXTEND AND LOAD the bucket by moving the lever forward and to the left.

RETRACT AND LOAD the bucket by moving the lever back and to the left.

EXTEND AND DUMP the bucket by moving the lever forward and to the right.

RETRACT AND DUMP the bucket by moving the lever back and to the right.

The two operations of the boom lever, combined with the two operations performed by the bucket and dipperstick control lever, provide four simultaneous oper-

ations from the two levers, keeping cycle time to a minimum.

In general, the direction of movement of a control lever corresponds to the movement of the operating member.

## OPERATING THE BACKHOE

### ⚠ CAUTION ⚠

To avoid possible injury, observe the following safety rules **WHEN OPERATING** the backhoe.

**1. DISENGAGE** safety locks as shown in Figure 3 before attempting to operate the backhoe. Store lockpins in holes provided in valve bumper plate.

**2. OPERATE** from the backhoe operator's seat only.

**3. LOWER** the stabilizers until the rear of the tractor is totally supported by them. **NOTE:** Rear tires should not come up off of the ground. See diagram on Page 11.


**4. DO NOT** dig near the stabilizers.

**5. DO NOT** touch overhead wires with any part of the backhoe.

**6. DO NOT** attempt to raise the tractor off the ground or move the tractor forward or backward using the backhoe dipperstick or bucket.

**7. DO NOT** lose stability by swinging the bucket downhill when positioned on a slope.

**8. DO NOT** lower the backhoe boom using the "float" function. It will freefall, and could result in injury to bystanders or damage to the backhoe.

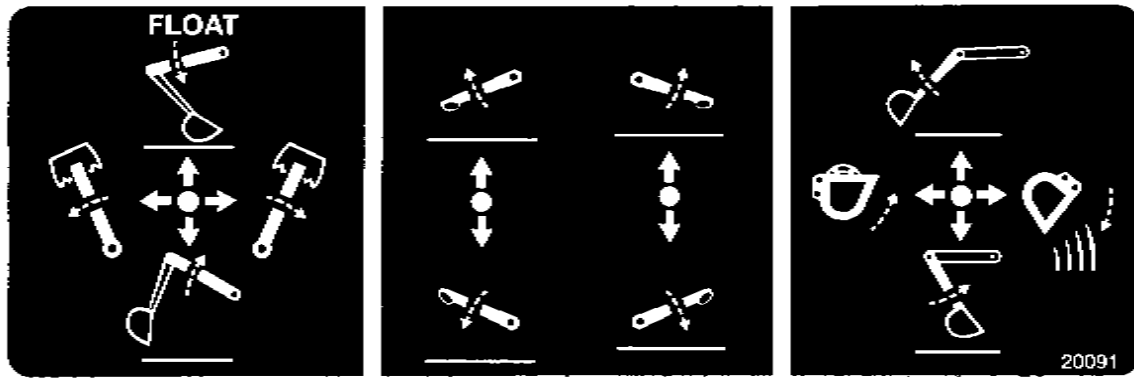

Location: Back Of Control Panel

It is not difficult to become an efficient operator. Control lever operating decal is located on back of the control panel. Study this decal. It will assist you in becoming familiar with the controls.

Smooth, light handling of the controls will result in the most efficient backhoe operation.

Operate the backhoe control levers to become familiar with their speed and movements. The engine speed and the size of the hydraulic system will determine the speed of cylinder operation. When powering from tractor systems with higher output than required, reduce engine RPM to obtain acceptable backhoe operating speed.

Swing the boom several times to practice controlling the speed of swing. Do not operate the swing more than 45° each way for the first few times, then gradually increase the arc.

**IMPORTANT:** To avoid damage to the backhoe, do not slam swing unit into the rubber bumpers.

The boom "float" function may be used during digging to eliminate down pressure when cleaning the bottom of a trench. The primary purpose of the boom "float" function is to protect the operator from serious injury in the event that the backhoe or tractor hitch would fail.

Best results are obtained by digging near the center of the swing arc so material can be dumped on either side.

As the operator becomes more familiar with the operation of the backhoe, it will be common practice to operate two controls at one time. For example; with the bucket extended and the dipperstick extended, the lift control and crowd control can be operated together to bring the bucket toward the operator with down pressure on it. As the dipperstick approaches the operator, the crowd and bucket controls can be operated to close the bucket and trap the material. At the end of the stroke, the lift and crowd controls are operated to move the load up and away from the operator to save time in clearing the excavation.

This dual operation of controls will speed and simplify the digging operation. Normally the two or more movements will not be equal or even simultaneous, but as the pressure within the cylinders changes, and the resistance on an operating member of the hoe lessens, it will begin to move. It is balancing the force of one member against the other.

*NOTE:* Actuating the bucket is the key to powerful digging. Operating the crowd and bucket controls simultaneously will insure a full bucket and prevent waste motion and time.

### TRANSPORTING THE BACKHOE:

**IMPORTANT:** To prevent serious damage to the tractor, read and follow the instructions on the following decal:

## IMPORTANT

**IMPROPER TRANSPORTING METHODS CAN CAUSE SERIOUS DAMAGE TO TRACTOR.**

- ENGAGE BOTH SAFETY LOCKS WHEN TRANSPORTING BACKHOE.
- TRAVEL SLOWLY OVER ROUGH TERRAIN.
- WHEN TRANSPORTING ON TRUCK OR TRAILER, LOWER BACKHOE BOOM SO BUCKET RESTS FIRMLY ON BED. APPLY RESTRAINTS TO TRACTOR, NOT TO BACKHOE OR BACKHOE ATTACHING KIT.

Location: Right Side of Boom

**⚠ CAUTION ⚠**

To avoid possible injury, observe the following safety rules when transporting the backhoe:

1. ALWAYS engage safety locks as shown on Figs. 1 and 3 when transporting backhoe.
2. TRAVEL SLOWLY over rough terrain, on hillsides, and around curves to prevent tipping.
3. DO NOT drive the tractor near the edge of a ditch or excavation.

4. USE accessory lights and SMV emblem when traveling on highways.

Before leaving backhoe operator's seat, position the backhoe for transport by raising boom, crowding dipperstick in, swinging to center and raising the stabilizers. ALWAYS engage safety locks as shown in Figs. 1 and 3 when transporting.

When transporting for long distances, periodically examine the backhoe and raise stabilizers and bucket back up to the full transport height. It is normal for the backhoe to slowly settle while being transported.

Figure 4


## WHEN TRANSPORTING

**Note:**

Bucket should be lowered to bed when possible.

**⚠ CAUTION ⚠**


**DO NOT CHAIN BACKHOE DOWN IN ORDER TO SECURE CRAWLER TO TRAILER**

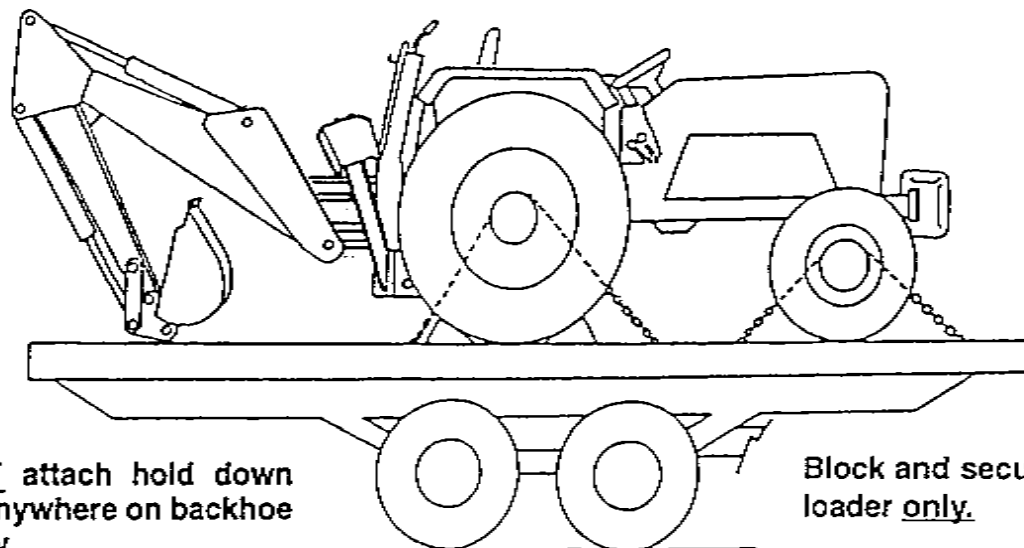

**DO NOT** attach hold down chains anywhere on backhoe assembly.

Block and secure loader only.

## PLACING THE STABILIZERS

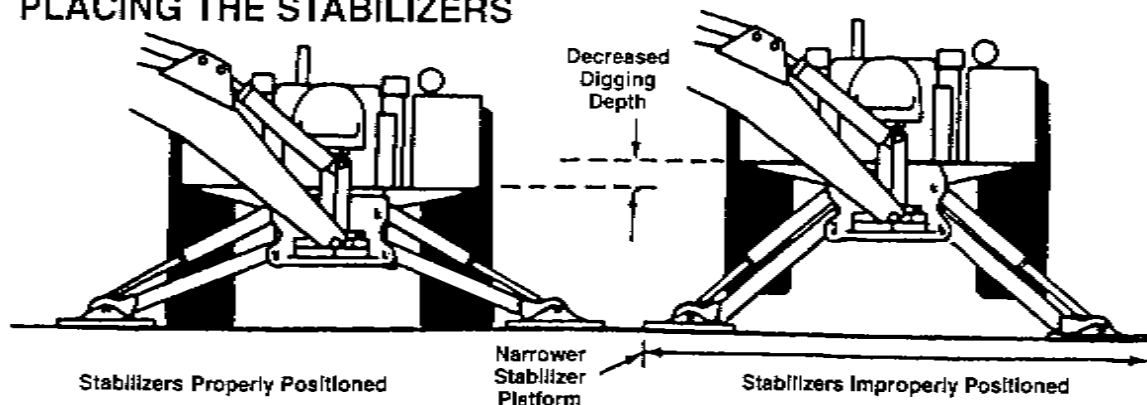


Set the stabilizers to remove weight from the rear wheels. The wheels are to remain touching the ground as this provides for the widest stabilizer stance and the lowest center of gravity. Raising the wheels off the ground will not only reduce stability and digging depth, but will impair performance and impose unnecessary stress on the unit.


## General Operations

### FILLING THE BUCKET


Control the bucket attitude throughout the digging cycle to keep teeth at the proper angle for best penetration. This will minimize dragging and scraping the bucket through the ground.

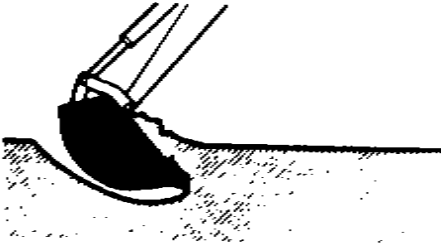

When digging in hard-packed soil, bucket penetration can be increased by applying down pressure with the boom while crowding in and curling the bucket. If the crowd action "stalls" it may be necessary to apply lift occasionally during the digging cycle to correct the bucket depth.

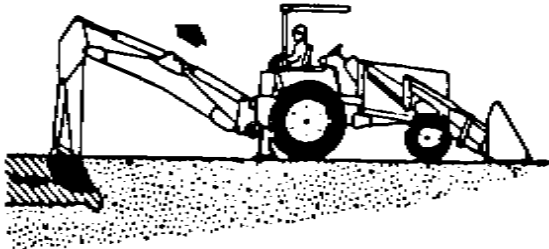


To obtain a cleaner trench and avoid the buildup of material directly in front of the backhoe, crowd out and completely curl the bucket while starting to lift it from the excavation. In this way, excess material will fall back into the excavation.

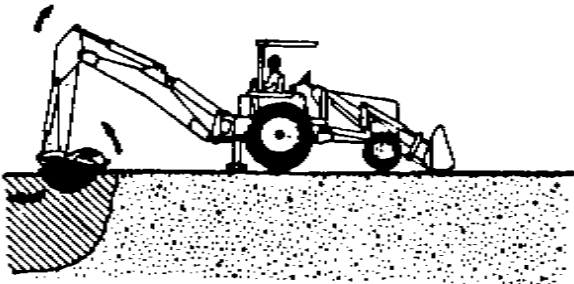

### DUMPING THE BUCKET

To dump the bucket at the end of the digging cycle, lift the bucket clear of the trench while crowding it out and swinging it to the spoil pile.

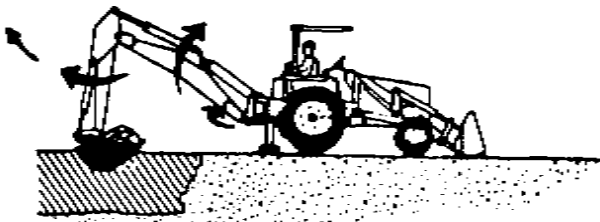


As the pile is approached, dump the bucket. When the bucket is empty, the dipperstick and bucket are in position to resume digging upon return to the trench.


**IMPORTANT:** Avoid constant jarring or hammering-type contact between the spoil pile and the loaded bucket, as this may cause premature wear to the backhoe pins and bushings.

### TRENCHING BETWEEN A BUILDING AND OPEN EXCAVATIONS


Start the trench at the building. Trench out halfway to the excavation. Then start trenching from the excavation to the first trench. Dig toward the first trench until there is just enough room to move the unit out between the two trenches.

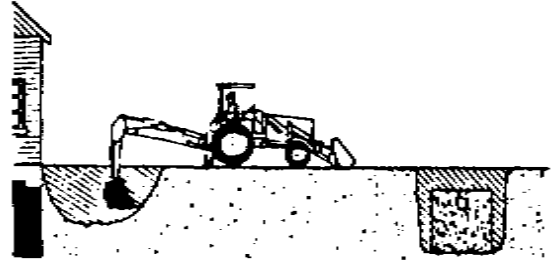

Position the unit so the backhoe swing post is over the centerline of the trench connection. Dig with the backhoe at extreme swing positions, and in as close to the stabilizers as possible. Pile the spoil on the opposite side of the trenches.

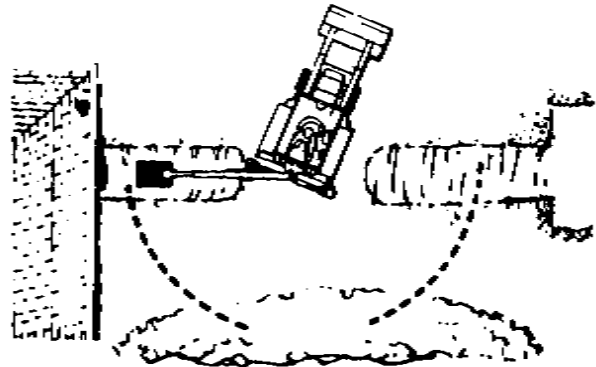


Position the unit forward with the lift and crowd levers so the two trenches can be connected. Pile the spoil on the opposite side of the trench.

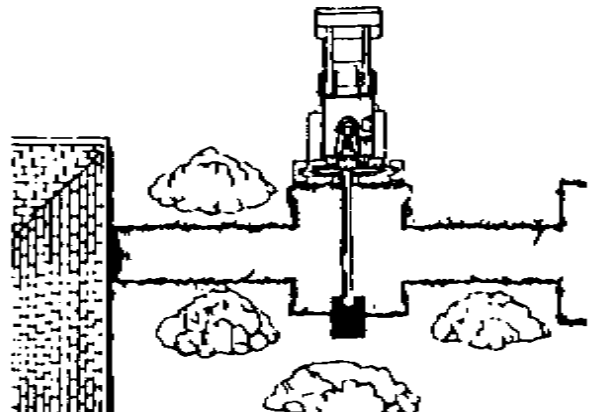


## General Operations

### SIDE SLOPE EXCAVATING OR TRENCHING

Dig with the backhoe uphill whenever possible.

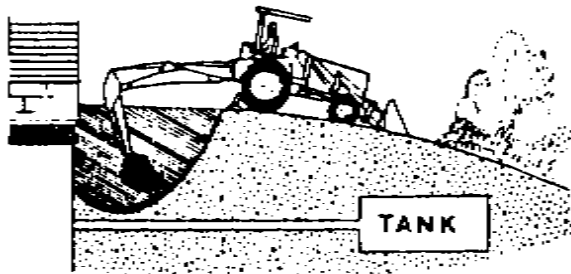


Level the backhoe on slopes with the stabilizers to dig plumb trenches, or use the backhoe or loader to cut a level slot for the uphill wheel and stabilizer. Pile the spoil from the slot on the low side.

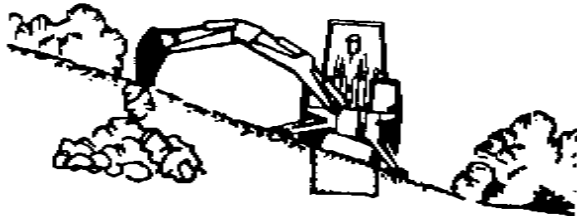

When on the side of a steep slope, cut a level surface along the uphill side of the trench with the loader.

Pile the spoil of the cut downhill. When digging, pile the spoil of the trench uphill.

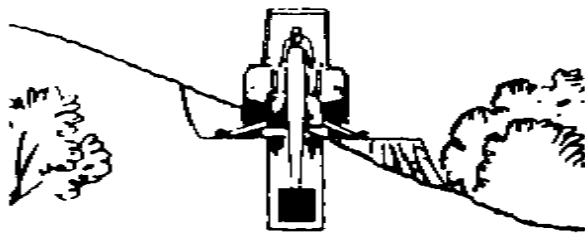


Dig field trenched progressively. As soon as one trench is completed, have the workmen lay the tile. Start the next trench, using the spoil to fill the previous trench.




## MISCELLANEOUS

When finishing straight walls or bellholes in sandy soil, use a platform under the rear tires and the stabilizers. The platform distributes the load over a larger area and lessens the possibility of a cave-in. The platform also tends to keep the unit from creeping rearward if hard digging is encountered.

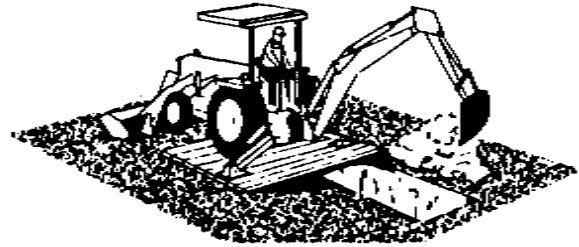


### FINISHING STRAIGHT WALLS

Finish the far wall by crowding out while forcing the bucket down from the boom. Actuate the bucket (curl out) to keep the bottom of the bucket vertical.

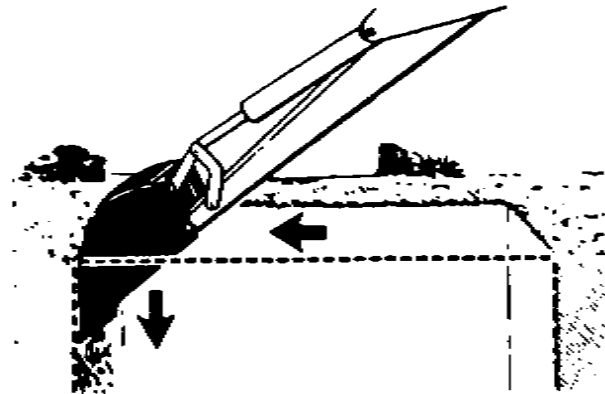

To finish the near wall, lift up and crowd in. Keep the edges of the bucket horizontal.

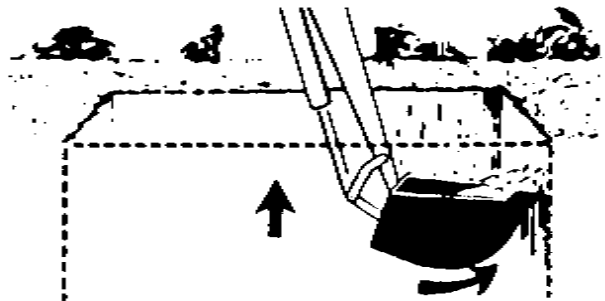

### BACKFILLING

Backfill by lifting the bucket over the spoil pile and then crowding in. Pull both the crowd and lift levers for smooth, even backfilling.

**IMPORTANT:** Do not backfill by using the swing circuit and dragging the bucket sideways. Doing so can cause damage to the dipperstick boom swing cylinders or mainframe.

# SERVICE

## ⚠ CAUTION ⚠

To avoid possible injury, observe the following safety rules **WHEN SERVICING** the backhoe:

1. ENGAGE safety locks as shown in Figures 1 & 3 before servicing the backhoe.
2. DO NOT oil, grease or adjust the backhoe while it is in motion.
3. DO NOT change any backhoe relief valve settings. They are factory set for best performance and safety.



4. ESCAPING FLUID under pressure can have sufficient force to penetrate the skin and cause serious injury. Be sure to relieve all pressure before disconnecting lines. Be sure all connections are tight and that lines, pipes and hoses are not damaged before applying pressure to the system.

5. FLUID ESCAPING from a very small hole can be almost invisible. Use a small piece of cardboard or wood - **not your hands** - to search for suspected leaks.

6. SEE A DOCTOR AT ONCE if injured by escaping fluid. Serious infection or gangrene can develop if proper medical treatment is not administered immediately.

7. PROTECT YOUR EYES - Wear safety glasses. Guard against injury when driving connecting pins or performing any repair in which particles can chip from work piece or striking tool.

## BEGINNING OF SEASON

Remove all protective covering.

Check hydraulic hoses for deterioration and replace, if necessary.

Lubricate all grease fittings and oil handle linkage.

Check hydraulic system for loss of fluid and, if necessary, fill to proper level.

Tighten all loose bolts, nuts and setscrews.

Inspect bucket teeth and, if necessary, sharpen or replace them.

Operate the backhoe slowly for a short time before placing the unit under full load.

## HYDRAULIC SYSTEM

### Bleeding Backhoe Hydraulic System

If the hydraulic hoses have been disconnected from the backhoe or tractor, all trapped air must be removed after the hoses are connected. Start tractor engine and operate backhoe through all movements fully, several times, to purge the system of air.

### Hydraulic System Hoses

Oil leaks in the pressure side of the system can be located by carefully inspecting the external area of the hoses and fittings.

Check the return side of the system for leaks by examining the oil in the reservoir. If air is being drawn into the system, the oil will contain air bubbles and appear to foam.

When tightening connections, always use two wrenches.

**IMPORTANT:** Do not over-tighten fittings. Make them just tight enough to eliminate leaks.

**NEVER** use teflon tape on pipe thread fittings. Always use a paste-type sealer.

Hoses on any backhoe are very severely worked and will fail in time. Examine them regularly and replace any that show signs of failure. Pay careful attention to the routing of hoses so they can move fully and freely without kinking, and cannot be pinched or cut by any part of the backhoe.

### Hydraulic System Reservoir

On PTO pump contained systems, maintain the reservoir oil at the proper level by looking at the dipstick. The dipstick/breather cap is located directly behind the right hand foot pad on the backhoe. When checking oil level, the backhoe should be extended to full reach with the bucket rolled back and resting on the ground. All cylinders are retracted except for the boom cylinder. Do not overfill; oil may be forced out of the breather cap.

Fill with:

SAE 10W40 engine oil with API "SF/SG" classification in northern climates.


SAE 40W engine oil with API "SF/SG" classification in southern climates.

Change oil every 200 hours or more often if necessary.

If the tractor system supplies the hydraulic power, service according to the tractor instruction manual.

### Bucket Tooth Points

Figure 5

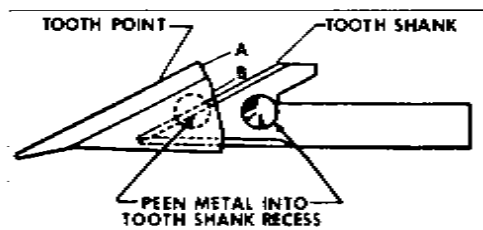

The bucket tooth points are self-sharpening and will require little attention; however, these points on the bucket shanks can be replaced when they become badly worn or broken.

A tooth point can be removed from the welded tooth shank by hammering at "A" (Figure 5) on the tooth point or by driving a chisel at "B", just between the tooth point box section and the tooth shank. Install the new point and anchor it to the shank by peening at the location shown.

If a tooth shank breaks off, becomes damaged or lost so that it cannot hold a tooth point, a new shank should be welded to the bucket in its place.

### Tightening Nuts and Bolts

Periodically, check to be sure all bolts and nuts are tight. See torque chart, page 27.

Check all pivot pins for cotter pins, washers and retainers; if missing, replace.

### LUBRICATION

Economical and efficient operation of the backhoe is dependent upon regular and proper lubrication of all moving parts with a quality lubricant.

All parts provided with grease fittings should be lubri-

cated with a good quality chassis lube type grease. If any grease fittings are missing, replace them immediately. Clean all fittings thoroughly before using grease gun.

Lubricate all grease fittings at least twice daily, once at the beginning of operation and again approximately halfway through the work day.

Lower stabilizers to the ground, extend dipperstick and bucket and lower boom so bucket rests on the ground as shown in Figure 6. Refer to these illustrations for the location of all grease fittings.

*\*IMPORTANT: Before greasing boom to swing frame pivot (\*) shown in Figure 6, raise boom and install boom safety lock pin shown in Figure 1.*

The following locations should be oiled with SAE30 oil:

- A. Stabilizer Pivot Pins
- B. Control Handle Linkage
- C. Seat Bracket Pivot

*IMPORTANT: Avoid excessive greasing. Dirt collects on exposed grease and increases wear greatly. After greasing, wipe off excessive grease from fittings.*


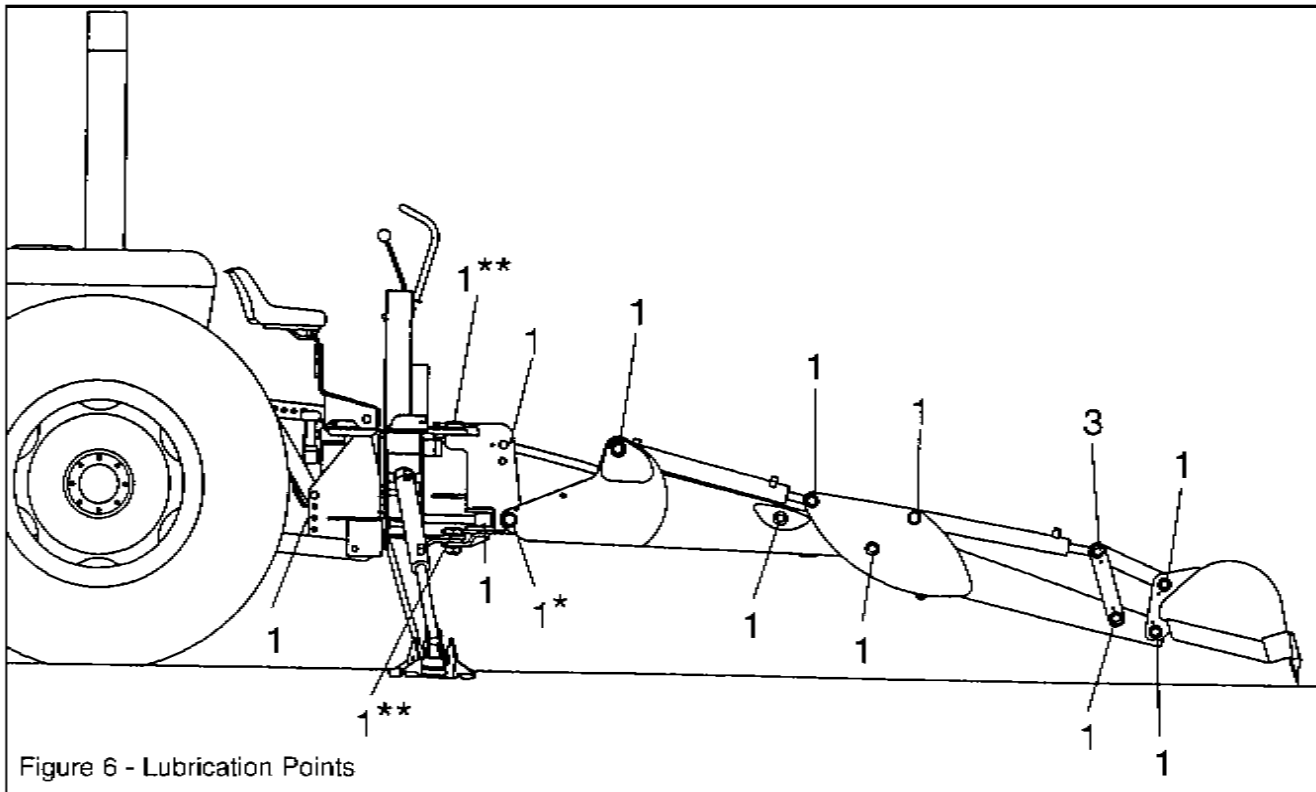


Figure 6 - Lubrication Points

**\*\* On Model 9600 the Upper and Lower Swing Frame Pivot Bearings located in the Mainframe should be replaced every 300 to 400 operating hours.**

## REMOVAL FROM TRACTOR - STORAGE

Figure 7

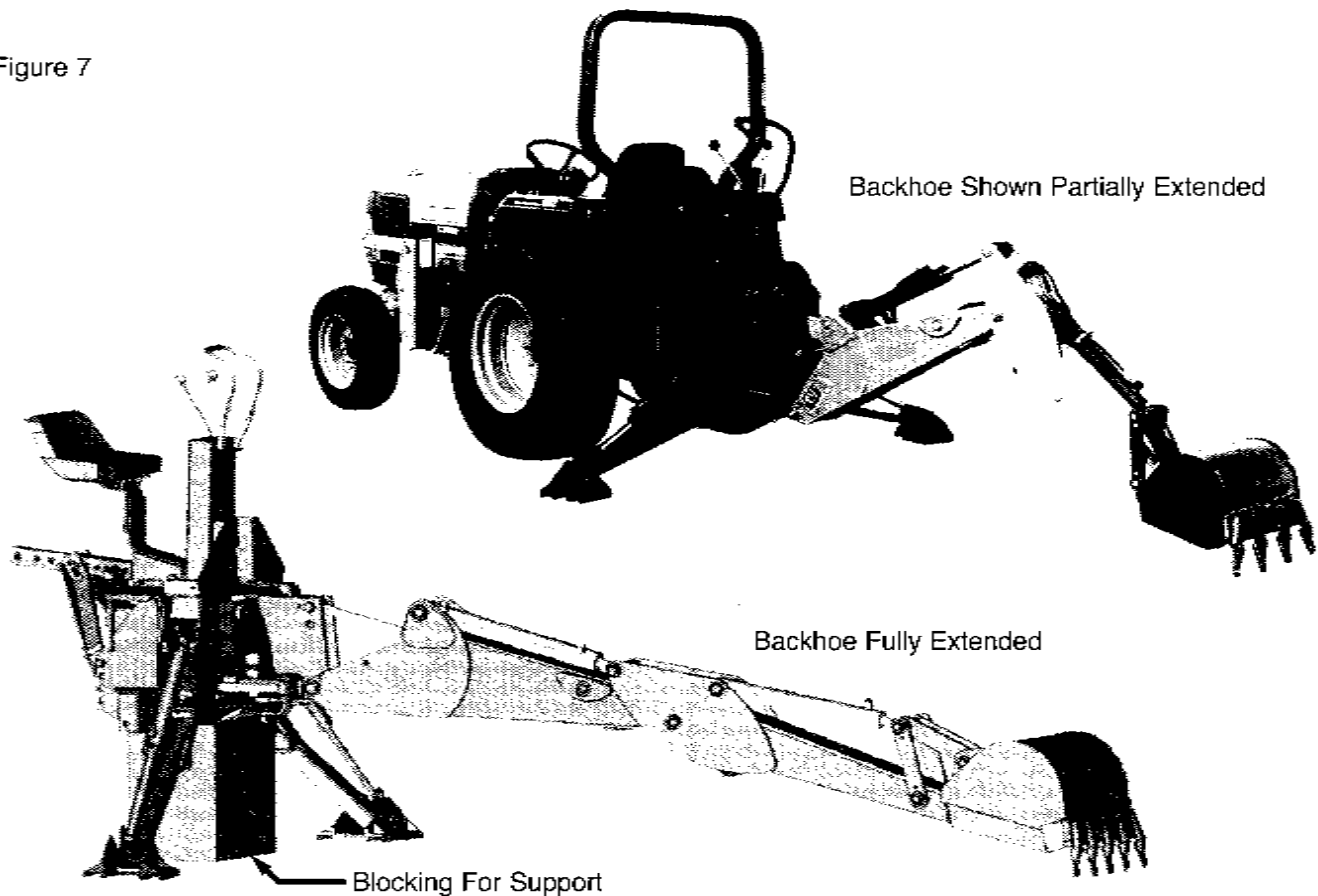

The backhoe is self-assisting during the installation and removal procedures. For removal and storage, follow these steps:

1. Install the swing safety lock pin as shown in Figures 1 and 3.
  2. Stretch out the boom, dipper arm and bucket as shown in Figure 7. Lower the bucket to the ground so that it rests there solidly.
  3. Raise the backhoe operator's seat until it's in the raised position.
  4. Place suitable blocking under the backhoe frame to support it adequately as indicated in Figure 7.
  5. Detach the backhoe from the tractor mechanically only, not hydraulically at this point. Move the tractor a few inches away from the backhoe.
- Note: To facilitate this procedure, the backhoe can still be hydraulically moved, raised or lowered, to release the connection points of the carrying forces.*
6. Gently lower the backhoe onto the blocking as indicated in Figure 7. Leave the stabilizers outstretched and firmly in contact with the ground for added stability.
  7. The hydraulic system can now be disconnected.

### ⚠ CAUTION ⚠

**Make sure tractor PTO is disengaged and engine shut off before disconnecting pump or hydraulic lines.**

- a. On PTO pump self-contained systems the pump should be removed from the PTO shaft. The hydraulic system should always remain complete. No hoses or oil lines should be disconnected during correct removal and storage procedure.
- b. On systems that tap into the tractor for hydraulic power, these lines can be disconnected now.

**IMPORTANT: Be sure to mark the lines to prevent mix-up, during hook-up, when the hoe is again attached to the tractor.**

Be sure to cap the ends of the lines to keep clean while in storage.


8. Now slowly drive the tractor forward and away from the backhoe. Be careful that all parts clear each other during separation.
9. Refer to the installation instructions for the attaching kit. This will help with the removal and reattaching.
10. For long term storage, coat exposed lift, swing and stabilizer cylinder rods with grease.
11. Lubricate all grease fittings and oil stabilizer pivot pins, and complete handle linkage.



## Stabilizer Pads

The backhoe is supplied with flip-over stabilizer pads as standard equipment. They are suitable for most backhoe work and generally are all that is ever required. However, street pad kits are available as options. This kit bolts to the standard pads and increase the versatility of the backhoe. See Figure 8.

Figure 8

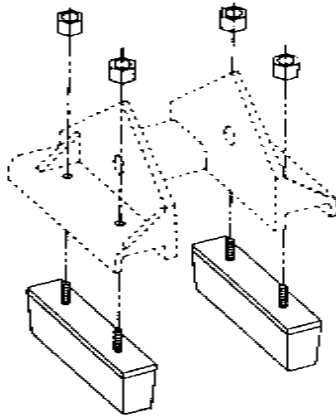

## HYDRAULIC TROUBLE SHOOTING

The trouble shooting material presented in this section is offered as a guide to diagnosing probable causes and remedies for general operational problems. Match your problem with the typical problem examples given, and note the numbers given for the possible cause. These numbers correspond with the possible cause and correction paragraphs that follow.

*NOTE: When using the following chart, if it is decided that an overhaul of components or pressure adjustments are necessary to correct malfunctioning, it is recommended that your dealer make these repairs. He is equipped to do this work.*

### **⚠ WARNING ⚠**



**Escaping hydraulic / diesel fluid under pressure can penetrate the skin causing serious injury.**

**Do not use your hand to check for leaks. Use a piece of cardboard or paper to check for leaks.**

**Stop engine and relieve pressure before connecting or disconnecting lines.**

**Tighten all connections before starting engine or pressurizing lines.**

**If any liquid is injected into the skin, obtain medical attention immediately or gangrene may result.**

### **Problems and Possible Causes**

- A. Machine fails to operate when started initially - 1, 2, 5, 7, 16, 24
- B. Machine loses power after operating satisfactorily initially - 1, 8, 10, 14, 16, 24
- C. Loss of power in lift or crowd cylinder, but other cylinders function properly - 23, 25, 30

### **Problems and Possible Causes, Continued**

- D. Loss of power in any one cylinder including lift and crowd - 8, 9, 10, 11, 12, 13, 23, 25, 26
- E. Loss of power in swing cylinders, but other cylinders functioning properly - 8, 9, 10, 11, 12, 13, 23, 24, 26
- F. Maximum swing action cannot be obtained - 12, 15
- G. Slow operation of machine (lack of power) all cylinders - 1, 4, 6, 14, 16, 24
- H. Spongy or jerking action of cylinders and/or noisy operation - 1, 3, 4, 5
- I. Lift, crowd or bucket cylinders drop under load when control spools shifted from neutral - 28, 30
- J. Load drops or settles - 8, 10, 13, 26, 28
- K. Leaky cylinders - 10, 11, 12, 13
- L. Leaky valve - 8, 16, 17, 29
- M. Sticky valve spool - 17, 20, 21, 22
- N. Unable to push valve spool in - 17, 18, 20, 21, 22
- O. Spring centered spools do not return to neutral - 17, 18, 19, 20, 21, 22

### **Causes and Corrections**

- 1. Low oil supply in reservoir - fill to proper level.
- 2. No oil supply to machine - oil is not being diverted from the prime mover hydraulic system. Be sure that the proper controls are actuated on the prime mover.
- 3. Air in system - bleed all circuits of air by operating machine at maximum oil flow and through full movements.
- 4. Oil viscosity too heavy, or oil is not at operating temperature - use recommended hydraulic fluid. Run machine until oil reaches operating temperature.
- 5. Pump not running - check pump drive to be sure it is engaged.
- 6. Insufficient pumping - advance engine throttle.
- 7. Improper hose connection - **IMPORTANT: Be sure inlet and return hoses are hooked up correctly. Improper hook-up will result in damage to the backhoe valve.**
- 8. Loose oil line connections, leaks in line or broken lines - tighten all hose connections and replace any damaged O-rings at leaking O-ring fittings. Check and replace any damaged hoses and lines.
- 9. Restrictions in oil lines - check and replace any damaged hoses and lines. Check for pinched hoses.
- 10. Oil is bypassing cylinder piston, scored piston, worn piston packing, or defective piston assembly - replace or rebuild the cylinder; replace damaged parts.
- 11. Scored piston rods and worn rod guides in cylinder - replace or rebuild the cylinder; replace damaged parts.

Continued

## Causes and Corrections, Continued

12. Bent piston rod in cylinder - replace or rebuild the cylinder; replace damaged parts.
13. Worn or damaged rod seals on cylinder; external leaks - repack cylinder. Rebuild cylinder, replacing damaged parts as necessary.
14. Diverter valve on prime mover leaking externally or bypassing oil internally through valve to reservoir - diverter valve may need rebuilding or replacing.
15. Something jamming the swing linkage - remove interference.
16. Excessive back pressure - relieve condition. May be restriction from outlet to reservoir.
17. Paint on valve spool; sticking valve spool or scored valve spool - clean valve spool. Binding is usually caused from an over tightened plug, mounting bolt, fitting in valve body or tie rod bolt. If a plug or fitting in the valve body is leaking, do not over tighten in an effort to stop leak. This will distort body casting and cause spools to bind. Instead, the plug and fitting should be removed from valve body and be reconnected, using a new O-ring. Do not apply excessive pressure on mounting bolts. The rods should be torqued to 20 ft./lbs. Never force spool, if binding occurs see item 30 at the end.
18. Oil leakage past spool seal into spool cap - remove cap. If it contains oil replace spool seal O-rings. Check O-ring retainer to be sure it is flat. If it has been "belled" check for restriction from outlet to reservoir of valve which would cause excessive back pressure. See item 30 at the end and item 9.
19. Broken return springs - replace springs, see item 30 at the end and Figure 9.
20. Bent spool - replace with new spool section. See item 30 at the end.
21. Foreign particles - clean system and valve.
22. Misalignment of control handle linkage - check linkage for binding condition.
23. Spool not moved to full stroke - check travel, should be 5/16" either way, or a total of 5/8". See item 30 at the end.
24. Relief valve setting in backhoe control valve too low or defective - relief pressure will have to be checked and corrections made. Backhoe system pressure is 2250 psi. Relief valve may need cleaning and overhauling, or entire cartridge must be replaced. See item 30 at the end.
25. Overload relief valve in the control valve stuck open or malfunctioning - clean relief carefully but do not disturb its pressure setting as it cannot be field calibrated, or replace cartridge. See item 30 at the end.
26. Worn control valve - replace the control valve.
27. Check poppet in the control valve not holding - clean check poppet(s) carefully, being sure that it moves freely with good spring action and seats properly or replace. See item 30 at the end.
28. Damaged or worn spool seals - replace spool end seals, see item 30 at the end.
29. Ball in anti-cavitation check valve is stuck or not seating properly - clean anti-cavitation valve carefully, being sure that checks move freely and seat properly, or replace cartridge. See item 30 next.
30. Problems involving the control valve proper:

This valve is a precision device and is not intended for any extensive field adjustment or repair. Field replacement parts are limited to seal kits, cartridges, valve sections and tie rods.

Replacement of these parts, the opening of check cavities and certain relief valve cavities to examine for trapped dirt, or the resetting of the main relief valve with the use of good pressure gauge, should be referred to qualified service personnel.



Dirt and shreds of packing material are the usual causes of valve malfunction. Be sure the reservoir oil supply is kept clean and only factory supplied packings are used in cylinder repair. Everything must be clean and free of dirt during the oil line removal and replacement, and during any cylinder work.

Pages 19 and 20, Valve Repair-Disassembly, explain the procedure to follow for valve repair.

***The inclusion of this information and its use does not imply that the warranty will remain effective on the valve if it is tampered with during the warranty period.***

# VALVE REPAIR - DISASSEMBLY

Figure 9

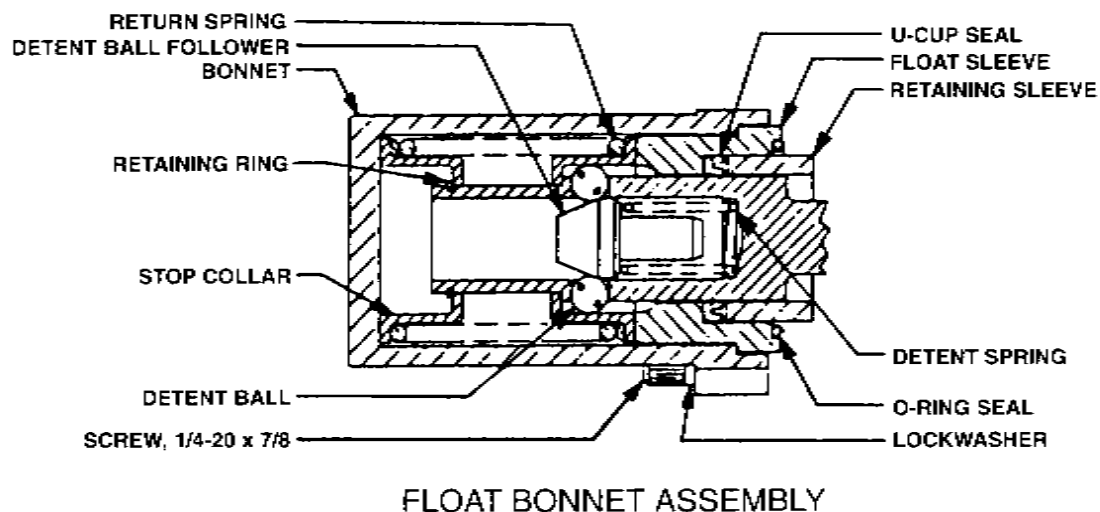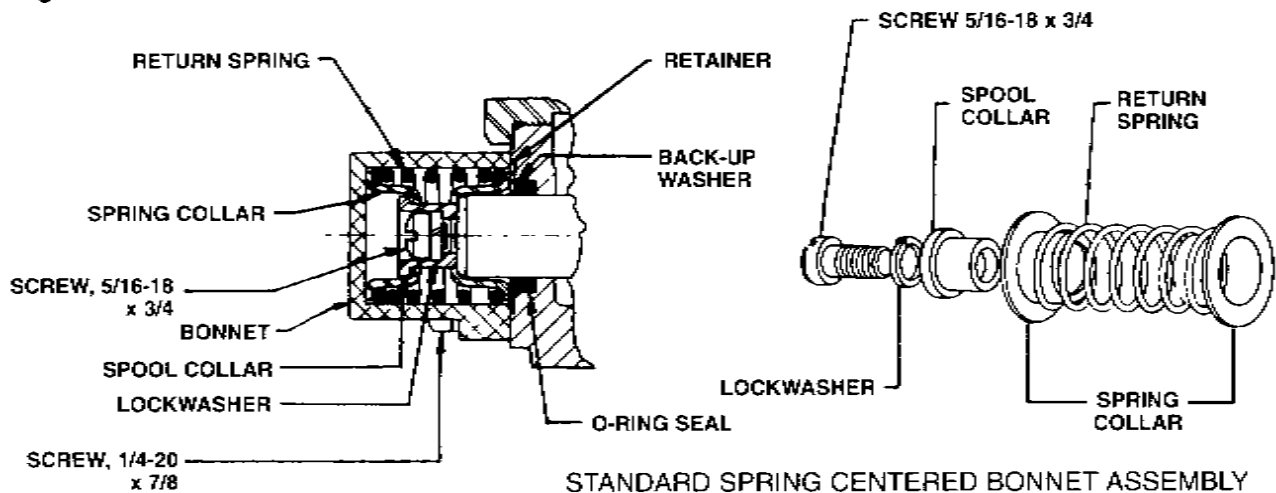

## Replace Center Section Assemblies:

*Note: For the purpose of these instructions we will consider the section containing the MAIN RELIEF VALVE as the left side of the valve.*

1. Remove control valve from the backhoe.
2. Thoroughly clean the exterior of the valve before beginning disassembly procedures.
3. Since the valve will be assembled in the same order, each section should be marked numerically so that they can be reassembled in the same sequence.
4. Mount the valve vertically in a vise to facilitate disassembly and assembly.
5. Remove the 3 tie rod nuts from the right end section, using a thin-wall socket.
6. Valve sections can now be removed by sliding the sections along the tie rods.

7. Thoroughly clean the O-ring counterbores and the ground surfaces of each section. Place O-ring seals, ordered as a kit, in proper counterbores. For better sealing it is recommended that all O-rings, used in the counterbores, are replaced with new parts.

8. Replace the sections on tie rods with the O-ring counterbores facing the right end of the valve. Be careful replacing the sections so that the section O-rings are not moved from the counterbores.

9. When all sections are assembled on the tie rods, tighten the tie rod nuts equally to 20 ft. lbs. torque, NO MORE - NO LESS, or spools may bind and stick.

## Replacing Spool Seals:

*Note: For the purpose of these instructions we will consider the control handle side of the valve as the FRONT, and the opposite side as the BACK.*

1. Remove control valve from the backhoe.
2. Thoroughly clean the exterior of the valve before beginning disassembly procedures.

3. At the BACK of the valve remove all bonnet assembly parts which are connected to the spool. Keep parts in the order of disassembly. See Figure 9 for the parts involved in the make-up of the bonnet assembly.

**IMPORTANT: DO NOT** remove the spool from the valve. The seals can be replaced externally. Prevent spools from turning or moving by inserting a screw driver through the clevis slot, or by running a rod through the pin hole and using the rod as a handle. **DO NOT** hold the spool with a wrench. This will destroy the finish.

4. At the BACK of the valve, remove seal retainer, back-up washer, and spool O-ring seal, or retaining sleeve, bonnet O-ring seal and spool U-cup seal.

5. Thoroughly clean counterbores.

6. Install new seals:

**A. Spring-Centered Bonnet Assembly Only:**

Lightly oil new O-ring seal. Slide O-ring seal over

valve spool and insert in seal counterbore. Replace back-up washer and seal retainer.

**B. Float Bonnet Assembly Only:**

Replace retaining sleeve on valve spool. Lightly oil new U-cup seal. Slide U-cup seal over valve spool being careful to orient seal as shown in Figure 9. Install new O-ring seal in bonnet counterbore.

7. At the BACK of the valve replace bonnet assembly parts, reversing the order in which they were disassembled in step 3. Use 12 ft. lbs. torque to tighten assembly screw on spring centered bonnet assembly.

8. At the FRONT of the valve remove all parts connected to the spool (handle, linkage, etc.).

9. At the FRONT of the valve remove seal plate retainer, seal retainer, back-up washer and spool O-ring seal.

10. Thoroughly clean counterbore.

11. Lightly oil new O-ring seal. Slide O-ring seal over valve spool and insert in seal counterbore. Replace back-up washer, seal retainer, and seal plate retainer.

12. Reattach all parts connected to the spool (handle, linkage, etc.).


## ASSEMBLY

Basic components for all models can be identified in Figure 10.

### General:

The backhoe has been partially disassembled and strapped to a skid for shipping purposes. Initial installation on the tractor will require a hoist or other device capable of safely lifting the entire backhoe from the skid. After the initial installation is complete, the backhoe can serve as its own erecting hoist, by lowering stabilizers and bucket to the ground. Additional lifting devices will not be required for normal removal and reattaching.

Figure 10

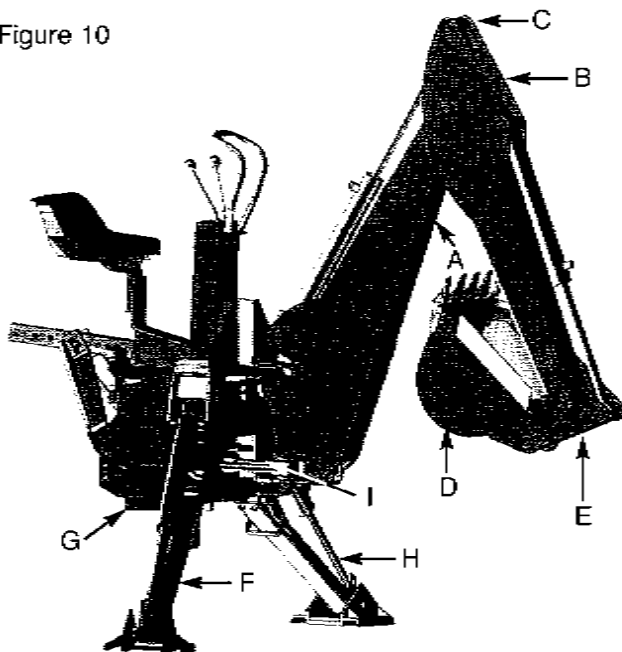

### Assembly - Figure 10

**IMPORTANT:** Tighten all hardware to torque requirements specified in torque chart.

1. Remove the stabilizer assemblies and any miscellaneous items which have been fastened to the skid and arrange conveniently.

Reposition stabilizer cylinders from their shipping configuration (See Fig. 11), by assembling them into the Mainframe, using pins and hardware provided. Be sure cylinder ports are pointed upward and hoses are routed above the cylinder to mainframe pivot pin connection. See Fig. 12.

**CAUTION**

**DO NOT** cut any strapping that fastens the backhoe mainframe and swing frame to the skid at this time.

2. Support boom (A) and dipperstick (B) with hoist and remove boom transport lock pin. Lower boom and manually extend dipperstick until it rests on the ground. Move control handle to "BOOM DOWN" position as required to aid movement.

**CAUTION**

Be sure hoist being used is suitable, has sufficient capacity and is in the proper position. Do not allow anyone under a backhoe member supported by hoist.

3. Remove plastic bag containing bucket pins from backhoe. Attach bucket (D) to dipperstick using one pin, two bolts, nuts, lockwashers, pin retainers and washers as needed to take up gap under pin retainers.

4. Attach bucket link (E) to bucket, using same hardware as listed for step #3.

5. Reposition hoist to backhoe to prevent tipping. Remove all remaining strapping and attach stabilizers (F) to mainframe (G) using pins and hardware assembled to backhoe.

6. Attach stabilizer cylinders (H) to stabilizers using pins and hardware assembled to stabilizers.

7. Using caution to prevent tipping, raise mainframe with hoist to a height of approximately 13" and remove skid. Block mainframe (G) and swing frame (I) securely.

8. Follow the Attaching Kit Assembly Instructions to mount the backhoe to the tractor. Check the installation carefully and make sure that all members are correctly installed and securely fastened.

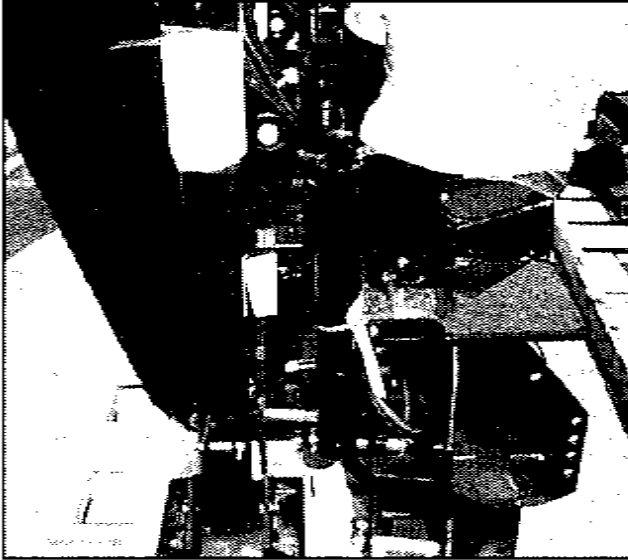


Figure 11


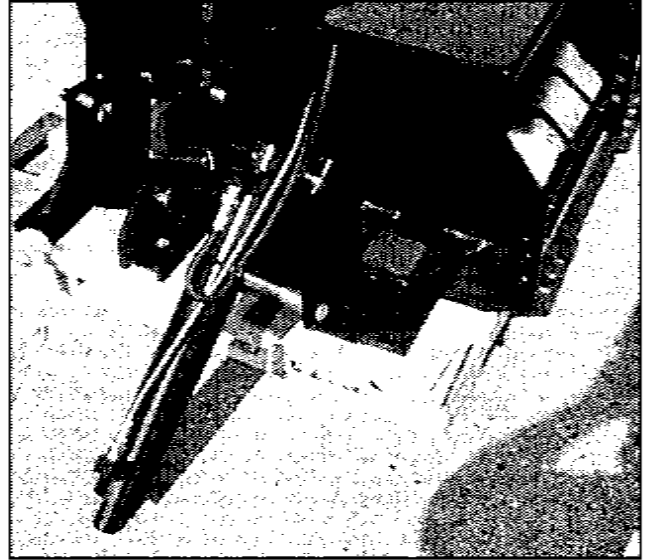


Figure 12

Figure 13

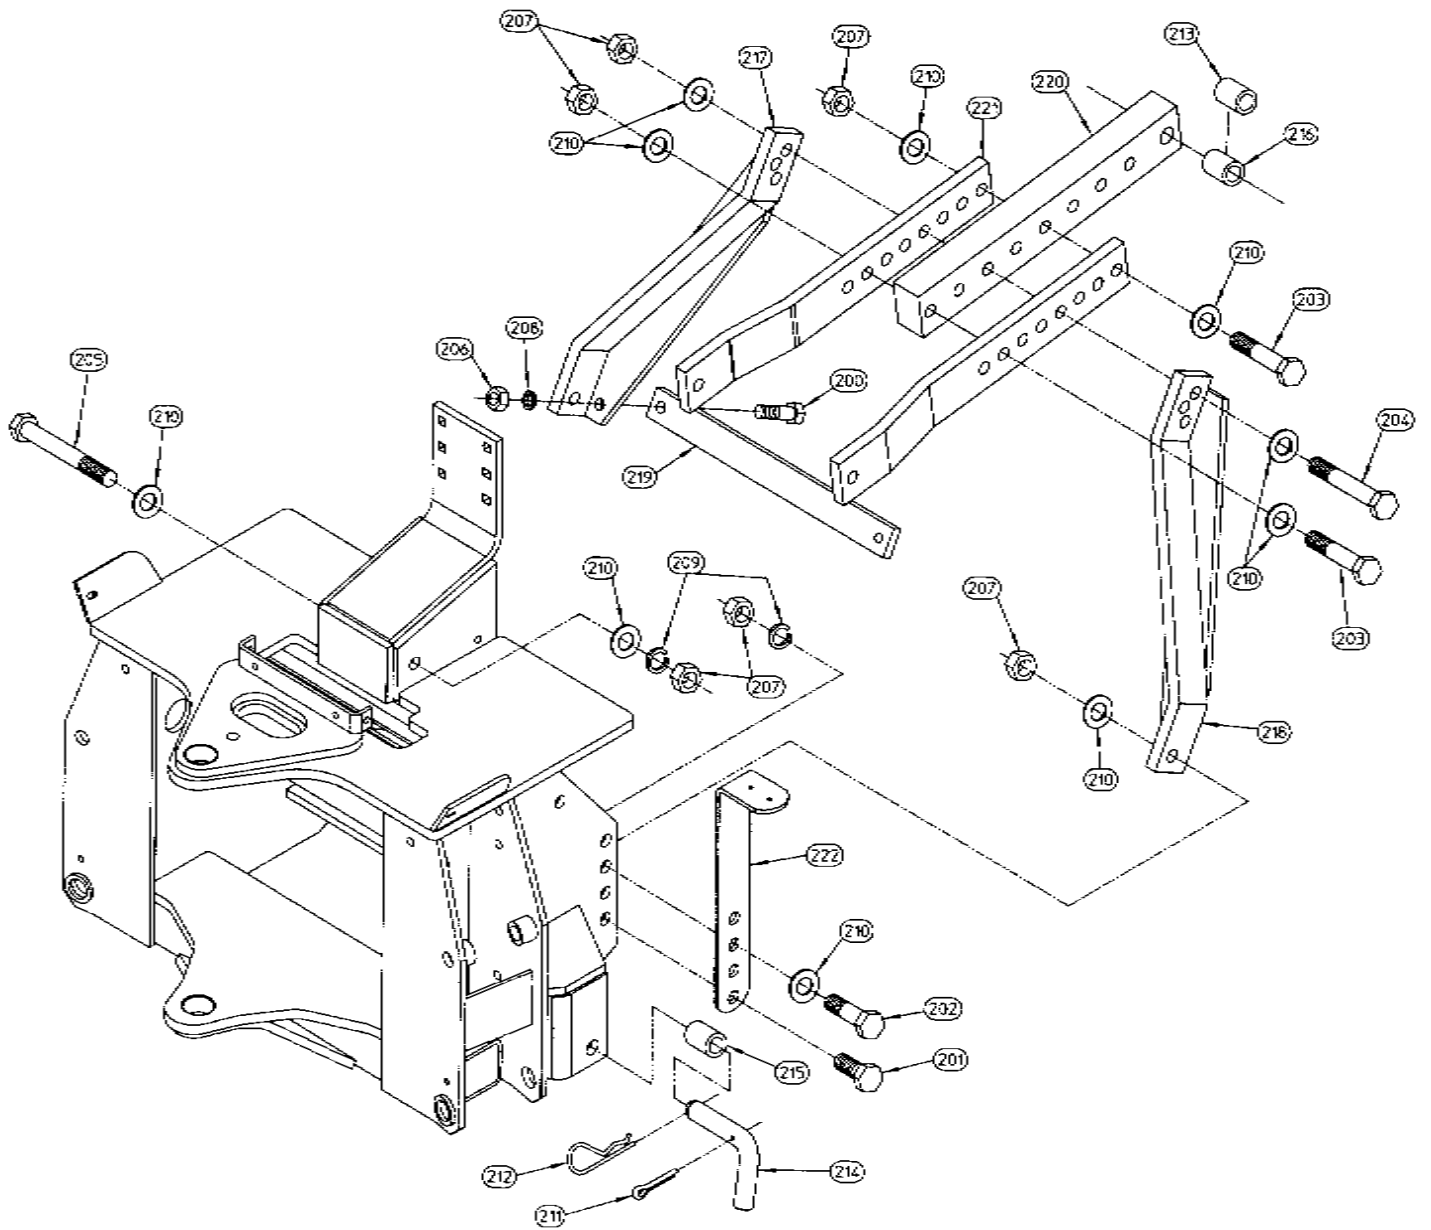

# ATTACHING KIT INSTRUCTIONS

## 3-POINT HITCH LINKAGE & HYDRAULIC HOOK-UP TO TRACTOR HYDRAULIC SYSTEMS

### General Description

Mounting and hydraulic kits may include two hoses, which can be used in connecting the backhoe control valve to the tractor hydraulic system. Additional hydraulic components or kits will be required to complete the hook-up to the tractor hydraulic system. Refer to "Hydraulic Hook-Up" section for further information. Pump and reservoir kits are available as options.

The backhoe is mounted on the tractor lower link arms and an adjustable upper link is supplied to replace the tractor upper link. A set of stabilizer arms is included. They bolt from the adjustable upper link to the backhoe mainframe, locking the hoe rigidly in one position.

*IMPORTANT - Tractor lower links must be kept free of lifting forces at all times, after installation of the attaching kit, by keeping tractor quadrant lever in the lowered position.*

*IMPORTANT - If the 3-Point Kit is to be used with a PTO & Reservoir Kit, the Reservoir Tank and it's fittings should be installed before proceeding with the 3-Point installation.*

### Assembly (Refer to Figures 13 & 14)

*IMPORTANT: Tighten all hardware to the torque requirements specified in the torque chart.*

#### WARNING

To prevent bodily injury, do not operate backhoe unless Lower Link Weldments (217, 218) are properly installed and adjusted. Failure to do so may result in backhoe being thrust upward, crushing operator against cab or ROPS.

1. Use hoist to raise the backhoe mainframe so that the boom pivot pin is approximately 16" off the ground.

2. Back tractor close to the backhoe. Connect tractor lower link arms to lower link mounts at position "C", Figure 14, using two L-pins (214), two cotter pins (211), and two wire form cotter pins (212) as shown in Figure 13

*NOTE: If tractor has a Category II hitch, install two bushings (215) in lower link arms as shown in Figure 13.*

3. Attach upper braces (221), Figure 13 to backhoe with  $\frac{3}{4}$  x 7-1/2" bolt (205), lockwasher (209), flat washers (210) and nut (207). Do not tighten hardware at this time.

4. Install bushing (213) or bushing (216) in the hole of the upper bar (220) that most closely matches the diameter of the tractor upper link pin, as shown in Figure 13. No bushing is necessary for Category II tractors.

5. Secure upper bar (220) between upper braces (221) using  $\frac{3}{4}$  x 5" bolts (203), flat washers (210), and nuts (207). Use hoist to raise or lower backhoe slightly until a hole in the upper bar aligns with a hole in the upper braces. See Figure 13.

6. Attach RH lower link weldment (217) and LH lower link weldment (218) to backhoe mainframe using  $\frac{3}{4}$  x 2-1/2" bolt (202), flat washer (210), and nut (207). See Figure 13.

6A. If optional PTO Pump Kit will be used, install Filter Bracket (222) now. Use hardware installed in step 6 plus  $\frac{3}{4}$  x 1-1/2" bolt (201), lockwasher (209), and nut (207). See Figure 13.

7. Align RH and LH link weldment (217, 218) with a hole in the upper bar/brace assembly, as close to the tractor as possible. Use  $\frac{3}{4}$  x 6-1/2" bolt (204), flat washer (210), and nut (207). See Figure 13. You may need to return to Step 6 and readjust upward or downward the bolt connection.

8. Remove backhoe from the tractor.


9. Install connector plate (219) to RH and LH lower link weldments (217, 218) using 5/8 x 2" bolt (200), lockwasher (208), and nut (206). See Figure 13.

10. Tighten all hardware at this time. Check your installation very carefully to be sure all members are correctly installed and securely fastened.

10A. If using optional PTO Pump and Reservoir Kit proceed to that section prior to remounting the backhoe onto the tractor.

11. Connect hoses from the backhoe control valve to the tractor hydraulic system as described in "Hydraulic Hook-Up" section, prior to remounting the backhoe onto the tractor.

Figure 14

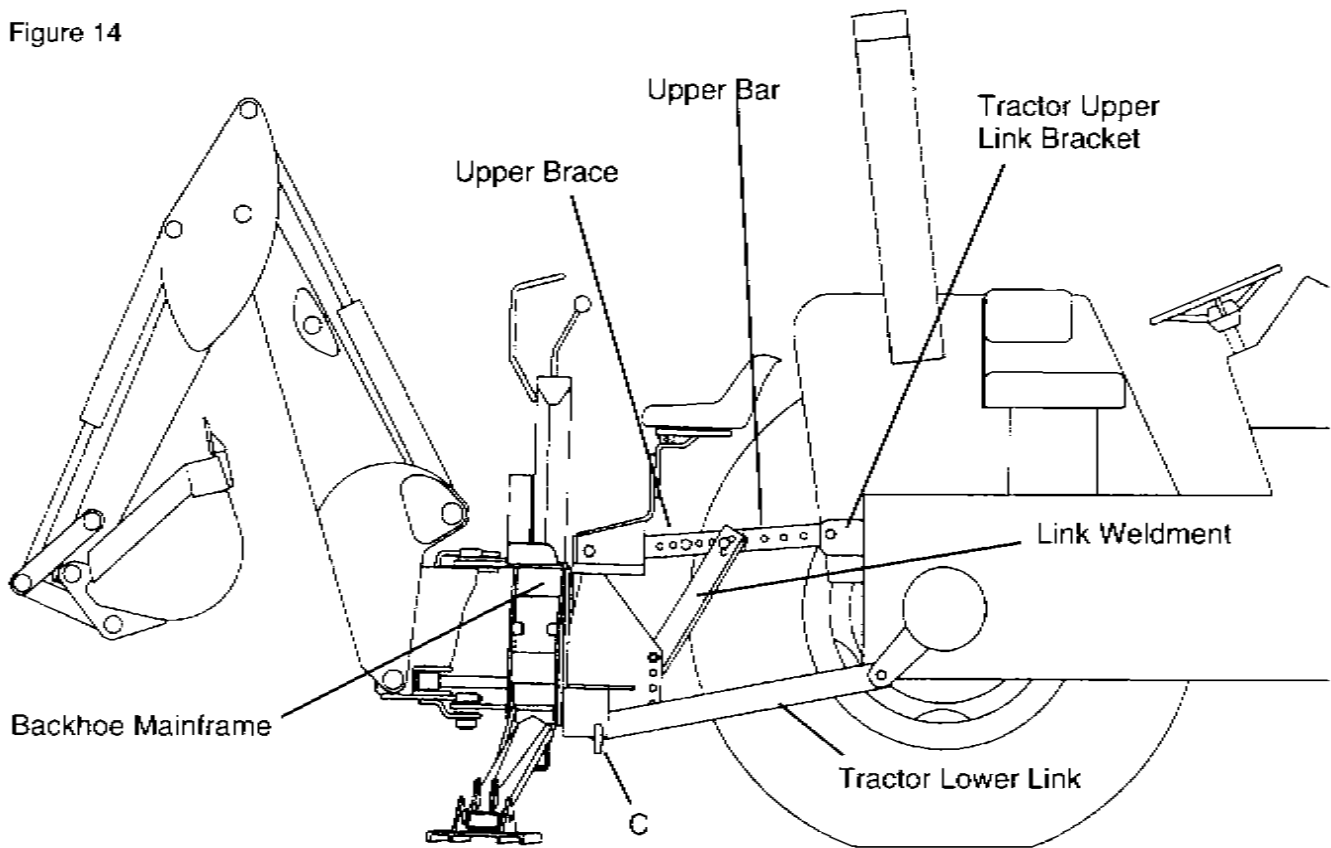

## HYDRAULIC HOOK-UP

If the optional Pump and Reservoir Kit is to be used, refer to the instructions for that kit for proper assembly.

There are four basic methods of hooking up the backhoe to the hydraulic system of a tractor. The correct method for the particular tractor will depend on the remote couplers available, whether a loader valve or other accessory valve is connected to the tractor system, and whether the tractor has an open-center system (constant pumping of oil to control valve and back to reservoir) or a closed-center system (no flow of oil until there is a demand at one hydraulic cylinder). The four hook up methods are described below.

**IMPORTANT:** Follow instructions carefully when connecting backhoe to tractor hydraulic system.

The decal shown below is located on the Left Hand toe shield.

### IMPORTANT

**IMPROPER HYDRAULIC HOOK-UP CAN CAUSE SERIOUS DAMAGE TO VALVE**

- REFER TO ATTACHING KIT OR PTO PUMP KIT MANUAL FOR PROPER HYDRAULIC HOOK-UP.
- NEVER PRESSURIZE RETURN PORT OF VALVE OR RESTRICT RETURN HOSE.
- ALWAYS MOVE TRACTOR 3-POINT HITCH CONTROL TO FULLY LOWERED POSITION WHILE BACKHOE IS MOUNTED TO TRACTOR.



Note: Do not connect hoses from the backhoe control valve to the tractor hydraulic system until initial assembly of mounting kit is complete.

### 1. OPEN-CENTER SYSTEM WITH LOADER VALVE OR OTHER ACCESSORY VALVE CONNECTED TO THE TRACTOR HYDRAULIC SYSTEM:

When a loader valve or other accessory valve must be connected to the tractor hydraulic system in addition to the backhoe control valve, a Power Beyond Kit is required. This kit converts the backhoe valve so that pressurized hydraulic oil can be directed to another open-center valve for a loader or other accessory. This allows the backhoe valve and the other valve to be connected to the tractor hydraulic system simultaneously, without the inconvenience of using a flow diverting valve.

Since the Power Beyond Kit is used with open-center tractor hydraulic systems, oil constantly flows from the pump, through the backhoe valve and the loader valve or other accessory valve, and then to the reservoir. See further in this manual for instructions on proper assembly.

### 2. OPEN-CENTER SYSTEM WITH RETURN OIL NOT REQUIRED FOR LUBRICATION - Figure 15

The pressure hose (A) on the backhoe control valve should be connected to the pressure port of the tractor's remote couplers or directly to the tractor valve. The return hose (B) on the backhoe control valve should be connected directly to a port on the reservoir, as shown in Figure 15.

**IMPORTANT: Never connect the return hose to a tractor remote coupler which can be pressurized. Accidental pressurization can cause serious damage to backhoe valve.**

### 3. OPEN-CENTER SYSTEM WITH RETURN OIL REQUIRED FOR LUBRICATION - Figure 16

On some tractors, the return oil cannot be routed directly to the reservoir because it is required for the lubrication of other functions. Check this characteristic with your dealer. The pressure hose (A) on the backhoe control valve must be connected to the pressure port of the tractor's remote couplers or directly to the tractor valve. The return hose (B) on the backhoe control valve must be connected to a surge relief valve as shown in Figure 16.

Note: The surge relief valve is not supplied with the backhoe or mounting kit and must be ordered separately to complete this type hydraulic hook-up.

Complete the hydraulic hook-up by connecting the surge relief valve to the return port of tractor remote couplers or directly to the tractor valve, and by connecting a hose from the TANK port of the surge relief valve to the tractor reservoir as shown in Figure 16. The surge relief valve is used to protect the backhoe valve from damage caused by accidental pressurization or high back pressure build-up. If this happens, oil will be vented from the TANK port of the surge relief valve to the tractor reservoir to prevent loss of vented oil.

Figure 15


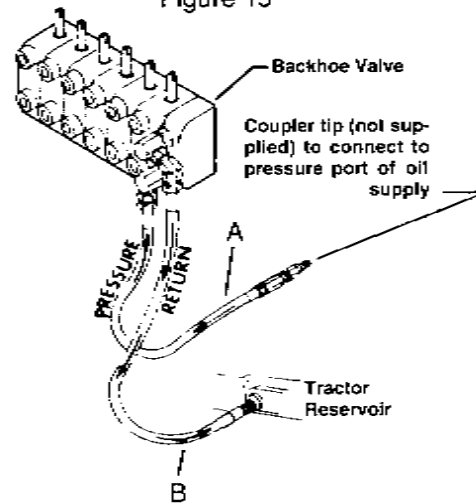


Figure 16

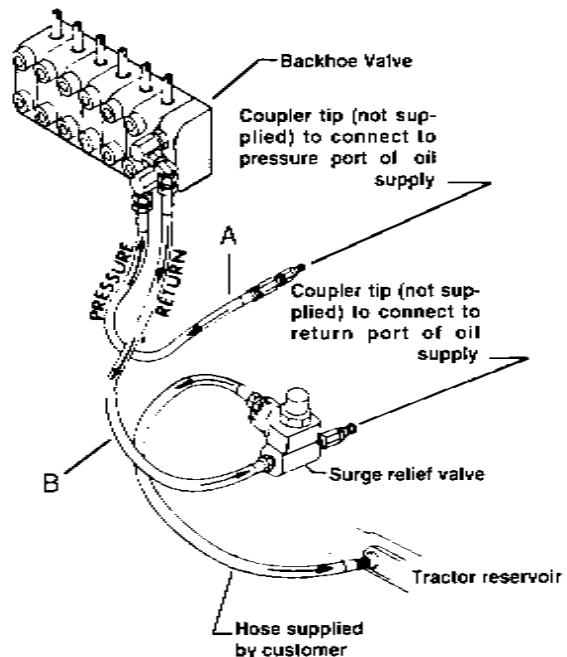

## Hydraulic Hook-Up For Tractors With Closed-Center Hydraulic Systems

There are two basic types of hydraulic systems, open-center and closed-center. The open-center system constantly pumps oil through the hydraulic cylinder operating valves and returns the oil to the reservoir. The closed-center system does not pump oil until there is a demand for oil from one of the hydraulic cylinders.

In this case, CLOSED-CENTER means that when the operating valves which control the hydraulic cylinders are in the neutral position, there is no flow of oil through the valves. As long as the engine and pump are running, a constant stand-by oil pressure of approximately 2000 PSI or more is maintained in the system. Pressure oil is available instantaneously to go to work when any one of the operating valves is opened.

Because there must be no flow through the backhoe control valve, when the levers are in neutral position, the backhoe must be converted for closed-center operation.

### Hook-Up Requirements

The hook-up of the Backhoe to the closed-center system requires more than connecting it to the remote couplers. The required devices are:

1. A flow restrictor in the pressure line to keep the speed of the backhoe operation within safe and acceptable limits.
2. A main relief valve in the backhoe control valve with a pressure setting that is always higher than the tractor system pressure.
3. A closed-center plug in the backhoe control valve to make it a non-circulating or a demand type system.
4. A low pressure surge relief valve in the return line to keep the tractor back pressure surges from damaging the backhoe control valve seals or tractor system. A surplus flow line from the relief valve carries only the excess surge oil directly back to the tractor hydraulic reservoir so that it bypasses all other tractor functions.

### Backhoe Operation

For the most part, a backhoe will function about the same whether it is powered by an open-center or closed-center hydraulic system. However, there are some differences which the operator should be aware of.


As a backhoe function (lifting, actuating the bucket to fill it, etc.) becomes increasingly difficult and the hydraulic system pressure is rising closer to its maximum setting, there will be a noticeable slow down before stoppage occurs. As the system pressure is approaching maximum, the pump is also beginning to stroke back for less and less fluid delivery. At maximum pressure, the pump

is completely destroyed and there is no delivery.

Therefore, when working various backhoe functions at near maximum ability, it will give the operator the impression that the backhoe is sluggish and somewhat unresponsive. Learning to ease up slightly at the first indication of slow down will permit the backhoe to perform at continuing maximum speed and efficiency.

### Hook-Up Diagram


Figure 17  
Replace 2250 PSI relief valve with 2600 PSI relief valve.

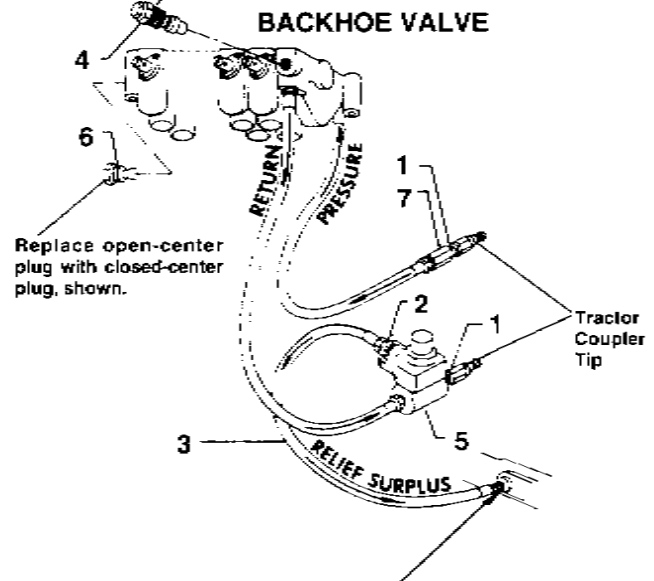

For John Deere Tractors use reservoir plug. Remove plug, drill with 37/64 drill, and tap 3/8 NPT pipe. Screw plug onto hose, locking with Locktite to assure assembly will remain together during connecting and disconnecting procedures. Obtain another plug from your dealer to use when backhoe is removed.

For other tractor makes, use filler plug, drain plug, or any other port that goes directly into the hydraulic reservoir. Do not rely only on the remote coupler return.

Figure 18

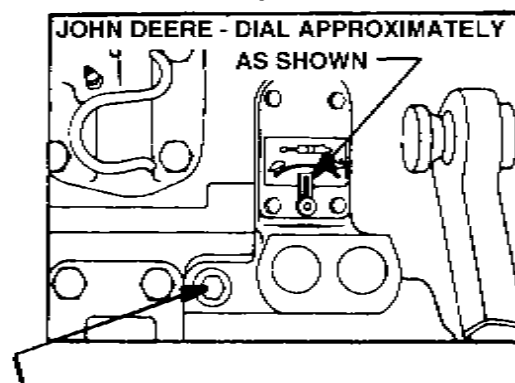




Typical plug for surplus relief flow line. Check carefully that it enters the reservoir before using. Note that the location varies with different tractor makes and models. A John Deere Tractor is shown.

## TORQUE VALUES

Common bolts and nuts

Tightening Torque Plus/Minus 20%

Size	Grade 2 	Grade 5 	Grade 8 
1/4-20 NC	70 in. lbs.	115 in. lbs.	165 in. lbs.
1/4-28 NF	85 in. lbs.	140 in. lbs.	200 in. lbs.
5/16-18 NC	150 in. lbs.	250 in. lbs.	350 in. lbs.
5/16-24 NF	165 in. lbs.	270 in. lbs.	30 ft. lbs.
3/8-16 NC	260 in. lbs.	35 ft. lbs.	50 ft. lbs.
3/8-24 NF	300 in. lbs.	40 ft. lbs.	60 ft. lbs.
7/16-14 NC	35 ft. lbs.	55 ft. lbs.	80 ft. lbs.
7/16-20 NF	45 ft. lbs.	75 ft. lbs.	105 ft. lbs.
1/2-13 NC	50 ft. lbs.	80 ft. lbs.	115 ft. lbs.
1/2-20 NF	70 ft. lbs.	105 ft. lbs.	165 ft. lbs.
9/16-12 NC	75 ft. lbs.	125 ft. lbs.	175 ft. lbs.
9/16-18 NF	100 ft. lbs.	165 ft. lbs.	230 ft. lbs.
5/8-11 NC	110 ft. lbs.	180 ft. lbs.	260 ft. lbs.
5/8-18 NF	140 ft. lbs.	230 ft. lbs.	330 ft. lbs.
3/4-10 NC	150 ft. lbs.	245 ft. lbs.	350 ft. lbs.
3/4-16 NF	200 ft. lbs.	325 ft. lbs.	470 ft. lbs.

Note - See tractor instruction manual or your tractor dealer for tightening of metric bolts.

## PTO PUMP AND RESERVOIR KIT (Optional)

### General Description

The PTO Pump Kit consists of those parts required to power the backhoe from the tractor's PTO shaft. It includes the PTO pump and adapter, reservoir, filtration system, hydraulic hoses and fittings. In addition, it includes a pump torque arm which attaches to the tractor's lower link and keeps the pump from turning with the PTO shaft.

*Note: The speed of the backhoe operation increases as PTO speed increases.*

### Assembly

**Note: When installing hoses and fittings always use thread sealant in permanent connections. Do not use thread sealant in union ends of adapters. Do not overtighten fittings - they can split or expand, causing leakage**

1. Assemble filler tube (1) and breather cap with dipstick (2) to reservoir (3) as shown in Figure 19.

2. Assemble reservoir (3) to backhoe: Use 5/16 x 7/8" bolt (39), flat washer (36), and locknut (37) as shown in Figure 19.

3. Assemble suction hose (4) to reservoir (3) using street elbow (5), hose nipple (6), and hose clamp (7) as shown in Figure 19.

4. Preassembly of filter base and element (8): Assemble street elbow (5), pipe bushing (9), and 38" hose (12) to Inlet port on filter base (8) as shown in Figure 19. Assemble pipe bushing (9) and adapter union (28) to Outlet port on filter base (8) as shown in Figure 19.

5. Assemble filter base and element (8) to Filter Mount (222) on backhoe using 1/4 x 3/4" bolt (13), lockwasher (14), and flat washer (15) as shown in Figure 19.

**NOTE** - Filter Mount (222) is part of the 3-point hitch kit.

**NOTE** - Change filter element (16) every time oil is changed.

6. Connect return line hose (12) to "OUT" port on backhoe control valve. Note - Backhoe return line hose is routed along side reservoir tank.

7. Complete connection between filter base (8) Outlet port and reservoir (3) using 29" hose (17), pipe bushing (9), and street elbow (11) as shown in Figure 19.

8. Assemble torque arm (18) to pump (19), using hardware provided (20, 21, 22), as shown in Figure 19. Pump plate may have to be readjusted later.

9. Slide PTO adapter (23) onto pump shaft allowing 1/8" between adapter and pump face and secure with two setscrews (24), as shown in Figure 19. Lock with two nuts (25).

10. Assemble suction hose (4) to pump (19), using pipe adapter (26), street elbow (5), hose nipple (6), and hose clamp (7) as shown in Figure 19. Set-up requires a pipe bushing (27) between the pipe adapter and the street elbow.

**NOTE:** For Pump and Reservoir installation, pressure line is routed under the reservoir tank. To ease installation of pressure line, 90 degree hydraulic fitting in control valve "IN" port can be removed. Attach 90 degree fitting to hose, reinstall fitting and proceed as noted below.

Connect pressure line between valve "IN" port fitting and pump, using adapter union (28) and hose (12) as shown in Figure 19. Set-up requires a pipe adapter (29) between the pump and adapter union.

**IMPORTANT** - If hoses are hooked up incorrectly, serious damage to the backhoe valve will result.

11. **NOTE:** Initial fill up of the Reservoir Tank will require 4fi gallons of fluid. Fill reservoir with recommended fluid to correct level, referring to Service Section in the Backhoe Manual.

12. Mount the backhoe to the tractor at this time following the procedure in the Attaching Kit Manual.

13. Slide complete pump assembly onto the PTO shaft and secure with lock pin on PTO adapter. Be sure kinks do not develop in any of the lines. Suction hose can be shortened to prevent this problem.



### DO NOT REMOVE THE TRACTOR PTO GUARD


14. Attach torque arm (18) to tractor's lower link using hook-up chain (30), 3/8 x 2" bolt (31), washer (32), lockwasher (21), and nut (22), as shown in Figure 19. Torque arm (18) may be adjusted on pump (19) for proper fit-up to lower link if necessary.

**IMPORTANT** - When mounting backhoe on the adapter, do not let the swing cylinders interfere with the backhoe pump, or the hydraulic lines become tangled in any part of the adapter during installation. Make sure both pressure and suction lines are free from kinks or twists to reduce back pressure and excessive heat build-up.

15. Install valve cover plate onto backhoe mainframe.

# PTO PUMP KIT PARTS BREAKDOWN W702 9.6' BACKHOE


Figure 19

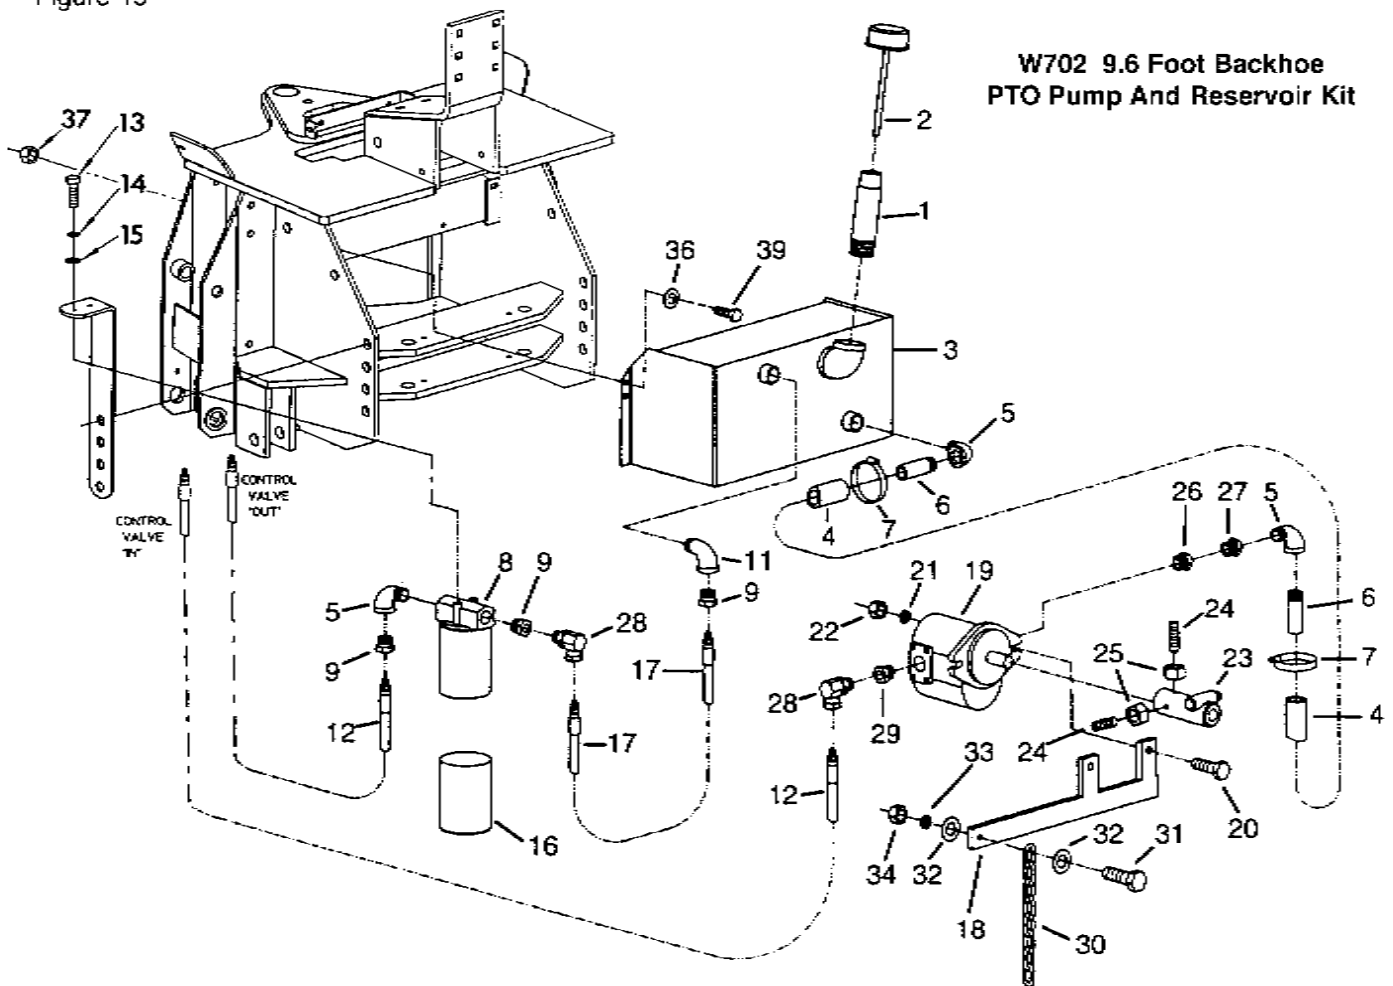

**W702 9.6 Foot Backhoe  
PTO Pump And Reservoir Kit**


Index Number	Part Number	Description	Index Number	Part Number	Description
1	860296	Filler Tube	20	7034	Bolt, 1/2 NF x 1-3/4" Gr. 5
2	23067	Breather Cap with Dipstick	21	8101	Lockwasher, 1/2
3	15526	Reservoir Tank	22	7511	Nut, 1/2 NF
4	11026	Suction Hose	23	15093	PTO Adapter
5	7975	Street Elbow, 3/4 NPTM x 3/4 NPTF x 90°	24	8327	Setscrew, 5/16 NC x 3/4" Cup Point
6	780833	Hose Nipple	25	7431	Nut, 5/16 NC
7	14150	Hose Clamp - 1-1/16" to 2"	26	11216	Reducer, 1-5/8-12 SAE Str. Thrd. x 1" NPTF
8	10375	Filter Base and Element	27	8015	Reducer, 1" NPTM x 3/4" NPTF
9	7987	Reducer - 3/4 NPTM x 1/2 NPTF	28	11129	Adapter Union, 1/2 NPTM x 1/2 NPTF x 90°
11	7974	Street Elbow 3/4 NPTM x 3/4 NPTF x 45°	29	11227	Reducer, 1-1/16-12 SAE Str. Thrd. x 1" NPTF
12	17538	Hydraulic Hose, 1/2 NPTM x 1/2 NPTM x 38" long	30	851834	Hook-up Chain
13	6740	Bolt, 1/4 NC x 3/4"	31	6882	Bolt, 3/8 NC x 2-1/2"
14	8061	Lockwasher, 1/4	32	8156	Flat Washer, 3/8
15	8146	Flat Washer, 1/4	33	8079	Lockwasher, 3/8
16	10376	Element Only ( Service Only)	34	7451	Nut, 3/8 NC
17	17519	Hydraulic Hose, 1/2 NPTM x 1/2 NPTM x 29" long	36	8152	Flat Washer, 5/16 SAE
18	858135	Torque Arm	37	7437	Locknut, 5/16 NF
19	23072	Hydraulic Pump	39	6790	Bolt, 5/16 NF x 7/8"

## 3-POINT MOUNT KIT PARTS BREAKDOWN W801 FOR 9.6' BACKHOE

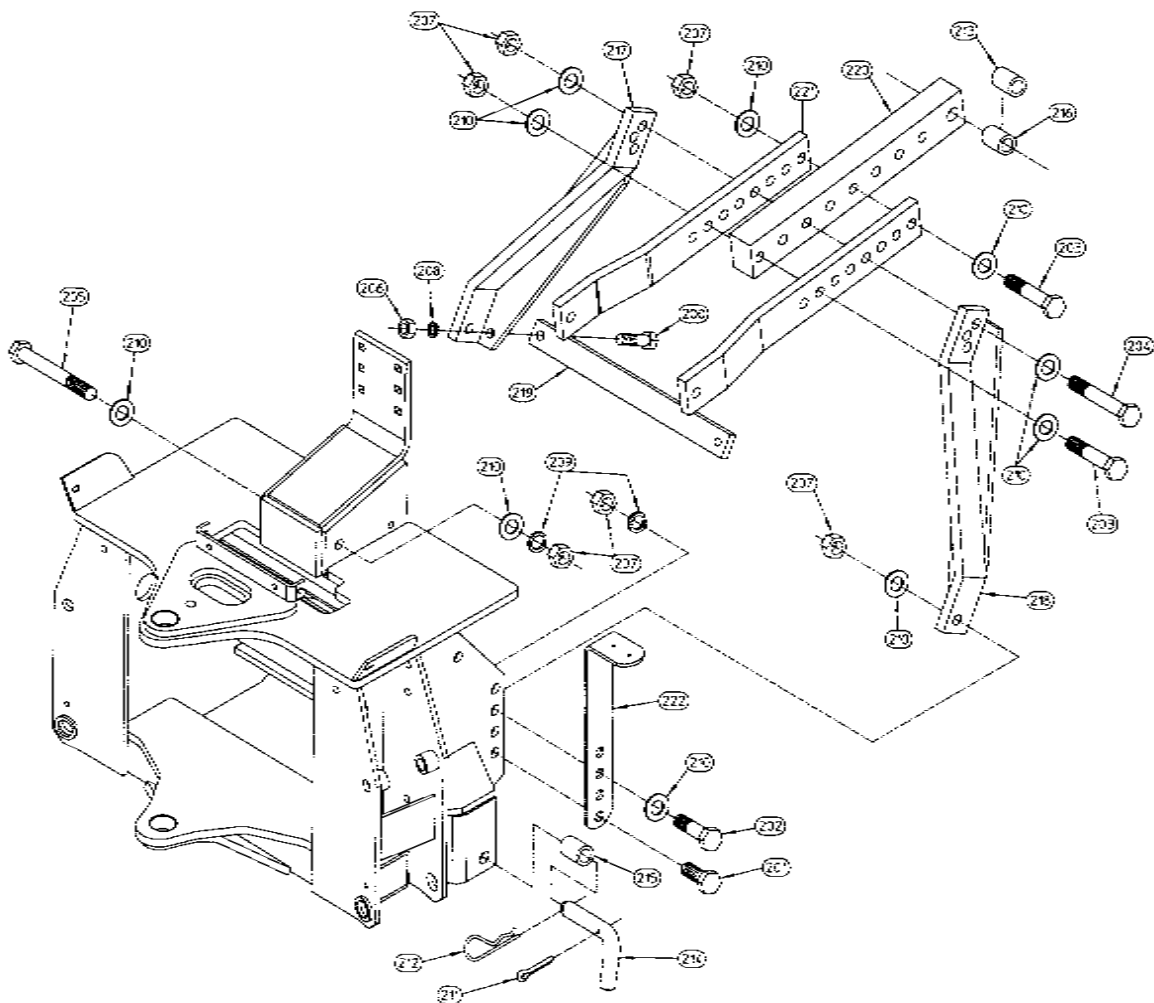


Index Number	Part Number	Description	Index Number	Part Number	Description
200	7143	Bolt, 5/8 NF x 2" Gr. 5	213	750253	Bushing (option), 1" OD x 3/4" ID x 1-5/8" long
201	7224	Bolt, 3/4 NF x 1-1/2"	214	775003	L-Pin
202	7249	Bolt, 3/4 NF x 2-1/2" Gr. 5	215	852198	Lower Link Cat. II Bushing (optional)
203	7264	Bolt, 3/4 NF x 5" Gr. 8	216	854528	Bushing (option), 1" OD x 13/16" ID x 1-5/8" long
204	7272	Bolt, 3/4 NF x 6-1/2" Gr. 8	217	863150	RH Lower Link Weldment
205	7273	Bolt, 3/4 NF x 7-1/2" Gr. 8	218	863155	LH Lower Link Weldment
206	7536	Nut, 5/8 NF	219	863161	Connector Plate
207	7569	Nut, 3/4 NF	220	863162	Upper Bar
208	8111	Lockwasher, 5/8	221	863163	Upper Link
209	8121	Lockwasher, 3/4	222	863164	Filter Bracket
210	8193	Hardened Flat Washer, 3/4			
211	8582	Cotter Pin, 3/16 x 1-1/4"			
212	8624	Wire Form Cotter #10			

# W604 STREET PAD KIT

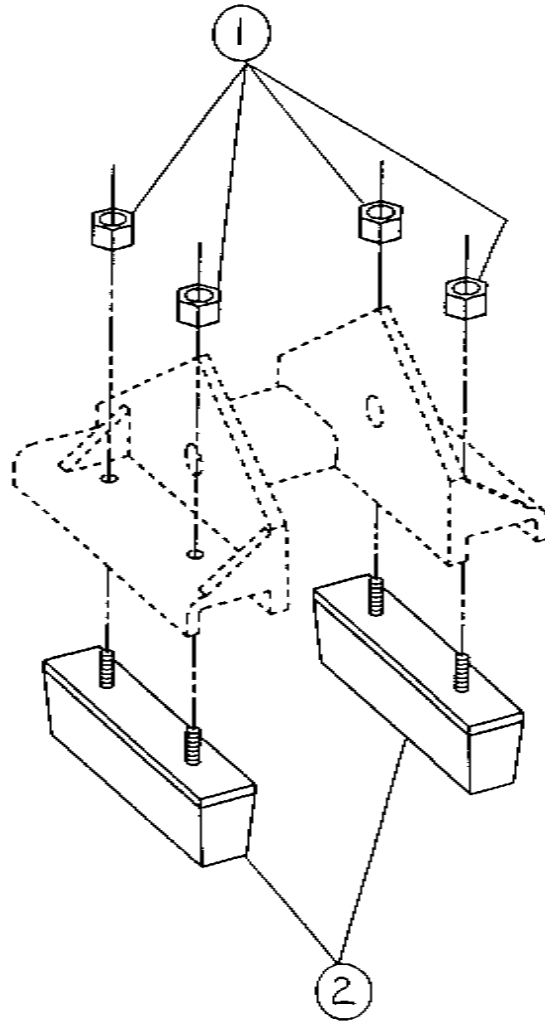

Index No.	Part Number	Description
1	7458	Locknut, 3/8 NC
2	12899	Street Pad - Rubber

# HEAVY DUTY DEEP PROFILE BUCKET PARTS BREAKDOWN FOR 9.6' BACKHOES

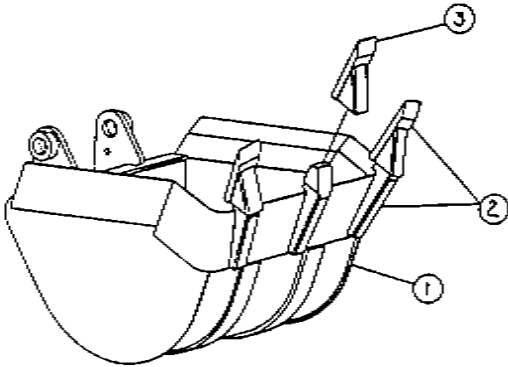

Index Number	Part Number	Description
1	W720	Heavy Duty Deep Profile Bucket - 14"
2	13626	Tooth and Shank Assemblies for 14" Bucket
3	13627	Tooth Point Only for 14" Bucket
1	W721	Heavy Duty Deep Profile Bucket - 18"
2	13626	Tooth and Shank Assemblies for 18" Bucket
3	13627	Tooth Point Only for 18" Bucket
1	W722	Heavy Duty Deep Profile Bucket - 24"
2	13626	Tooth and Shank Assemblies for 24" Bucket
3	13627	Tooth Point Only for 24" Bucket
1	W723	Heavy Duty Deep Profile Bucket - 36"
2	13626	Tooth and Shank Assemblies for 36" Bucket
3	13627	Tooth Point Only for 36" Bucket
1	W724	Heavy Duty Deep Profile Bucket - 40"
2	13626	Tooth and Shank Assemblies for 40" Bucket
3	13627	Tooth Point Only for 40" Bucket

### Bucket Data:

BUCKET	WIDTH	SAE STRUCK CAPACITY	HEAPED CAPACITY	SHIPPING WEIGHT
W720	14"	1.14 cu. ft.	1.74 cu. ft.	106 lbs.
W721	18"	1.75 cu. ft.	2.68 cu. ft.	126 lbs.
W722	24"	2.42 cu. ft.	3.71 cu. ft.	146 lbs.
W723	36"	3.77 cu. ft.	5.76 cu. ft.	195 lbs.
W724	40"	4.22 cu. ft.	6.41 cu. ft.	207 lbs.



## PARTS BREAKDOWN 9.6' BACKHOE

Index No.	Part Number	Description
1	182	Hydraulic Cylinder
2	194	Hydraulic Cylinder
3	196	Hydraulic Cylinder
4	193	Hydraulic Cylinder
5	6574	Carriage Bolt, 5/16 NC x 3/4" Gr. 5
6	6577	Carriage Bolt, 5/16 NC x 1" Gr. 5
7	6608	Carriage Bolt, 3/8 NC x 1" Gr. 5
8	6669	Carriage Bolt, 1/2 NC x 1-3/4" Gr. 5
9	6740	Bolt, 1/4 NC x 3/4"
10	6787	Bolt, 5/16 NC x 3/4"
11	6789	Bolt, 5/16 NF x 3/4"
12	6795	Bolt, 5/16 NF x 1" Gr. 5
13	6790	Bolt, 5/16 NF x 7/8" Gr. 5
14	6801	Bolt, 5/16 NF x 1-1/8"
15	6808	Bolt, 5/16 NF x 2-1/4" Gr. 8
16	6812	Bolt, 5/16 NF x 2-3/4" Gr. 5
17	6819	Bolt, 5/16 NC x 2-3/4"
18	6851	Bolt, 3/8 NF x 1"
19	6859	Bolt, 3/8 NF x 1-1/4"
20	6887	Bolt, 3/8 NF x 2-3/4"
21	6906	Bolt, 3/8 NC x 5-1/2" Long Gr. 8
22	7025	Bolt, 1/2 NC x 1-1/2"
23	7088	Bolt, 1/2 NF x 6-1/2"
24	6891	Bolt, 3/8 NF x 3"
25	7403	Locknut, 1/4 NC
26	7431	Nut, 5/16 NC
27	7433	Locknut, 5/16 NC
28	7436	Nut, 5/16 NF
29	7437	Locknut, 5/16 NF
30	7458	Locknut, 3/8 NC
31	7461	Nut, 3/8 NF Gr. 5
32	7466	Locknut, 3/8 NF
33	7501	Nut, 1/2 NC
34	7515	Locknut, 1/2 NF
37	8071	Lockwasher, 5/16
38	8079	Lockwasher, 3/8
39	8081	Lockwasher, 3/8 Shakeproof
40	8101	Lockwasher, 1/2
41	8151	Washer, 5/16 STD
42	8152	Flat Washer, 5/16 SAE
43	8158	Flat Washer, 3/8 SAE
45	8232	Machine Bushing, 2-1/4" OD x 1-1/2" ID x 16 Ga.
46	8283	Machine Bushing, 1-1/2" OD x 1" ID x 14 Ga.
47	8290	Machine Bushing, 1-7/8" OD x 1-1/4" ID x 18 Ga.
48	8304	Machine Bushing, 2-1/2" OD x 1-3/4" ID x 18 Ga.
49	8584	Cotter Pin, 3/16 x 1-1/2"
50	8602	Cotter Pin, 1/4 x 2"

## PARTS BREAKDOWN CONTINUED


Index No.	Part Number	Description
51	10166	Check Valve
52	11091	Adapter Union, 9/16-18M x 3/8 NPTF
53	11127	Adapter Union, 3/8 NPTM x 3/8 NPTF x 90 degree
54	11129	Adapter Union, 1/2 NPTM x 1/2 NPTF x 90 degree
55	11131	Adapter Union, 1/2 NPTM x 1/2 NPTF x 45 degree
56	11140	Adapter Union, 9/16-18M x 3/8 NPTF x 90 degree
57	11142	Adapter Union, 7/8-14M x 1/2 NPTF x 90 degree
58	11143	Adapter Union, 3/4-16M x 3/8 NPTF x 90 degree
59	11161	Adapter Union, 3/4-16M x 3/8 NPTF x 90 degree-long
60	11180	Adapter Union, 1/2 NPTM x 1/2 NPTF x 90 degree
61	11104	Adapter Union, 9/16-18M x 3/8 NPTF x 45 degree
62	11978	Garlock Bearing, 028DXR016
63	11985	Connex Bearing, 1-7/8 OD x 1-1/2 ID x 2-1/2"
64	12492	Stabilizer Pad
65	13474	Pin Retainer - Large
66	13505	Swing Lock Pin
67	13506	Boom Lock Pin
68	13679	Bumper
69	13683	SMV Socket
70	13919	Seat
71	14027	Ball Joint
72	14058	Control Knob
73	14150	Hose Clamp, 1-1/16" to 2"
74	14132	Plastic Tie, T120 L
75	14133	Plastic Tie, T50 L
76	14176	Hose Sleeve, FC425-32 x 43" Long
77	14140	Hose Clamp
78	14148	Hose Sleeve, FC425-16 x 19" Long
79	14500	Grease Fitting
80	14505	Grease Fitting
81	14522	Grease Fitting x 90 degrees
82	17015	Hydraulic Hose, 3/8 NPTM x 3/8 NPTM x 20" long
83	17046	Hydraulic Hose, 3/8 NPTM x 3/8 NPTM x 36" long
84	17354	Hydraulic Hose, 3/8 NPTM x 3/8 NPTM x 80" long
85	17375	Hydraulic Hose, 3/8 NPTM x 3/8 NPTM x 90" long
86	17450	Hydraulic Hose, 3/8 NPTM x 3/8 NPTM x 128" long
87	17475	Hydraulic Hose, 3/8 NPTM x 3/8 NPTM x 152" long
89	23082	Gresen V20 Control Valve
90	50815	Control Rod
91	50816	Stabilizer Lever Control Rods
92	50819	Stabilizer Control Lever
93	50832	Rear Shroud
94	863095	Bucket Link Weldment
95	851116	Pivot Pin, Guide Link, 1-1/4" Dia. x 10-3/16" long
96	863128	Pivot Pin, Boom Cyl. Rod, 1-1/2" Dia. x 6" long
97	851136	Thrust Washer

## PARTS BREAKDOWN CONTINUED


Index No.	Part Number	Description
98	852256	Pivot Pin, Stabilizer Cyl. Base, 7/8" Dia. x 6-7/8" long
99	857124	Hose Strap
100	857132	Pivot Pin, Stabilizer Cyl. Rod
101	863100	Guide Link Weldment
102	857921	SMV Socket Mount
103	858309	Pivot Pin, Stabilizer Leg
104	858081	Spacer
105	858301	Pin Retainer
106	858376	Spacer
107	860515	Grab Bar Weldment
108	863045	Swing Frame Weldment
109	863030	Dipperstick Weldment
110	863005	Boom Weldment
111	863130	Bumper Plate
112	863070	Mainframe Weldment
113	863134	Bumper Spacer
114	863000	Stabilizer Leg Weldment
115	860450	Upper Pivot Pin Weldment
116	863115	Lower Pivot Pin Weldment
117	861684	Retaining Collar
118	863105	Pivot Pin Weldment
119	861691	Pivot Pin, Boom, 1-1/2" Dia. x 9-1/16" Long
120	863126	Pivot Pin, Dipperstick, 1-1/2" Dia. x 10-1/4" Long
121	863122	Pivot Pin, Boom Cyl. Base, 1-1/2" Dia. x 9-1/8" Long
122	863123	Pivot Pin, Dipper Cyl. Base, 1-1/2" Dia. x 8-1/4" Long
123	863124	Pivot Pin, Dipper Cyl. Rod, 1-1/2" Dia. x 9-1/2" Long
124	863127	Pivot Pin, Bucket Cyl. Base, 1-1/2" Dia. x 8-5/8" Long
125	861700	Seat Plate Weldment
128	861708	Lever Bracket
130	863165	Right Hand Joystick Weldment
131	863170	Left Hand Joystick Weldment
132	861720	Seat Bracket Weldment
133	863121	Pivot Pin, 1" Dia. x 4-9/16" Long
134	863135	Front Shroud Weldment with Decals
135	8554	Cotter Pin, 3/32" x 1/4" (service only)
136	13436	Clevis Pin, 1/4" Dia. x 7/8" (service only)
137	13473	Pin Retainer - Small
138	851141	Pivot Pin, Stabilizer Pad, 7/8" Dia. x 7-9/16" Long
139	14167	Hose Sleeve, FC425-20 x 28" Long
140	12907	Food Pad Surfacing, 3" x 3"
141	12913	Foot Pad Surfacing, 10" x 10"
142	11973	Bronze Bearing
143	863175	RH Pivot Weldment
144	863180	LH Pivot Weldment
145	863184	Bushing
146	14024	Ball Joint - Shouldered
147	6805	Bolt, 5/16 NC x 1-3/4"
148	7897	Pipe Plug (not shown)
149	11105	Adapter Union, 1/2 NPTM x 1/2 NPTF x 90° Long

# CONTROL TOWER AREA


NOTE: TORQUE: BOLTS (17) & (19) TO 165 IN-LBS. (+20%). IN ADDITION, USE LOCK WIRE TO SECURE THIS IN CONTROL LINKAGE ASSEMBLY.

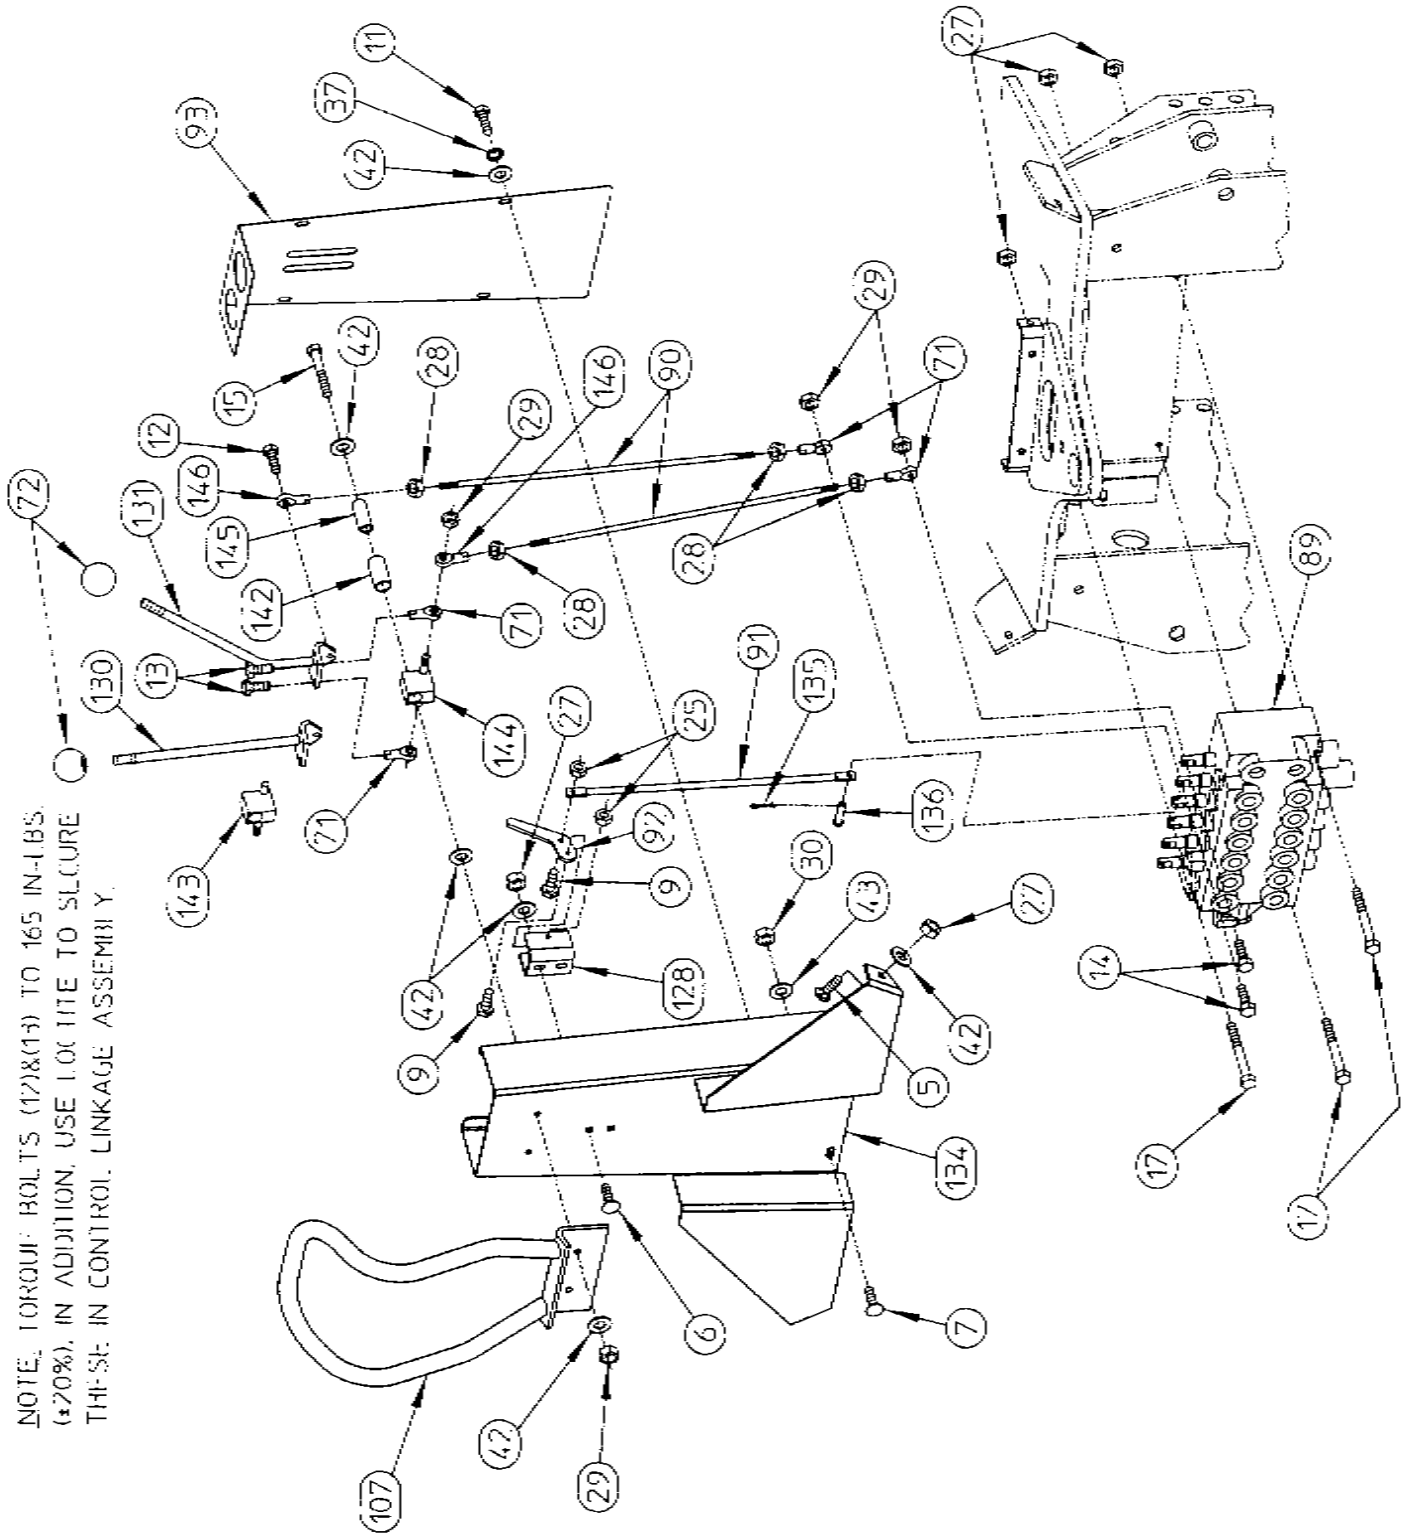


# STABILIZER LEG AREA

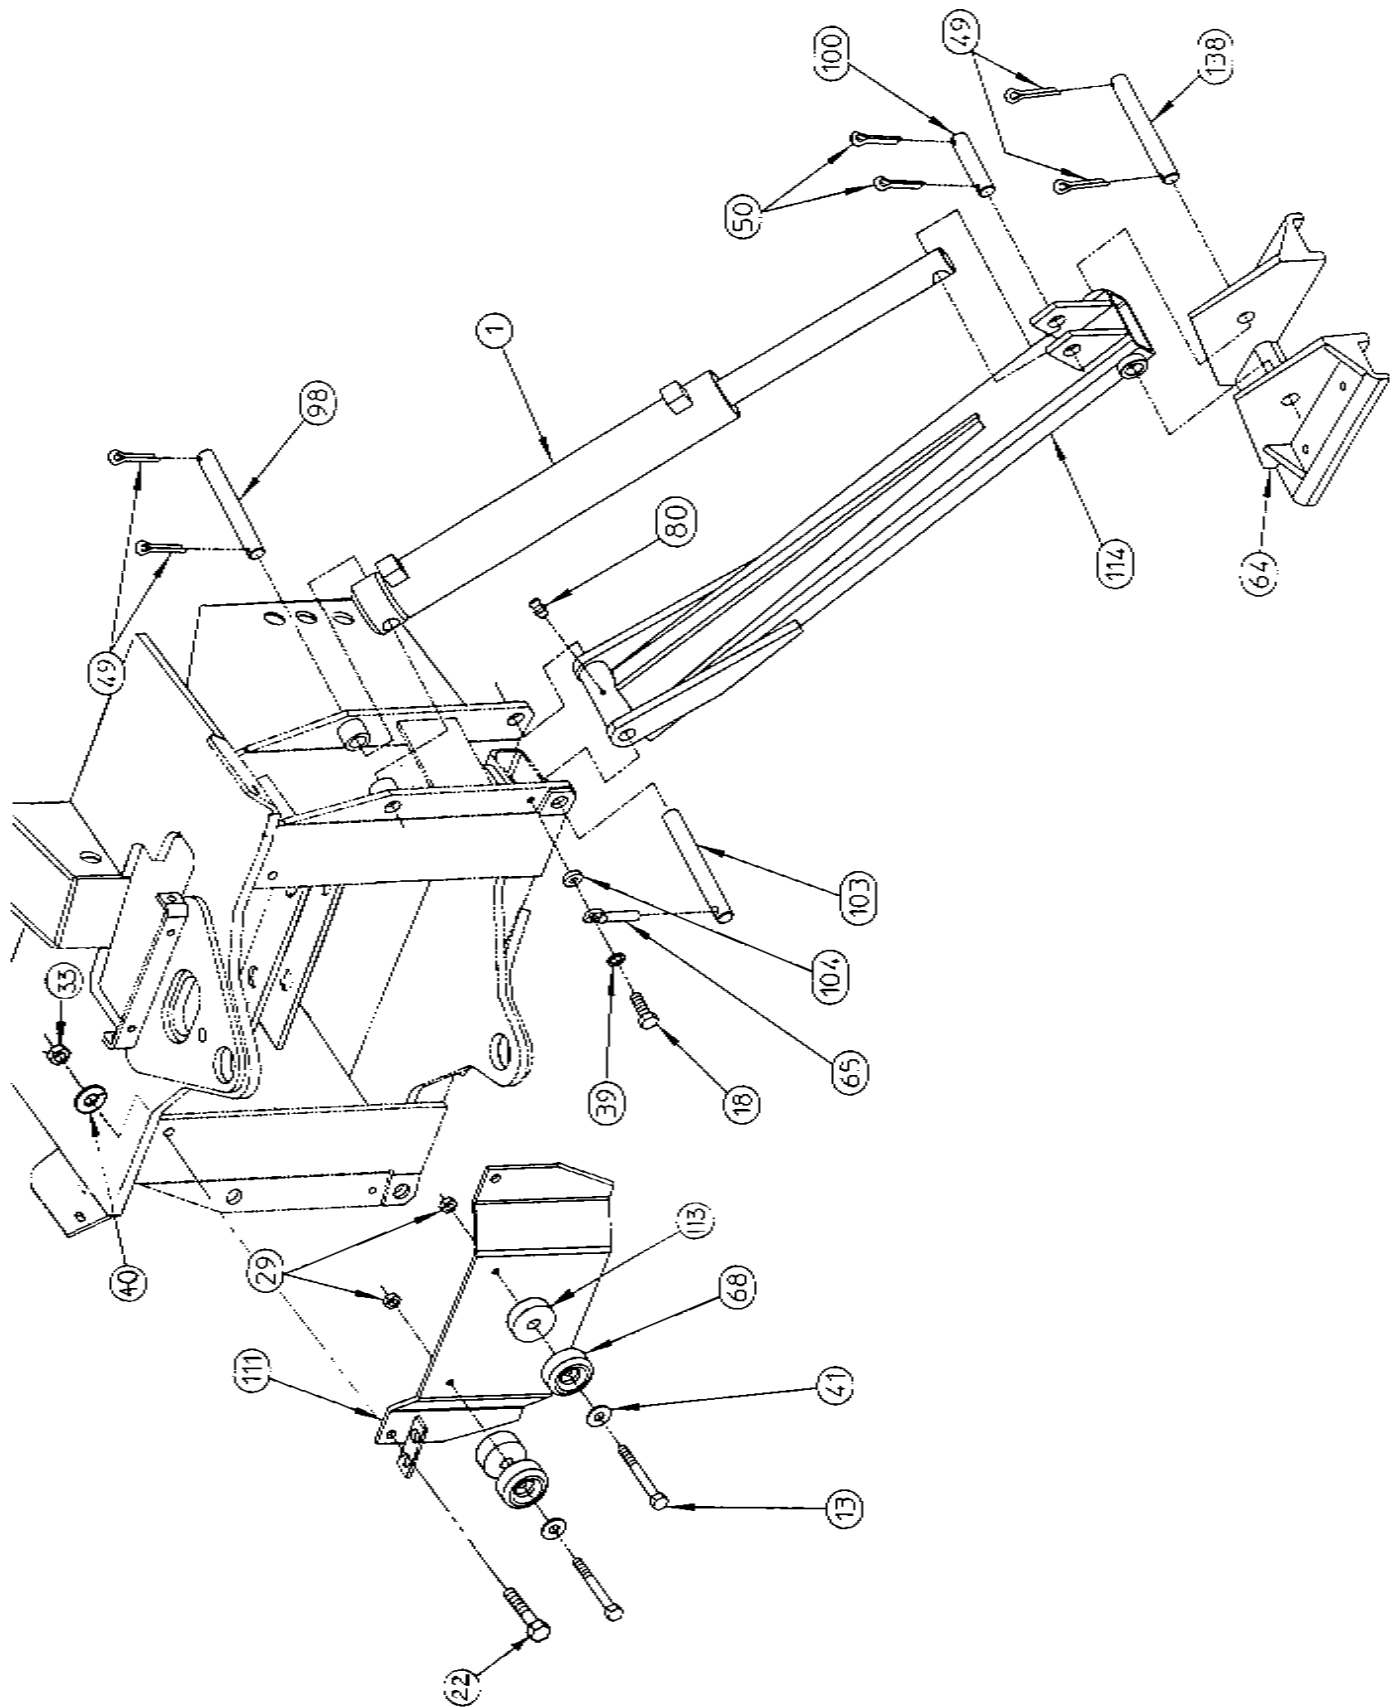


# SWING SYSTEM AREA

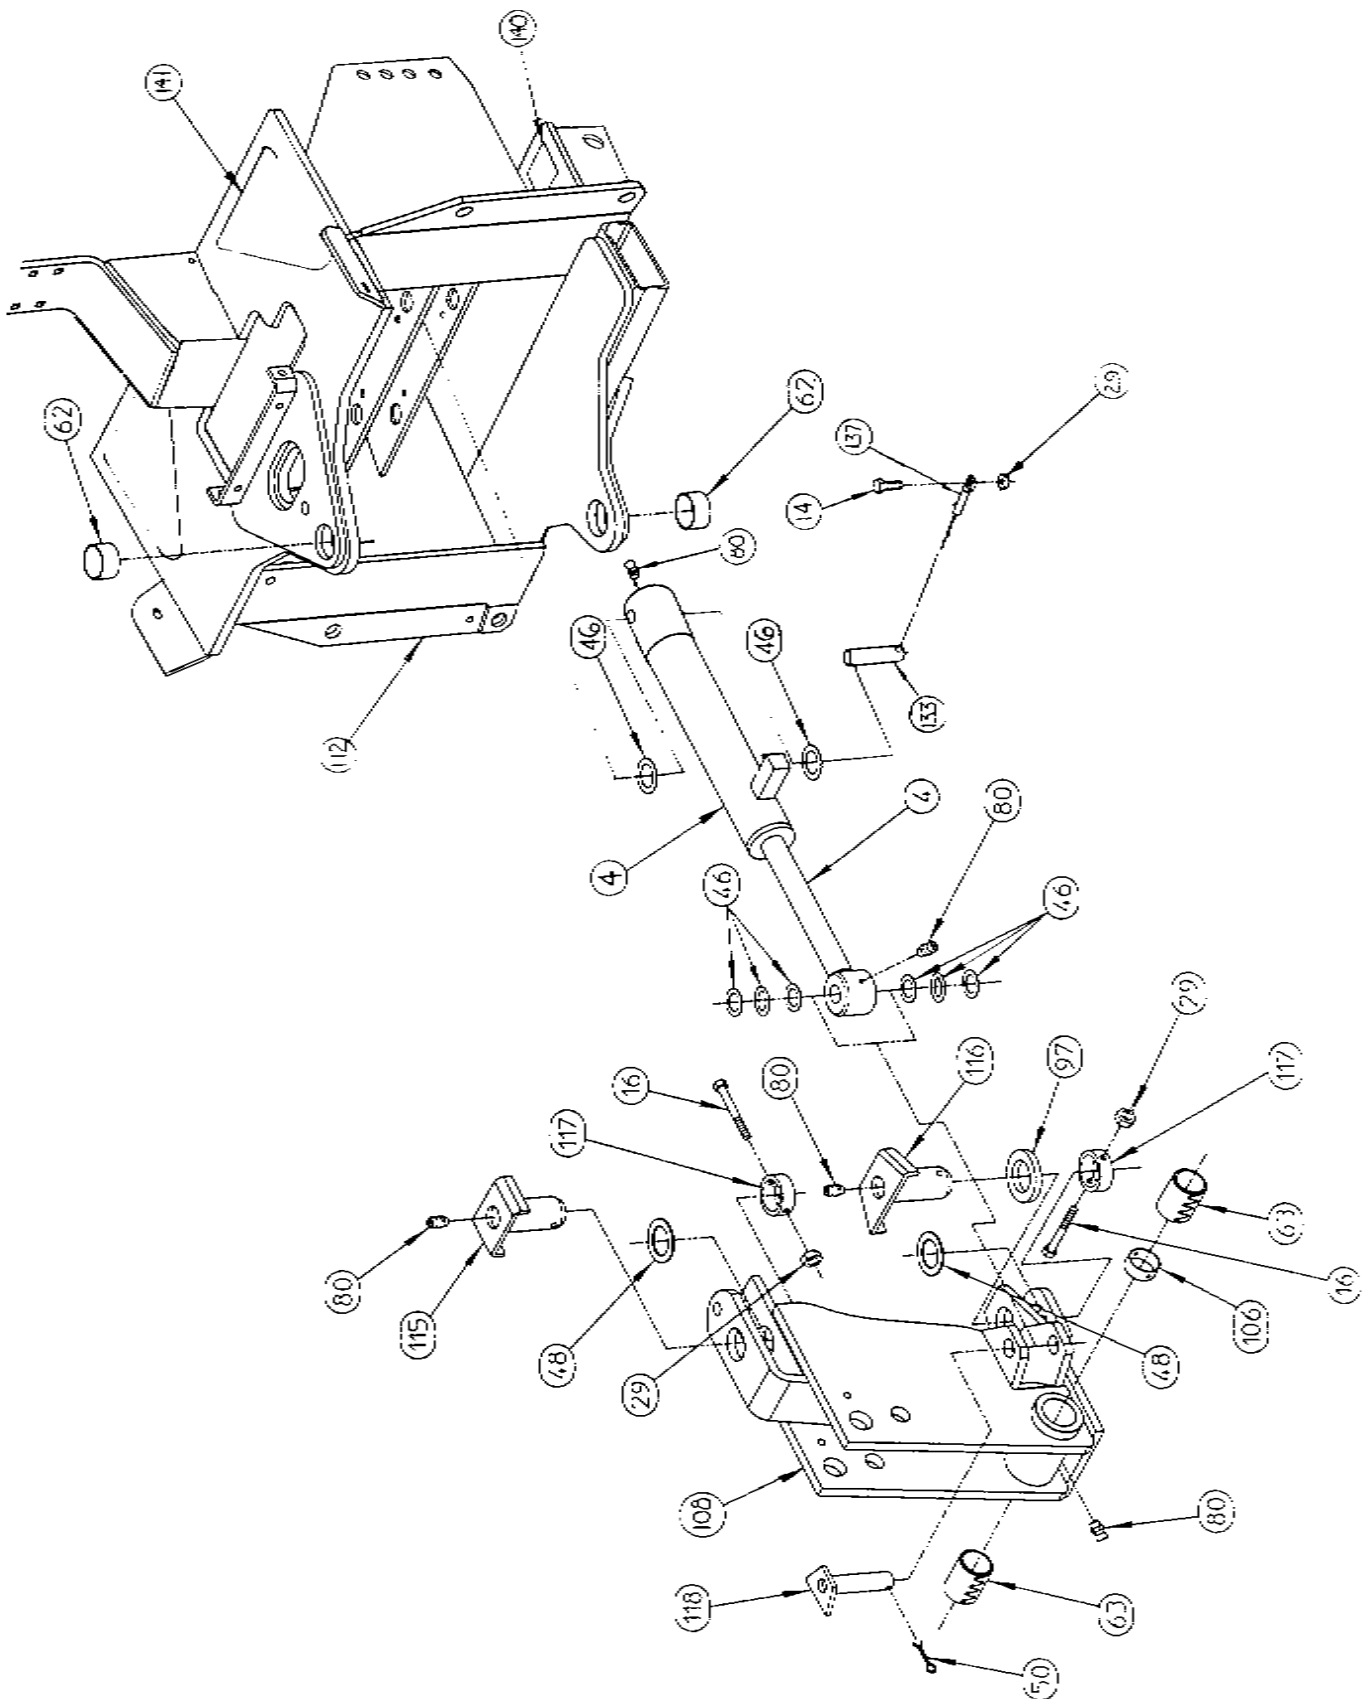

# BOOM, DIPPERSTICK, AND BUCKET AREA

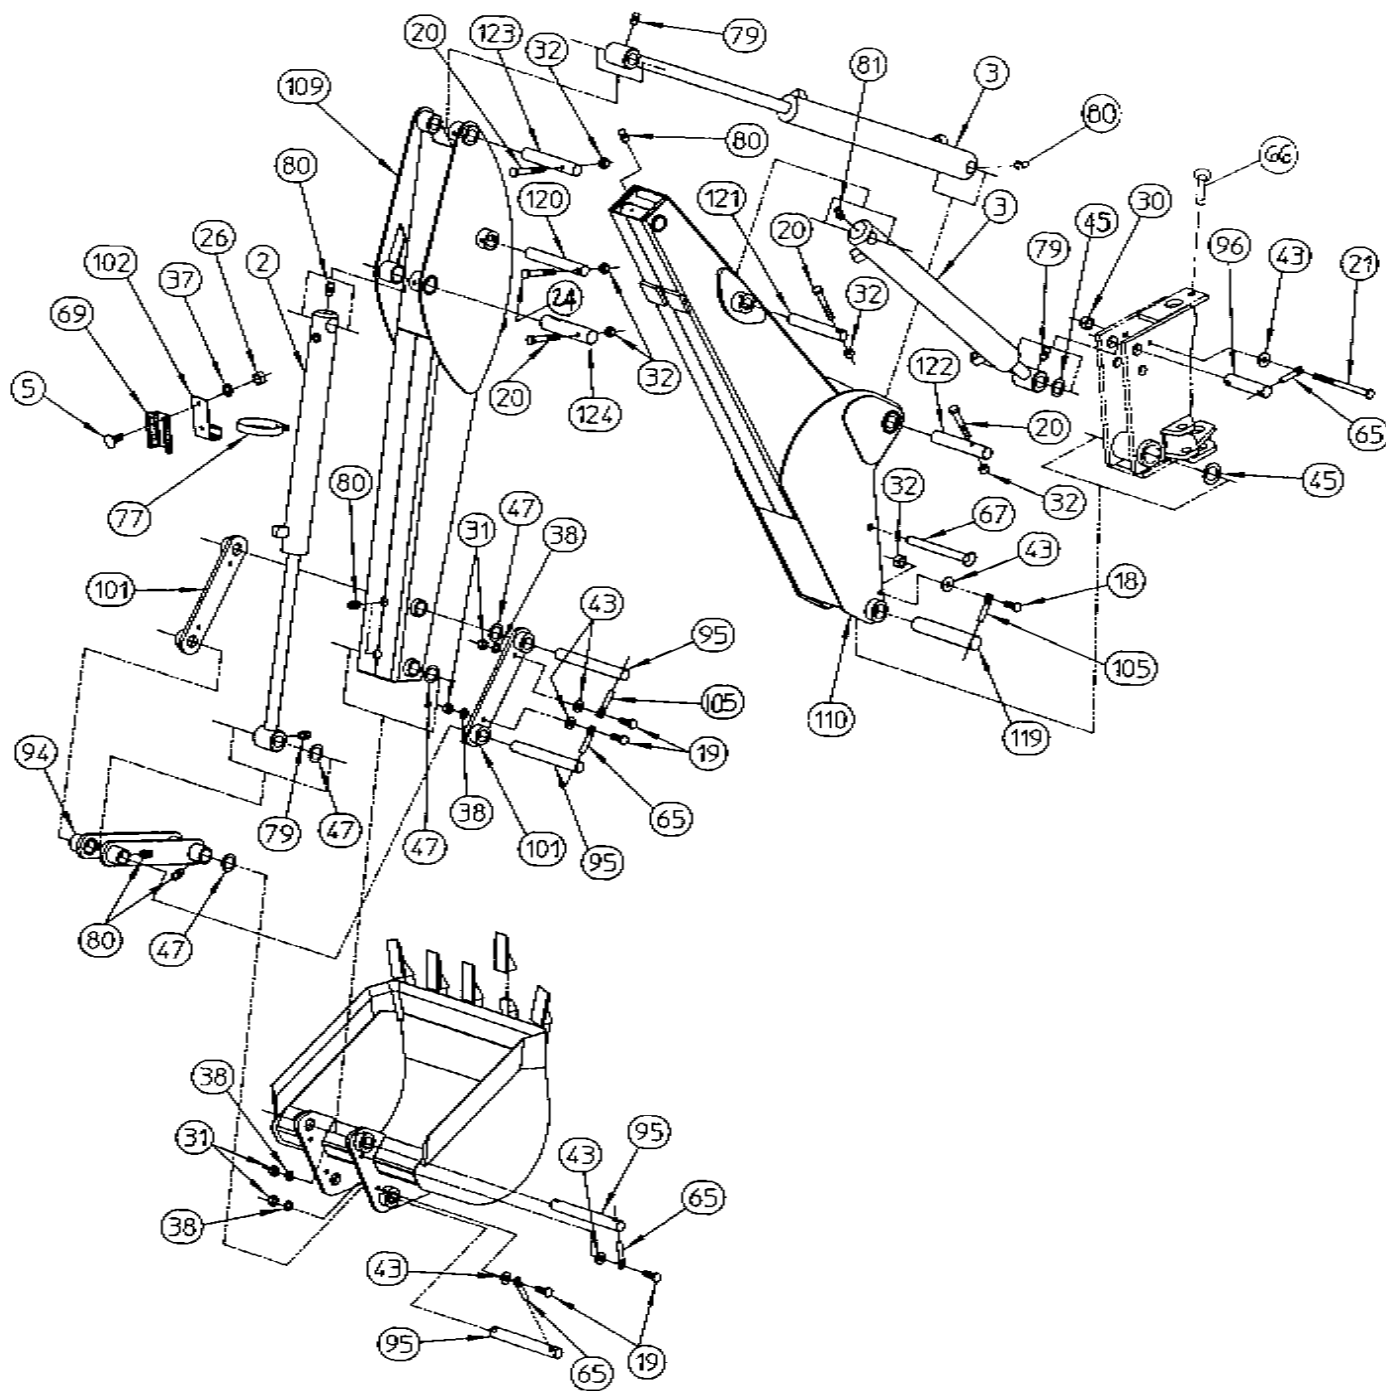


# HYDRAULIC PLUMBING

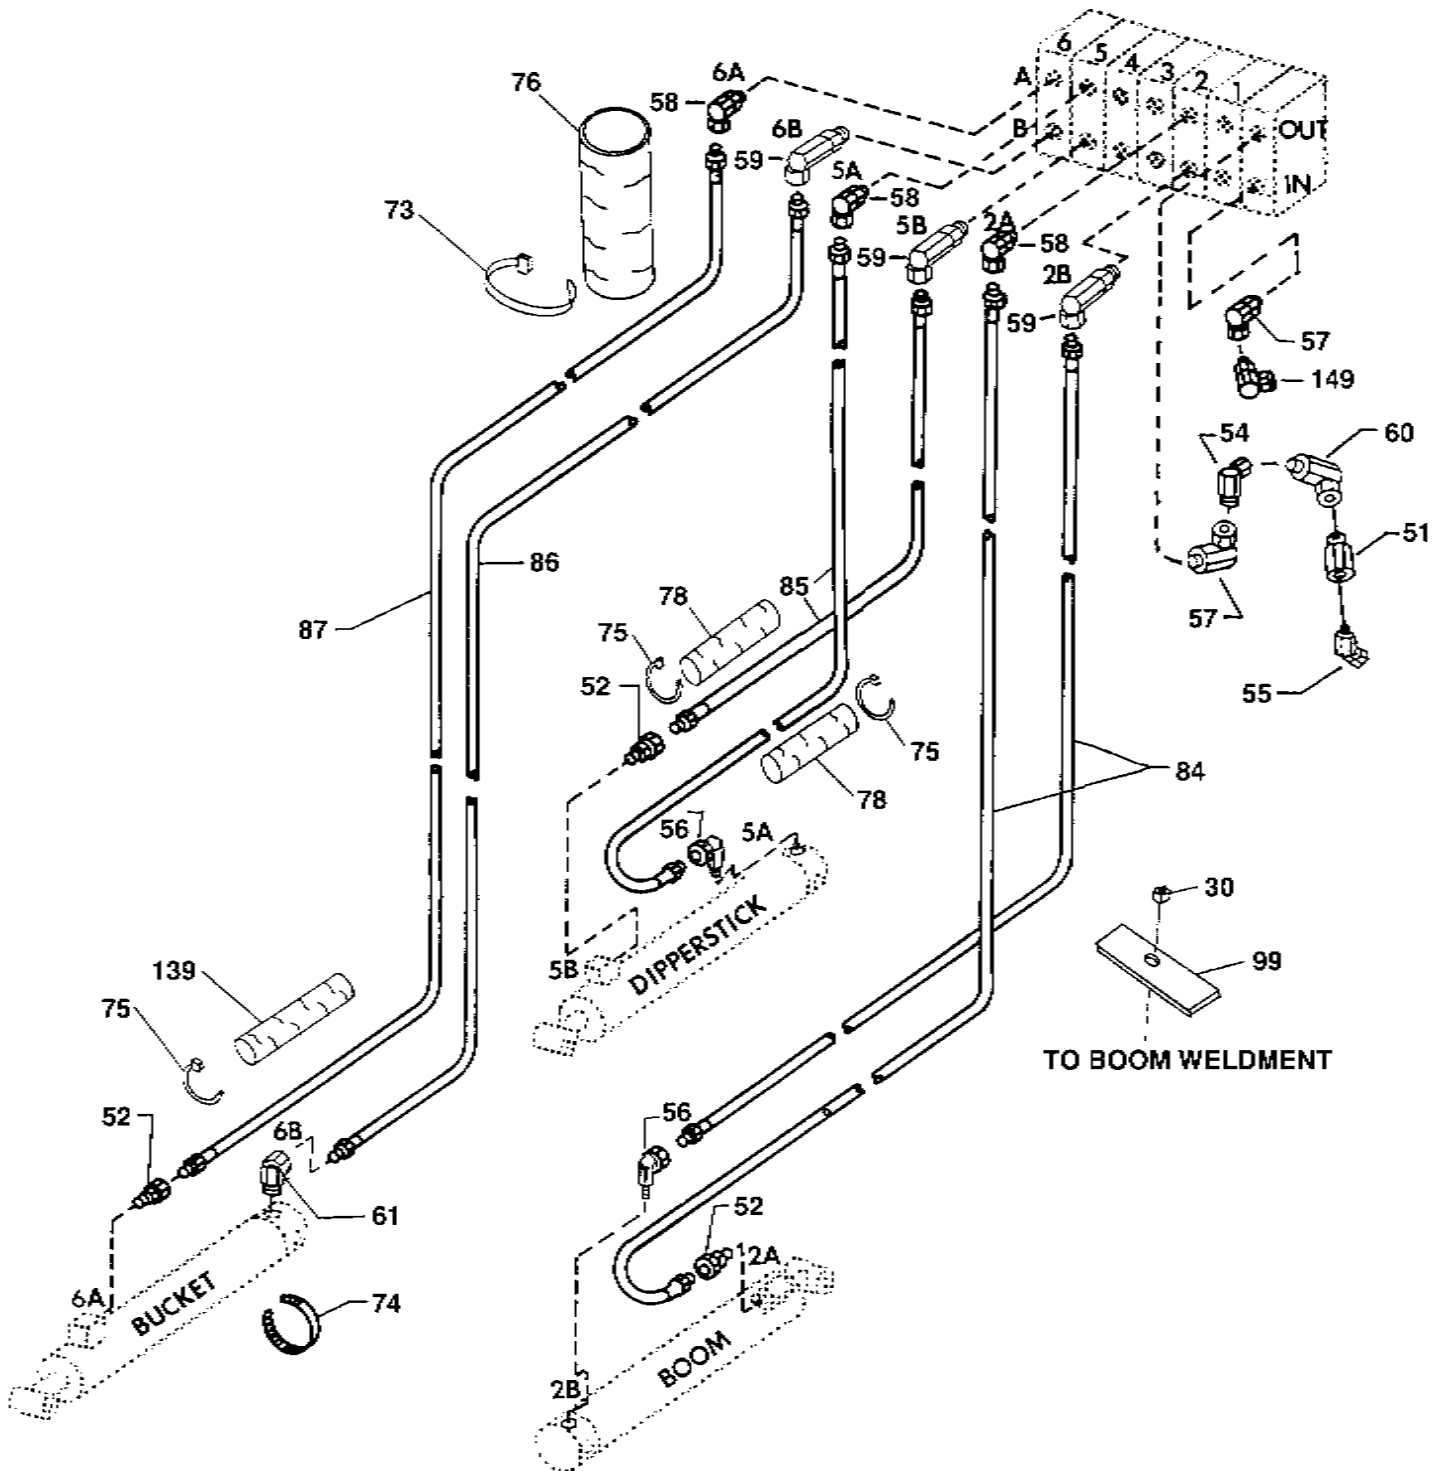



# HYDRAULIC PLUMBING

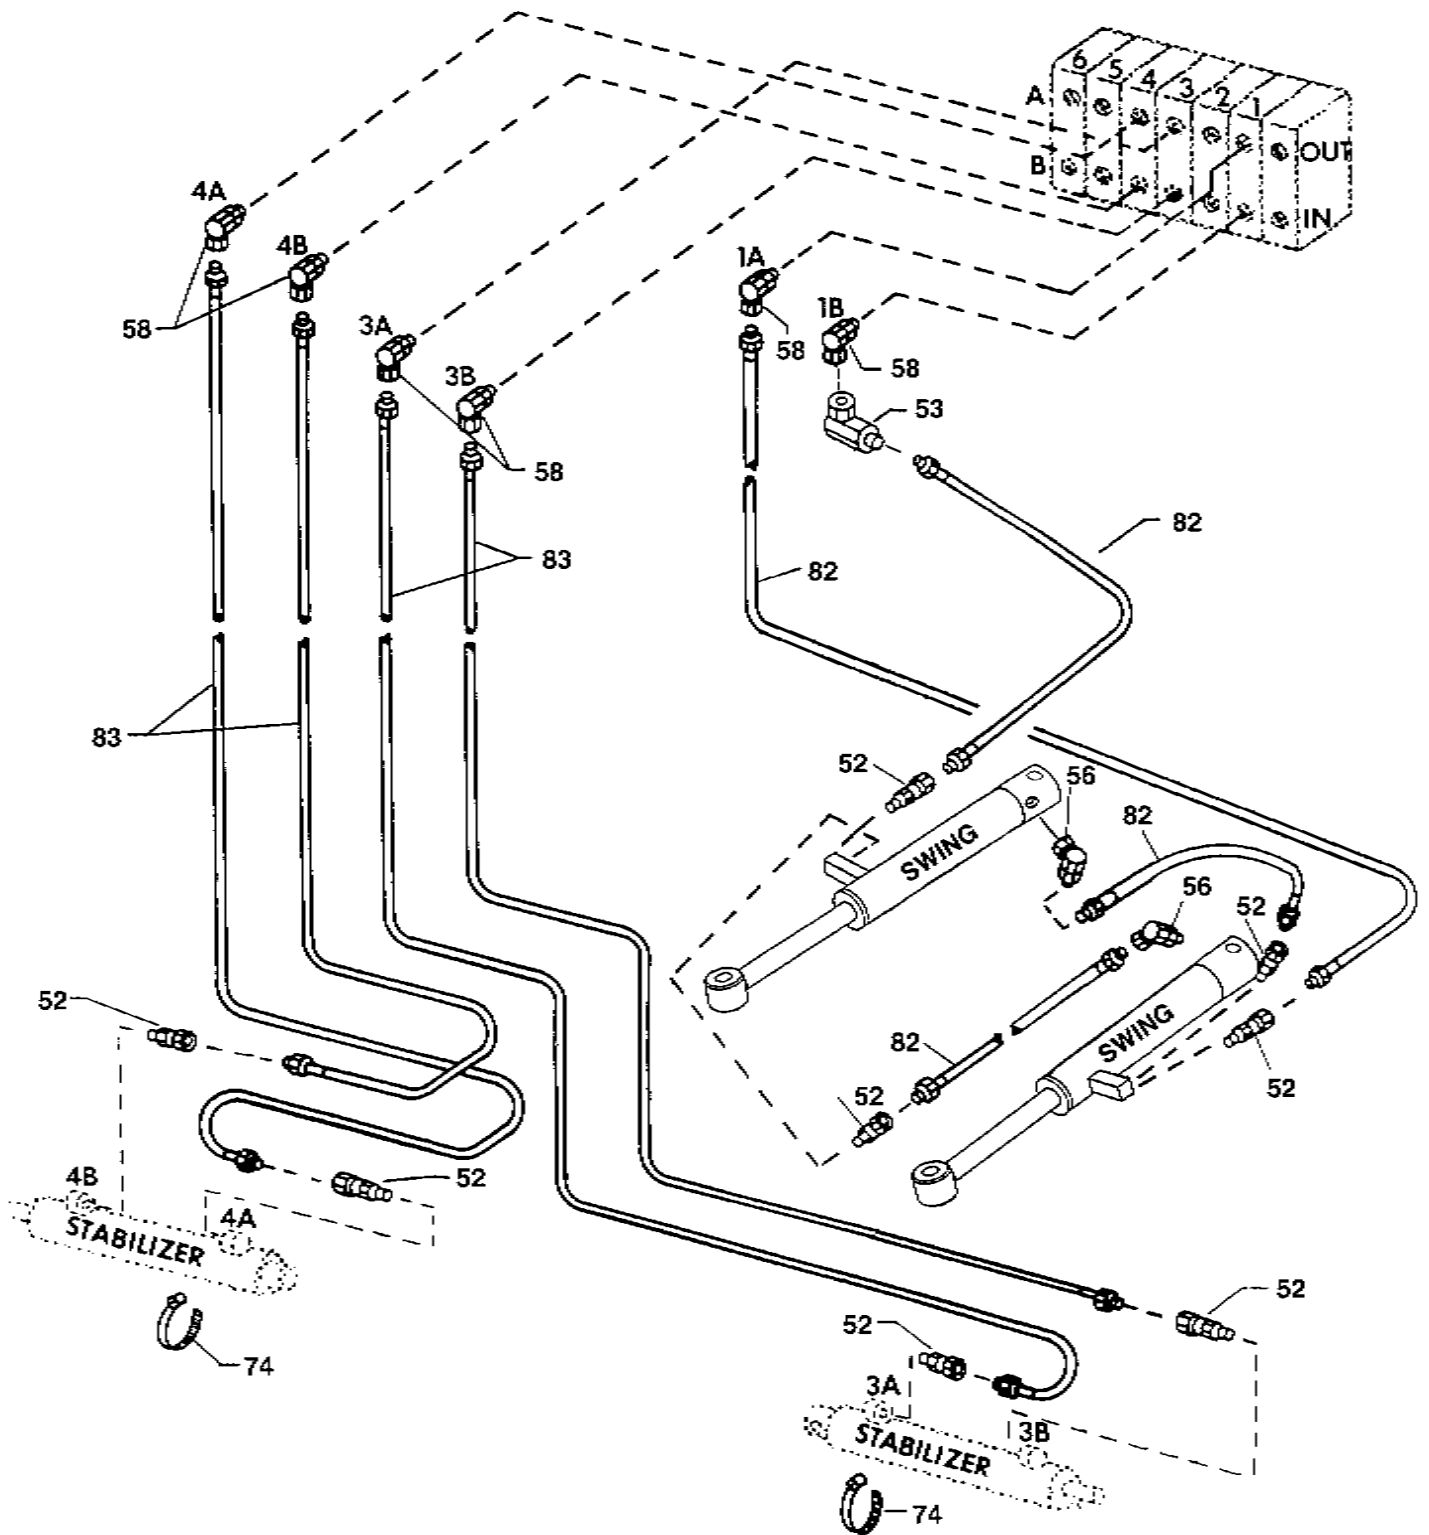

**HYDRAULIC CYLINDERS - PARTS LIST**  
(9.6 FOOT BACKHOE)

Index	Description	Stabilizer	Swing	Bucket	Boom & Dipper
		182:	193:	194:	196:
1	Nut, 7/8 NF Nyloc	7609	7609		
2	Nut, 1" NF Nyloc			7616	7616
3	Oil Seal, 1-7/8 OD x 1-1/2 ID	*			
4	Buffer Seal		*	*	*
5	U-Cup Seal		*	*	*
6	Cylinder Piston		11687		
7	Cylinder Piston	11688		11688	
8	Cylinder Piston				11682
9	O-Ring, 2-1/4 OD x 2-1/16 ID		*		
10	O-Ring, 2-9/16 OD x 2-3/8 ID			*	
11	O-Ring, 3" OD x 2-3/4 ID				*
12	O-Ring, 2-1/2 OD x 2-5/16 ID	*			
13	O-Ring, 1-3/4 OD x 1-1/2 ID	*			
14	Back-Up Ring, 2.253 x 2.081 ID		*		
15	Back-Up Ring, 2.503 x 2.331 ID	*			
16	Back-Up Ring, 1-3/4 OD x 1-1/2 ID	*			
17	Back-Up Ring, 2.565 OD x 2.393 ID			*	
18	Back-Up Ring, 2.992 OD x 2.756 ID				*
19	Wear Ring		*	*	*
20	Wiper Seal		*	*	*
21	Retaining Ring, Internal	*			
22	Cylinder Tube Weldment	908050	904995	908125	906250
23	Cylinder Rod	908061	904990	908130	906255
24	Gland with O-Rings and Back-Ups, etc.	905420	904980	908135	906265
25	Bronze Bearing, 1" ID x 1-1/4 OD x 1-3/4		11975		
26	For Complete Cylinder, order	182	193	194	196
27	Seal Repair Kit for One Cylinder (less piston)	908105	904955	908140	906270
28	Seal Repair Kit for One Cylinder with Piston	908120	904985	908145	906275

\*Not available as a separate repair part - order Seal Repair Kit





IMPORTANT- Replace cylinder nut (1) any time nut must be removed, and torque to proper value shown.

**Cylinder Data:**


CYLINDER	PISTON DIA.	STROKE	RETRACTED LENGTH	EXTENDED LENGTH	ROD DIA.	PIVOT PIN DIA.	TYPE OF ACTION
*196 - BOOM	3"	24f"	34"	58f"	1f"	1f"	DA
*196 - DIPPER	3"	24f"	34"	58f"	1f"	1f"	DA
194 - BUCKET	2f"	21"	30f"	51f"	1f"	1f" BASE END 1/2" ROD END	DA
182 - STABILIZER	2f"	15 15/16"	22 1/16"	37 7/8"	1f"	7/8"	DA
193 - SWING	2"	10"	17"	27"	1/2"	1" ROD END	DA

\*Identical cylinders used for both functions.

# HYDRAULIC CYLINDERS

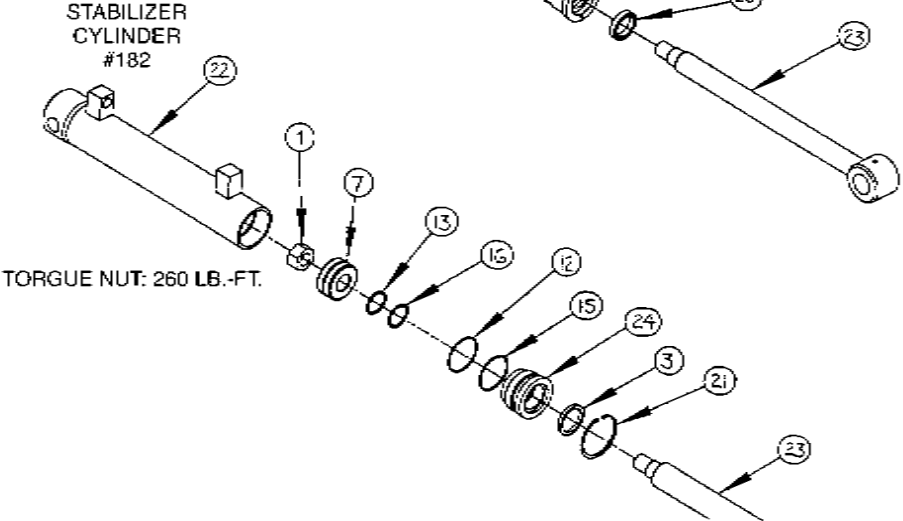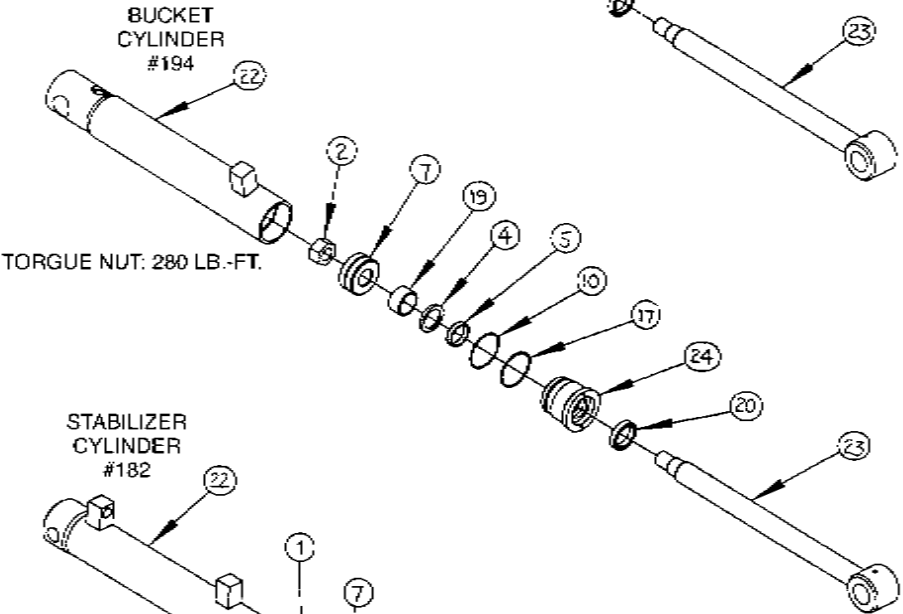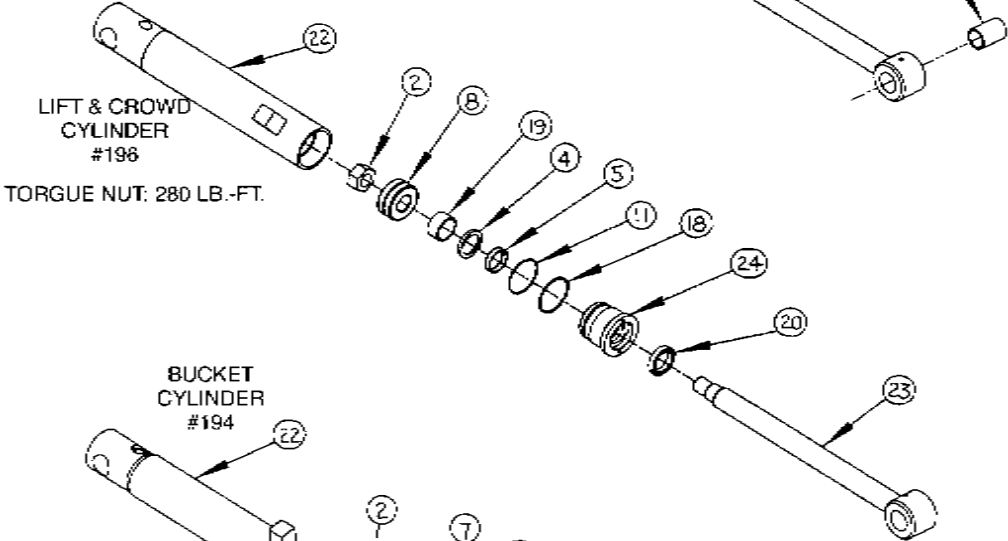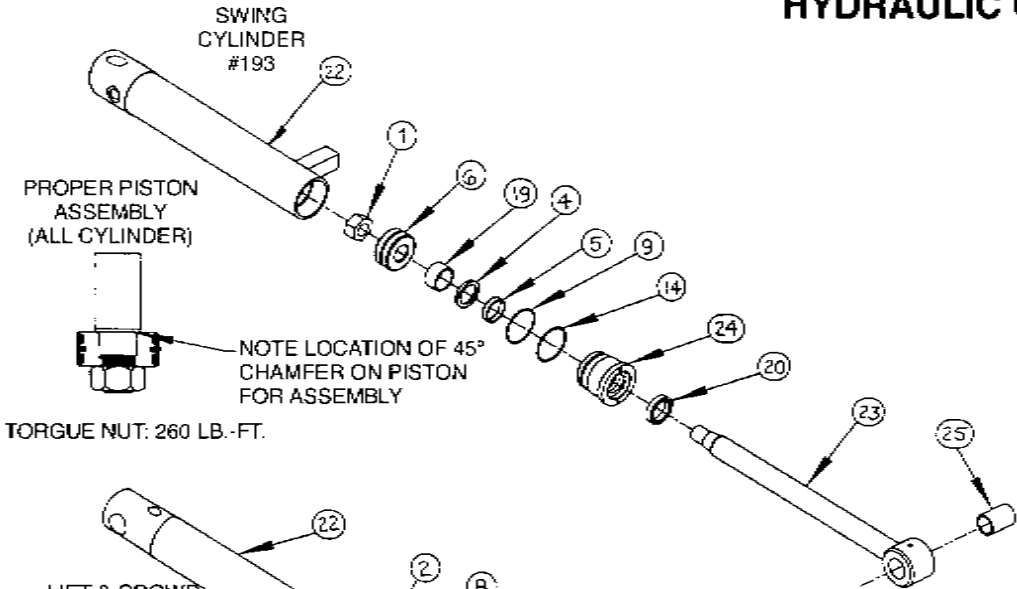

# BACKHOES - DIMENSIONS AND SPECIFICATIONS

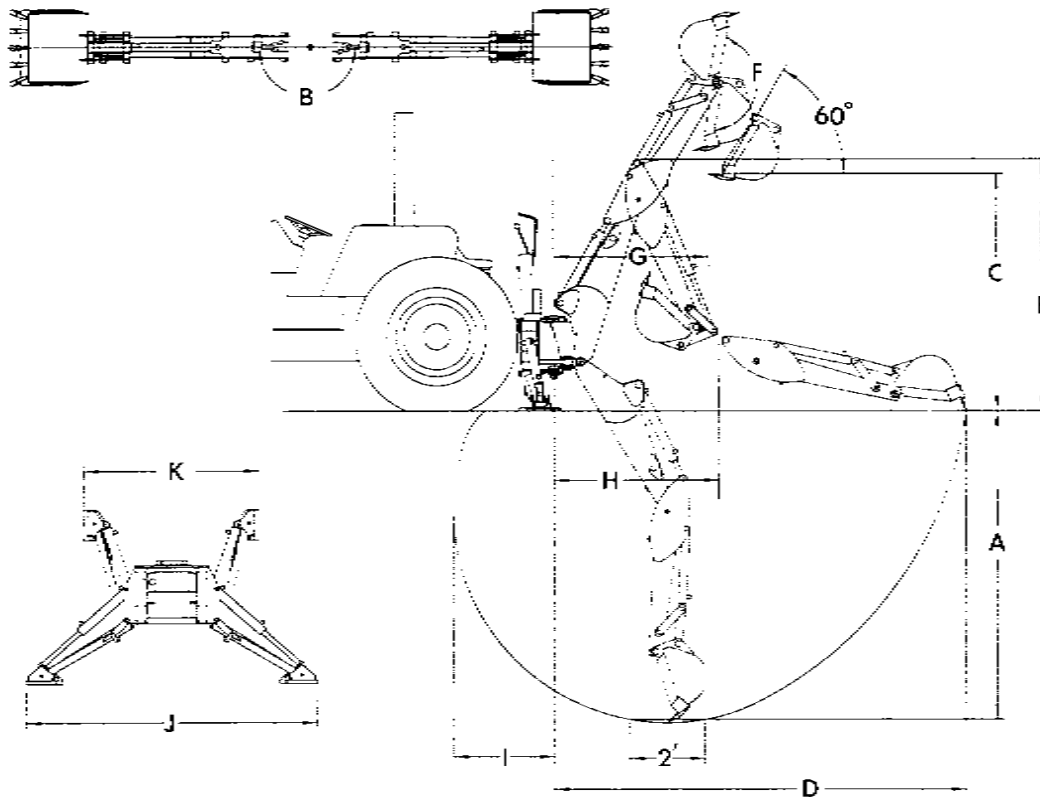


## SERIES

<b>Maximum Digging Depth</b>	10'1"
<b>A. Digging Depth (two foot flat bottom)</b>	9'7"
<b>B. Swing Arc</b>	180°
<b>C. Loading Height (bucket at 60°)</b>	7'8"
<b>D. Reach from Center Line of Swing Pivot</b>	12'5"
<b>E. Transport Height (maximum)</b>	7'10"
<b>F. Bucket Rotation</b>	180°
<b>G. Loading Reach (bucket at 60°)</b>	4'11"
<b>H. Transport Overhang</b>	5'1"
<b>I. Undercut</b>	2'11"
<b>J. Stabilizer Spread, down position</b>	9'3"
<b>K. Stabilizer Spread, up position</b>	6'0"
<b>Bucket Cylinder Digging Force</b>	4575 lbs.
<b>Dipperstick Cylinder Digging Force</b>	3175 lbs.
<b>Shipping Weight (less bucket)</b>	1620 lbs.
<b>Hydraulic Volume Requirements</b>	6 to 9 GPM
<b>Hydraulic Pressure Requirements</b>	2400 PSI
<b>Recommended Tractor HP Requirements</b>	55 - 100 HP

*Specifications May Vary Depending on Tractor Model and are Subject to Change Without Notification. Tractors Must Be Equipped with ROPS and Seat belt That Will Provide Better Safety.*

# MAIN SYSTEM RELIEF VALVE (2250 PSI)

Location: Left Hand Valve Cover

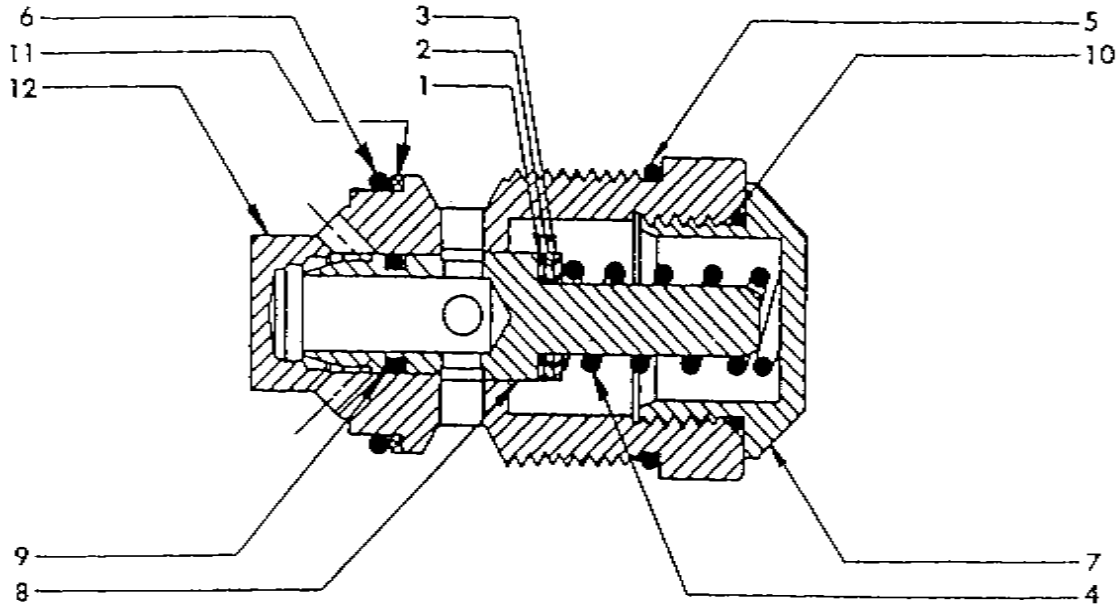

Ref. No.	Part No.	Qty.	Description
1	*	1	Shim, .040 thick
2	*	A/R	Shim, .020 thick
3	*	1	Shim, .010 thick
4	*	1	Spring (2201-3000 PSI crack)
5	**	1	O-Ring seal
6	**	1	O-Ring seal
7	*	1	Relief Cap
8	**	1	Relief poppet
9	**	1	Piston ring
10	**	1	O-Ring seal
11	**	2	Back-up washer
12	*	1	Body
	23083	1	Main system relief valve, consisting of above listed parts
	10172	1	Seal and service kit, consisting of: (1) #5, (1) #6, (1) #8, (1) #9, (1) #10, and (1) #11


Part No.	Qty.	Description
23084	1	Left hand end cover with main relief valve
10160	1	Tie rod kit (six spool) contains three studs and three stud nuts
10176	1	Valve seal kit, containing all O-Rings and back-up rings for a six spool valve
23082	1	Six spool valve
10308	1	Right hand end cover
23023	1	Section seal kit

\*Not available as a separate repair part, order complete main system relief valve.

\*\*Not available as a separate repair part, order seal and service kit

# CONTROL VALVE SECTION

Typical Section for Bucket Circuit

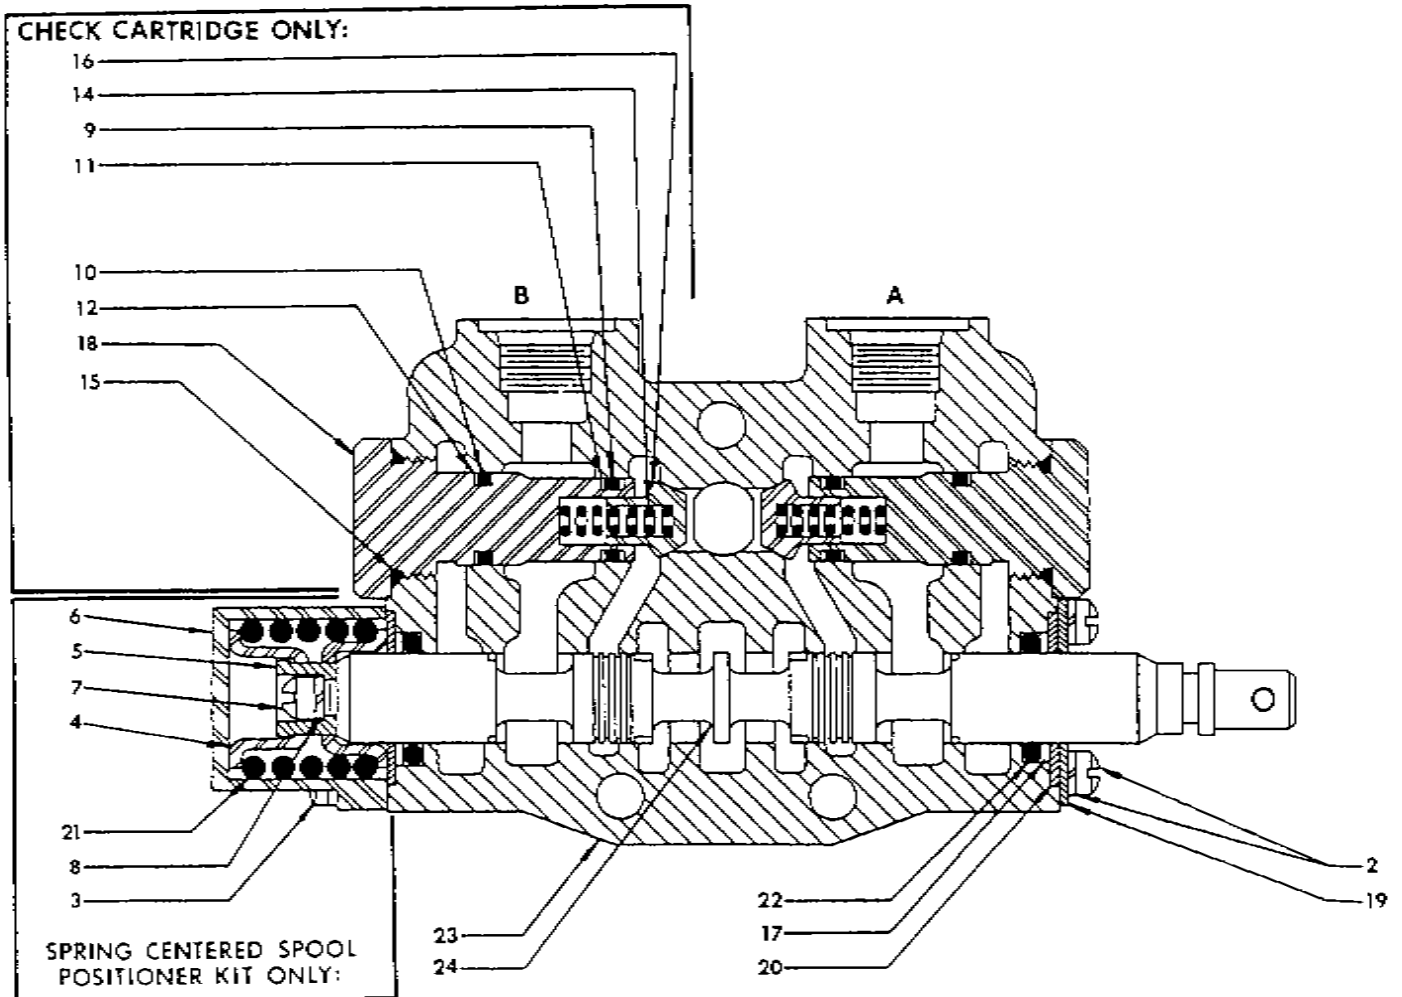

# CONTROL VALVE SECTION

Typical Section for Bucket Circuit

Ref. No.	Part No.	Qty.	Description
2	*	2	Machine screw & lockwasher
3	***	2	Bonnet screw
4	***	2	Stop collar
5	***	1	Spool collar
6	***	1	Bonnet
7	***	1	Spool assembly screw
8	***	1	Spool asmy. screw lockwasher
9	**	2	Check plug O-ring seal (inner)
10	**	2	Check plug O-ring seal (outer)
11	**	4	Back-up washer (inner)
12	**	2	Back-up washer (outer)
14	*	2	Lift check spring
15	**	2	Lift check spring O-ring seal
16	*	2	Lift check poppet
17	**	2	Back-up washer
18	*	2	Lift check plug
19	10321	1	Seal plate retainer
20	10322	2	Seal retainer
21	***	1	Centering spring
22	**	2	Spool O-ring seal
23	*	1	Center section housing
24	*	1	Four-way spool

Part No.	Qty.	Description
23073	1	Control valve section-Bucket circuit consisting of above listed parts
10315	1	Control valve section seal kit - Bucket circuit, consisting of: (2) #22, (2) #9, (2) #10, (4) #11, (2) #12, (2) #15, (2) pressure section seal, and (2) exhaust section seal.
10316	1	Spool seal kit, consisting of: (2) #22 & (2) #17.
10305	2	Check cartridge, as shown.
10313	2	Check cartridge seal kit, consisting of: (1) #9, (1) #10, (2) #11, (1) #12, and (2) #15.
10107	1	Spring centered spool positioner kit, as shown.


\* Not available as a separate repair part, order complete section or cartridge.

\*\* Not available as a separate repair part, order seal kit.

\*\*\* Not available as a separate repair part, order spool positioner kit as shown.

# CONTROL VALVE SECTION

Typical Section for Crowd Circuit

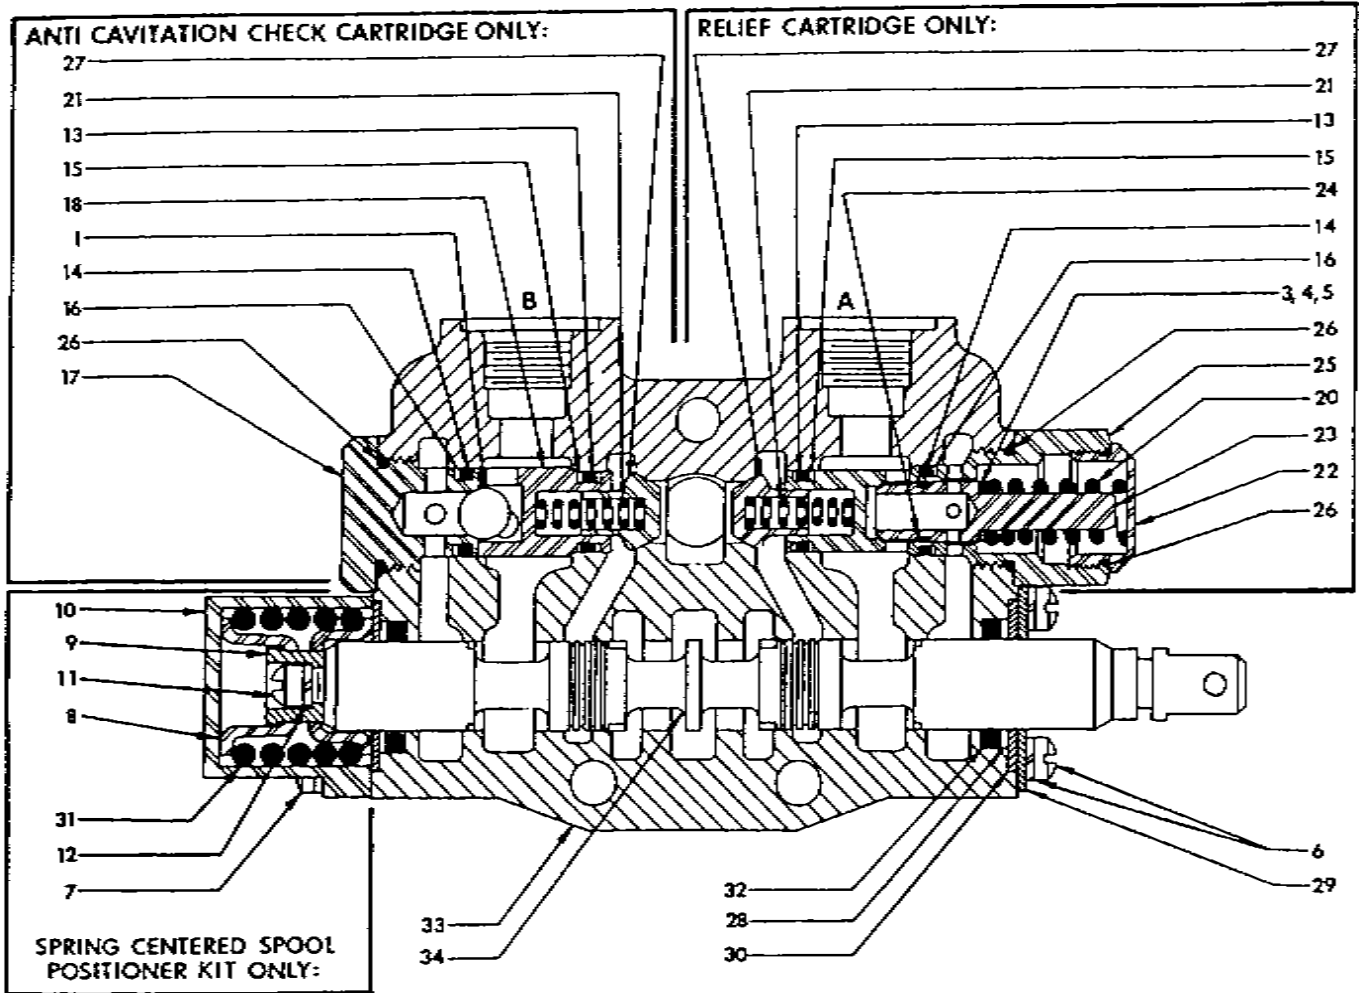



# CONTROL VALVE SECTION

Typical Section for Crowd Circuit

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	*	1	7/16" Steel ball	20	*	1	Spring (2001-3000 PSI crack)
3,4,5	*	A/R	Shim (.010", .020", .040" thick)	21	*	2	Check spring
6	*	2	Machine screw & lockwasher	22	*	1	Relief cap
7	***	2	Bonnet screw	23	**	1	Relief poppet
8	***	2	Stop collar	24	**	1	Piston ring
9	***	1	Spool collar	25	*	1	Relief body
10	***	1	Bonnet	26	**	2	O-Ring seal
11	***	1	Spool asmy. screw	27	*	2	Steel check
12	***	1	Spool asmy. screw lockwasher	28	**	2	Back-up washer
13	**	2	O-Ring seal (inner)	29	10321	1	Seal plate retainer
14	**	2	O-Ring seal (outer)	30	10322	2	Seal retainer
15	**	4	Back-up washer (inner)	31	***	1	Centering spring
16	**	2	Back-up washer (outer)	32	**	2	Spool O-Ring seal
17	*	1	Anti-cavitation check body	33	*	1	Center section housing
18	*	1	Check ball retainer	34	*	1	Four-way spool

Part No.	Qty.	Description
23076	1	Control Valve Section - Crowd Circuit, consisting of above listed parts.
10315	1	Control Valve Section Seal Kit - Crowd Circuit, consisting of: (2) #32, (2) #13, (2) #14, (4) #15, (2) #16, (2) #26, (2) pressure section seal, and (2) exhaust section seal.
10316	1	Spool Seal Kit, consisting of: (2) #32 and (2) #28.
10303	1	Relief Cartridge (2500 PSI) as shown.
10313	1	Relief Cartridge Seal Kit, consisting of: (1) #13, (1) #14, (2) #15, (1) #16, and (2) #26.
10177	1	Poppet Seal Kit, consisting of: (1) #23 and (1) #24.
10304	1	Anti-Cavitation Check Cartridge, as shown.
10313	1	Anti-Cavitation Check Seal Kit, same as Relief Cartridge Seal Kit listed above.
10107	1	Spring Centered Spool Positioner Kit, as shown.


\* Not available as a separate repair part, order complete section or cartridge.

\*\* Not available as a separate repair part, order seal kit.

\*\*\* Not available as a separate repair part, order spool positioner kit.

# CONTROL VALVE SECTION

Typical Section for Lift Circuit

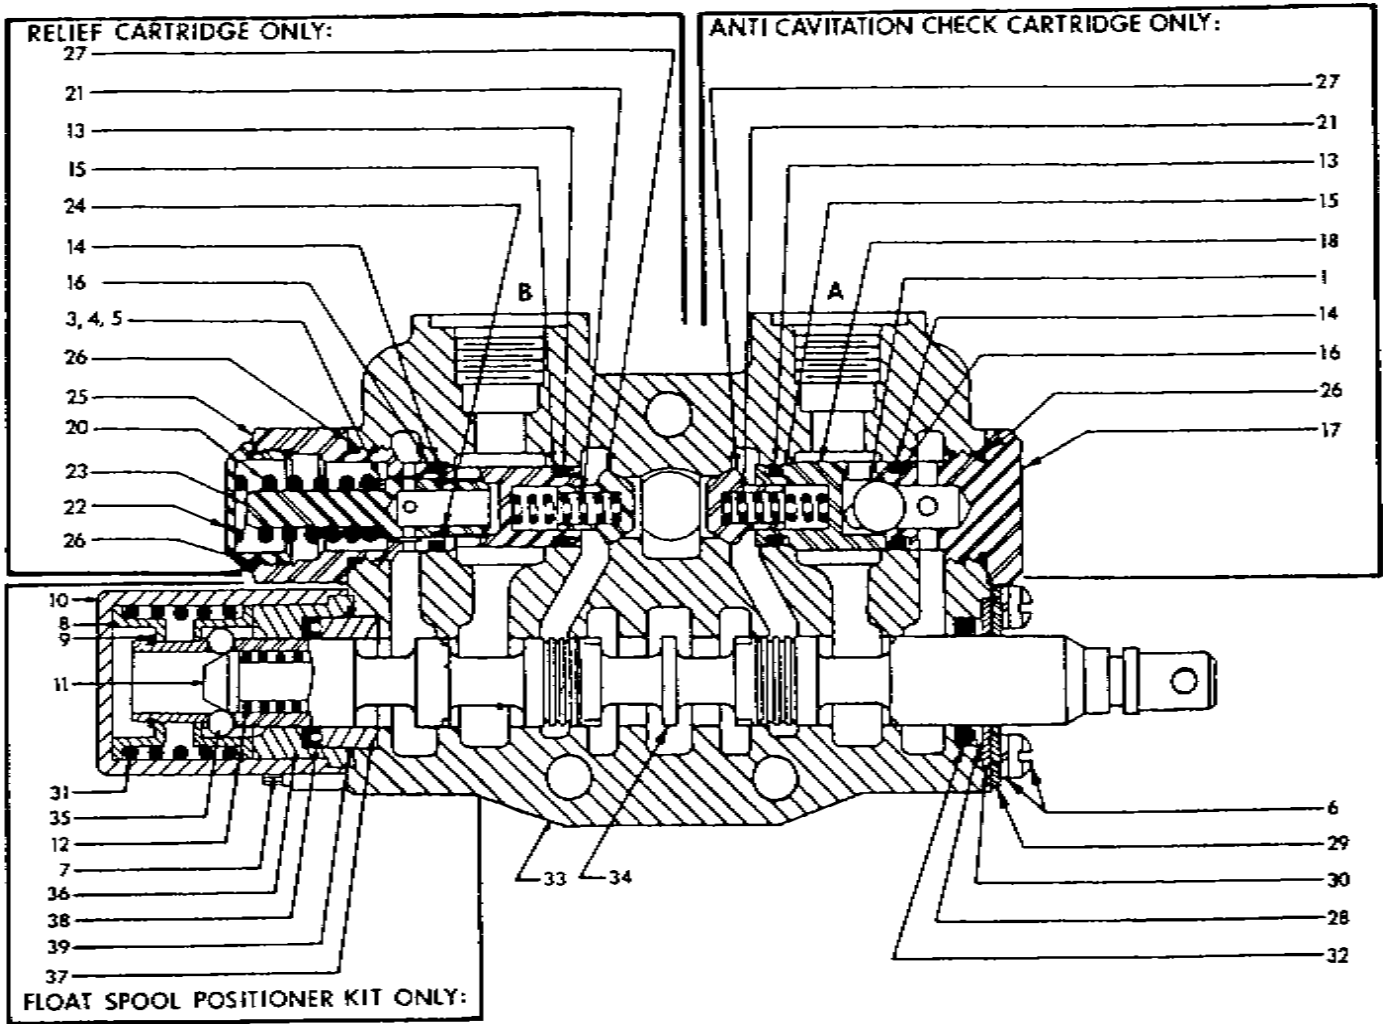

# CONTROL VALVE SECTION

Typical Section for Lift Circuit

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	*	1	7/16" Steel ball	23	**	1	Relief poppet
3,4,5	*	A/R	Shim (.010", .020", .040" thick)	24	**	1	Piston ring
6	*	2	Machine screw & lockwasher	25	*	1	Relief body
7	***	2	Bonnet screw	26	*	3	O-Ring seal
8	***	2	Stop collar	27	*	2	Steel check
9	***	1	Retaining ring	28	**	2	Back-up washer
10	***	1	Bonnet	29	10321	1	Seal plate retainer
11	***	1	Detent ball follower	30	10322	2	Seal retainer
12	***	1	Detent spring	31	***	1	Centering spring
13	**	2	O-Ring seal (inner)	32	**	2	Spool O-Ring seal
14	**	2	O-Ring seal (outer)	33	*	1	Center section housing
15	**	4	Back-up washer (inner)	34	*	1	Four-way spool
16	**	2	Back-up washer (outer)	35	***	4	Detent ball
17	*	1	Anti-cavitation check body	36	***	1	Float sleeve
18	*	1	Check ball retainer	37	***	1	Retaining sleeve
20	*	1	Spring (2001-3000 PSI crack)	38	**	1	U-cup seal
21	*	2	Check spring	39	**	1	O-Ring seal
22	*	1	Relief cap				

Part No.	Qty.	Description
23079	1	Control Valve Section - Lift Circuit, consisting of above listed parts. Note, one orifice plate (.095") must be added to "A" port to complete lift section.
10516	1	Control Valve Section Seal Kit - Lift Circuit, consisting of: (1) #32, (2) #13, (2) #14, (1) #28, (1) #38, (1) #39, (4) #15, (2) #16, (2) #26, (2) pressure section seal, and (2) exhaust section seal.
10517	1	Spool Seal Kit, consisting of: (1) #32, (1) #28, (1) #38, and (1) #39.
10303	1	Relief Cartridge (2500 PSI) as shown.
10313	1	Relief Cartridge Seal Kit, consisting of: (1) #13, (1) #14, (2) #15, (1) #16, and (2) #26.
10177	1	Poppet Seal Kit, consisting of: (1) #23 and (1) #24.
10304	1	Anti-Cavitation Check Cartridge, as shown.
10313	1	Anti-Cavitation Check Seal Kit, same as Relief Cartridge Seal Kit listed above.
10518	1	Float Spool Positioner Kit, as shown.
10193	1	Restrictor - .095".


\* Not available as a separate repair part, order complete section or cartridge.

\*\* Not available as a separate repair part, order seal kit.

\*\*\* Not available as a separate repair part, order spool positioner kit.

# CONTROL VALVE SECTION

Typical Section for Stabilizer Circuits

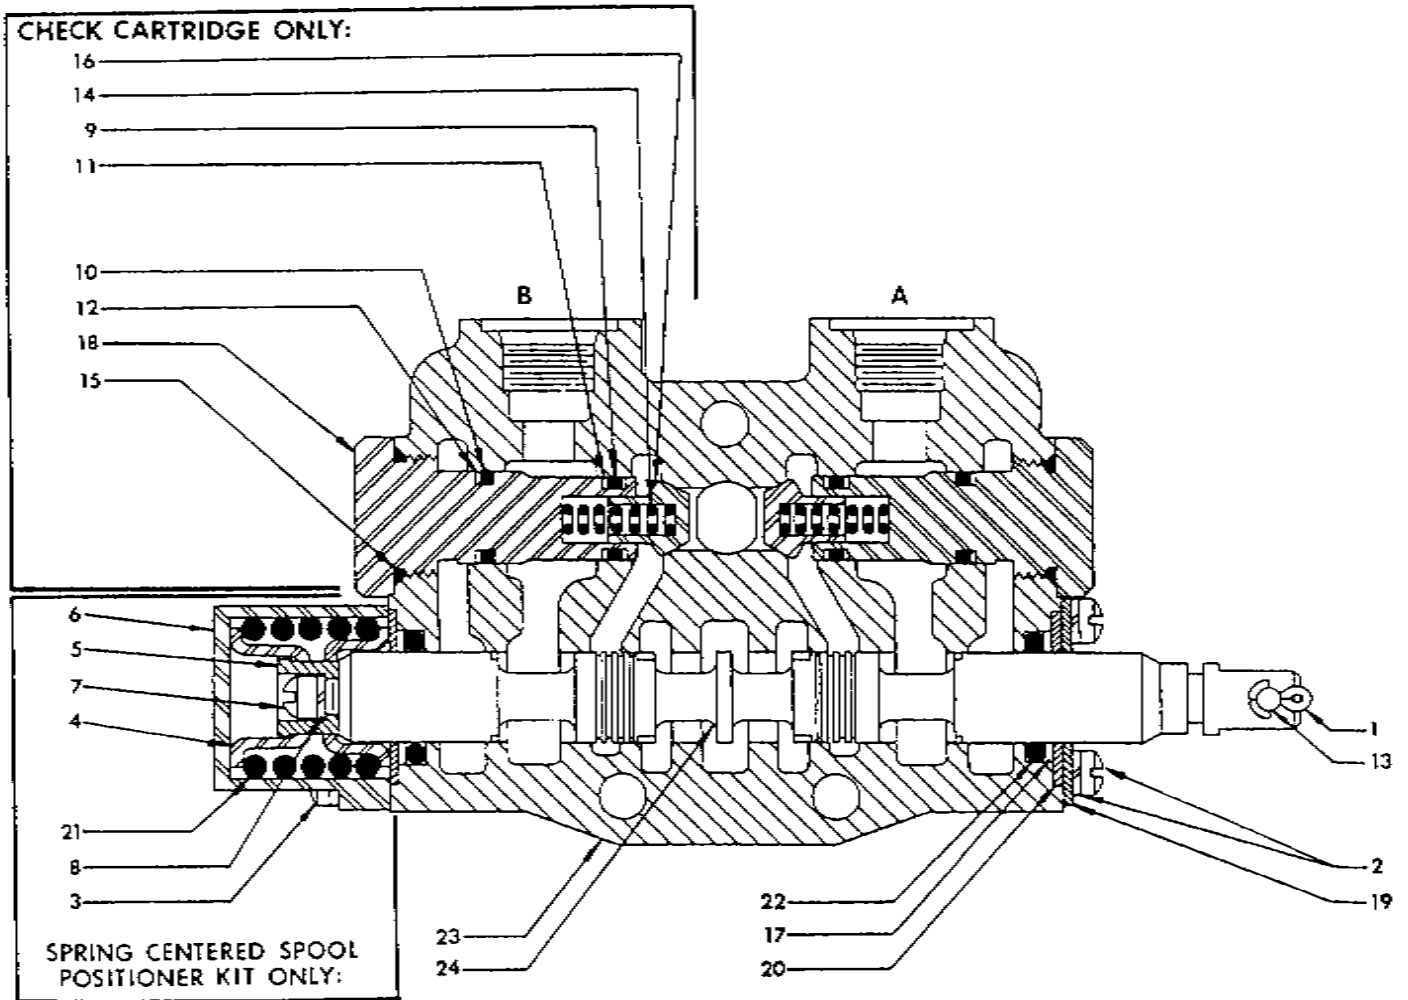

# CONTROL VALVE SECTION

## Typical Section for Stabilizer Circuits

Ref. No.	Part No.	Qty.	Description	Part No.	Qty.	Description
1	8554	1	Handle cotter pin, 3/32 x 3/4	10156	1	Control valve section - Stabilizer
2	*	2	Machine screw & lockwasher			circuits consisting of above listed parts.
3	***	2	Bonnet screw	10315	1	Control valve section seal kit -
4	***	2	Stop collar			Stabilizer circuits, consisting of:
5	***	1	Spool collar			(2) #22, (2) #9, (2) #10, (4) #11,
6	***	1	Bonnet			(2) #12, (2) #15, (2) pressure section seal.
7	***	1	Spool assembly screw			and (2) exhaust section seal.
8	***	1	Spool asmy. screw lockwasher	10316	1	Spool seal kit, consisting of: (2) #22 & (2) #17.
9	**	2	Check plug O-ring seal (inner)	10305	2	Check cartridge, as shown.
10	**	2	Check plug O-ring seal (outer)	10313	2	Check cartridge seal kit, consisting of:
11	**	4	Back-up washer (inner)			(1) #9, (1) #10, (2) #11, (1) #12, and (2) #15.
12	**	2	Back-up washer (outer)	10107	1	Spring centered spool positioner kit, as shown.
13	13436	1	Handle clevis pin, 1/4 dia. x 7/8			
14	*	2	Lift check spring			
15	**	2	Lift check spring O-ring seal			
16	*	2	Lift check poppet			
17	**	2	Back-up washer			
18	*	2	Lift check plug			
19	10321	1	Seal plate retainer			
20	10322	2	Seal retainer			
21	***	1	Centering spring			
22	**	2	Spool O-ring seal			
23	*	1	Center section housing			
24	*	1	Four-way spool			


\* Not available as a separate repair part, order complete section or cartridge.

\*\* Not available as a separate repair part, order seal kit.

\*\*\* Not available as a separate repair part, order spool positioner kit as shown.

# CONTROL VALVE SECTION

Typical Section for Swing Circuit

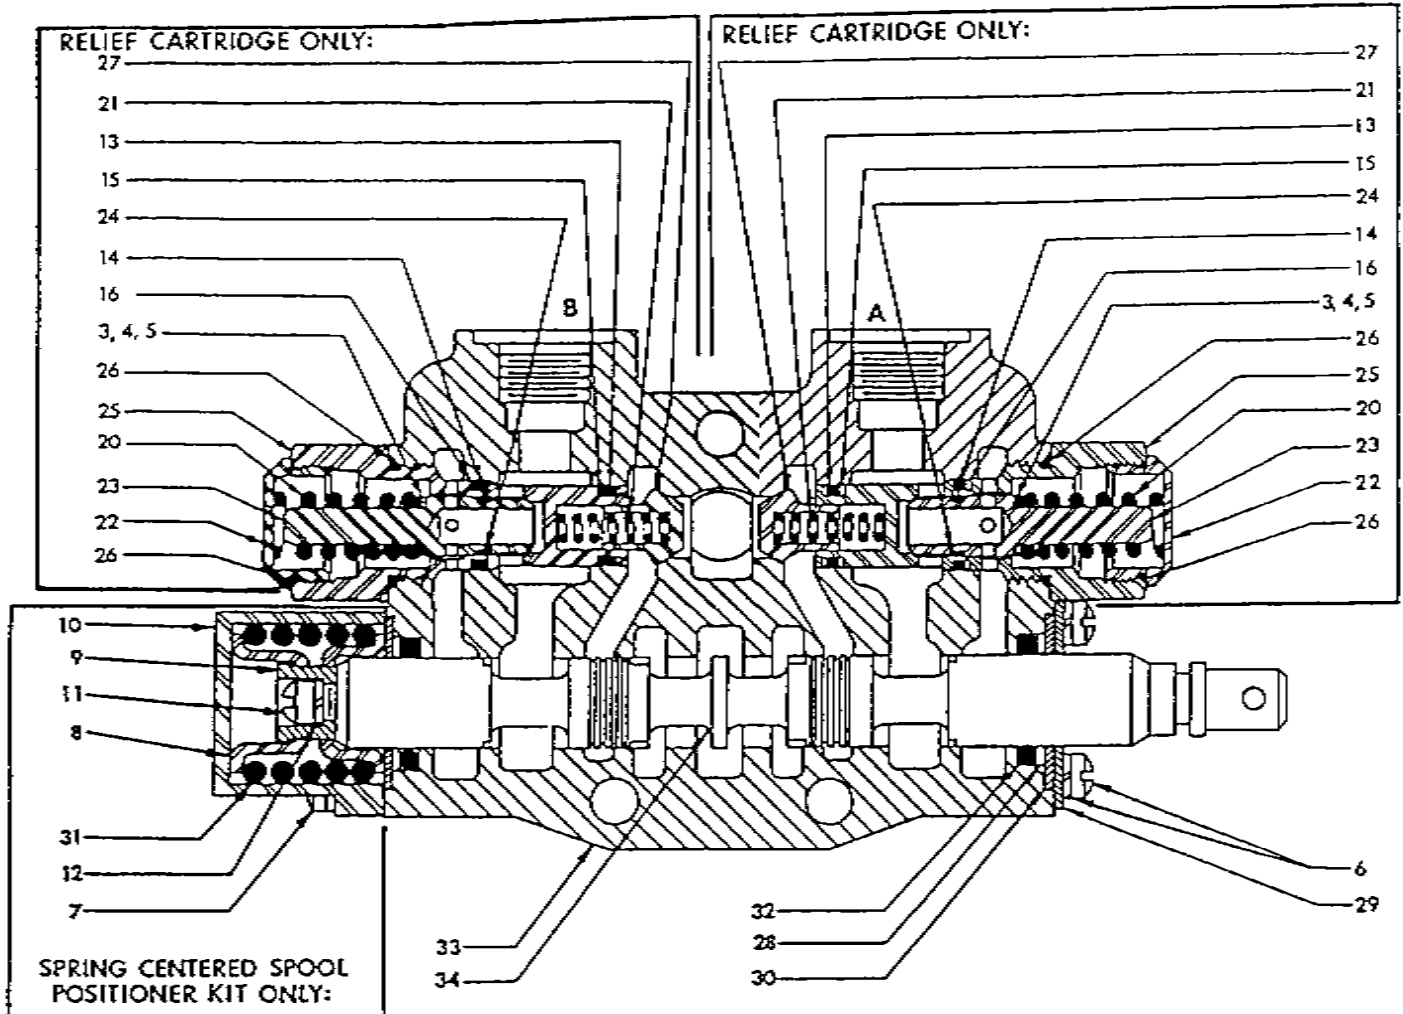

# CONTROL VALVE SECTION

## Typical Section for Swing Circuit

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	*	1	7/16" Steel ball	20	*	1	Spring (2001-3000 PSI crack)
3,4,5	*	A/R	Shim (.010", .020", .040" thick)	21	*	2	Check spring
6	*	2	Machine screw & lockwasher	22	*	1	Relief cap
7	***	2	Bonnet screw	23	**	1	Relief poppet
8	***	2	Stop collar	24	**	1	Piston ring
9	***	1	Spool collar	25	*	1	Relief body
10	***	1	Bonnet	26	**	2	O-Ring seal
11	***	1	Spool asmy. screw	27	*	2	Steel check
12	***	1	Spool asmy. screw lockwasher	28	**	2	Back-up washer
13	**	2	O-Ring seal (inner)	29	10321	1	Seal plate retainer
14	**	2	O-Ring seal (outer)	30	10322	2	Seal retainer
15	**	4	Back-up washer (inner)	31	***	1	Centering spring
16	**	2	Back-up washer (outer)	32	**	2	Spool O-Ring seal
17	*	1	Anti-cavitation check body	33	*	1	Center section housing
18	*	1	Check ball retainer	34	*	1	Four-way spool

Part No.	Qty.	Description
23085	1	Control Valve Section - Swing Circuit, consisting of above listed parts.
10315	1	Control Valve Section Seal Kit - Swing Circuit, consisting of: (2) #32, (2) #13, (2) #14, (4) #15, (2) #16, (2) #26, (2) pressure section seal, and (2) exhaust section seal.
10316	1	Spool Seal Kit, consisting of: (2) #32 and (2) #28.
10303	2	Relief Cartridge (2500 PSI) as shown.
10313	2	Relief Cartridge Seal Kit, consisting of: (1) #13, (1) #14, (2) #15, (1) #16, and (2) #26.
10177	2	Poppet Seal Kit, consisting of: (1) #23 and (1) #24.
10312	2	Restrictor - .074"
10107	1	Spring Centered Spool Positioner Kit, as shown.

\* Not available as a separate repair part, order complete section or cartridge.

\*\* Not available as a separate repair part, order seal kit.

\*\*\* Not available as a separate repair part, order spool positioner kit.



**be careful.....  
avoid accidents**